



51211310R



NLM 05267118 9

NATIONAL LIBRARY OF MEDICINE

SURGEON GENERAL'S OFFICE	
LIBRARY.	
Section -----	
No. 113, W. D. S. G. O.	No. <u>255952</u>
3-513	











# CROWN AND BRIDGE-WORK

FOR STUDENTS AND PRACTITIONERS

BY

FREDERIC A. PEESO, D.D.S.

DIRECTOR OF THE DENTAL GRADUATE SCHOOL OF COLUMBIA UNIVERSITY, NEW YORK

SECOND EDITION, THOROUGHLY REVISED

Illustrated with 731 Engravings



LEA & FEBIGER  
PHILADELPHIA AND NEW YORK

1924




WU  
515  
P375 c  
1924

*F. W. 2857 3/24/24*

COPYRIGHT  
LEA & FEBIGER  
1924

PRINTED IN U. S. A.

MAY 14 '24 ✓ 

©C1A792443 -

TO

MY WIFE

WHO HAS SO FAITHFULLY AIDED IN ITS PREPARATION

THIS EDITION

IS

AFFECTIONATELY DEDICATED



## PREFACE TO THE SECOND EDITION.

FROM the early absorption of a large output of the first edition it has afforded the author satisfaction to infer that this book has proven useful to many students and practitioners of dentistry.

In presenting this second edition it has been the author's endeavor to include all new material that reflects the latest established advances in the art of Crown and Bridge-work. To this end and to insure greater clarity, that most important factor from the student's point of view, it has been necessary to make many changes throughout the text, and certain paragraphs and sections have been re-arranged and rewritten. Special reference might be made to the sections dealing with Pulp Canals and Roots; the chapter on Crowns; and the two following on Bridge-work. An important addition will be found in the new chapter on Soldered Saddle Bridges with all Porcelain Crowns.

Crown and Bridge-work is a subject wherein illustrations bear quite as much importance in teaching value as the text and this feature of the work has received much thought and most thorough revision, resulting in the incorporation of 101 new figures and the elimination of those in the first edition that progress in the science has rendered less valuable.

To secure the needed space to properly present the subject in the light of our latest advances and at the same time retain the convenient size of the preceding edition, the short chapter on Radiography has been omitted. Of late years Radiography has become so well known and its use in diagnosis so universal that the reader is probably familiar with the brief description which would be possible in this work. For those who wish to pursue this interesting subject of Radiography in detail there are works on the market devoted to it alone.

The author wishes to again express his appreciation for the kind counsel and assistance of those in the profession so generously extended through the work from the beginning. And finally to the students and dentists who by their kind reception of the first have opened the way for this, the second edition. If the work continues to be helpful to the graduate and to those who are but beginning, the hope and purpose of the author will have been gratified.

F. A. P.

NEW YORK, 1924.





## PREFACE TO THE FIRST EDITION.

---

THE technic of Crown and Bridge-work has assumed far more importance since dentists and physicians have realized the close relation of oral cleanliness to the patient's physical well-being. To secure a full measure of stability with promise of long service, with the restoration of function in mastication and speech, was once considered the aim and end of successful Crown and Bridge-work.

Though all careful dentists appreciate the importance of accurate workmanship in attaining these desirable results, and that these prosthetic appliances should be so designed as to facilitate cleanliness, the announcement that some cases of Crown and Bridge-work which had fulfilled all mechanical requirements had, nevertheless, proved a serious menace to the health of the patient, came as a rude shock to the dental profession.

Errors in judgment or workmanship in repairing injuries to the natural organs, or in treating their many pathological conditions, are usually local, and are readily seen. Recently, attention has been directed to the possibility of serious, even fatal, pathological lesions arising from unseen and unrecognized conditions developed under Crown and Bridge constructions which had been worn with comfort and satisfaction, and apparently were well designed and well made. That they were the cause of the trouble in the unfortunate cases reported was reached only by a process of excluding other probable causes. The proof was furnished by the conditions revealed on their removal and the rapid and complete recovery which followed.

This has prompted the writer to give special attention to this aspect of the subject. The trouble justly complained of is not inherent in Crown and Bridge-work construction itself—it is due entirely to errors of judgment in the selection or preparation of supports or abutments, and avoidable errors in designing and constructing the appliances.

The writer desires to enforce the most exacting care in all preparatory procedures to ensure a healthy condition of the supports and abutments, and thoroughness in the mechanical preparation for all attachments. If these are accurately fitted, and are strong enough for the work demanded of them, and the requirements of occlusion are fully met, he feels assured that the appliances will prove aseptic, durable, and efficient.

In formulating and presenting to the profession the methods found satisfactory in practice in the preparation for and construction of Crown and Bridge-work, he has borne in mind the paramount importance of a well-considered aseptic technic in addition to that required to meet the mechanical problems involved.

A long experience in private practice and in the teaching of this dental specialty has enabled him to select and present methods readily acquired, that produce results quickly and with certainty, if carefully followed. He would add, however, the caution that it requires long and patient practice to thoroughly master the details of operations which, although common to the dental workroom, when applied to Crown and Bridge-work are more exacting, and call for a more skilful use of tools and appliances than when used in constructing ordinary plate work.

The author cannot conclude without expressing his appreciation of the assistance given by Dr. Wm. H. Trueman, and especially Dr. Edward C. Kirk and Dr. A. C. Eglin, whose inspiration, constant interest and encouragement for several years past have been largely responsible for the production of this volume.

He also wishes to express his gratitude to Mr. Christian Febiger, whose patience, courtesy and many kindnesses have done so much to lighten the work.

F. A. P.

NEW YORK, 1916.

# CONTENTS.

---

## CHAPTER I.

ARTIFICIAL CROWNS . . . . .	23
-----------------------------	----

## CHAPTER II.

PATHOLOGICAL CONDITIONS IN THEIR RELATION TO CROWN AND BRIDGE- WORK . . . . .	28
--	----

## CHAPTER III.

CROWN AND BRIDGE-WORK IN RELATION TO THE VITALITY OF THE PULPS IN SUPPORTING TEETH . . . . .	40
---	----

## CHAPTER IV.

THE PULP CANALS . . . . .	53
---------------------------	----

## CHAPTER V.

RELATIVE STRENGTH OF THE TEETH AS SUPPORTS FOR BRIDGE-WORK . .	81
--	----

## CHAPTER VI.

TYPICAL SHAPES OF THE TEETH. MECHANICAL PREPARATION OF THE TEETH AND ROOTS FOR THE RECEPTION OF THE BANDS . . . . .	88
--	----

## CHAPTER VII.

IMPRESSIONS AND MODELS . . . . .	130
----------------------------------	-----

## CHAPTER VIII.

BUILDING UP BROKEN-DOWN ROOTS WITH AMALGAM PREPARATORY TO CROWNING . . . . .	154
---	-----

## CHAPTER IX.

PROSTHESIS . . . . .	170
----------------------	-----

## CHAPTER X.

THE MAKING OF THE CROWNS . . . . .	198
------------------------------------	-----

## CHAPTER XI.

BRIDGE-WORK . . . . .	222
-----------------------	-----

## CHAPTER XII.

REMOVABLE BRIDGE-WORK . . . . .	250
---------------------------------	-----

## CHAPTER XIII.

TUBES AND SPLIT PINS . . . . .	324
--------------------------------	-----

## CHAPTER XIV.

SOLDERED SADDLE BRIDGES WITH ALL PORCELAIN CROWNS . . . . .	348
---	-----

## CHAPTER XV.

METHODS OF USING PORCELAIN CROWNS WITH CAST BASES IN REMOV- ABLE BRIDGE-WORK. FACINGS WITH GOLD OCCLUSAL SURFACE . . .	377
---	-----

## CHAPTER XVI.

RETAINING MEDIA . . . . .	400
---------------------------	-----

## CHAPTER XVII.

REPAIRING CROWNS AND REPLACING BROKEN FACINGS . . . . .	407
---	-----

## CHAPTER XVIII.

DENTAL METALLURGY . . . . .	418
-----------------------------	-----

# CROWN AND BRIDGE-WORK.

---

## INTRODUCTION.

ALTHOUGH crown and bridge-work has come down to us from remote antiquity, it is only within the last three or four decades that it has assumed an important place in dental practice. In the beginning of this revival, most of the work was done in a haphazard way, with but little or no understanding of the principles involved, and with but little appreciation of its requirements, its possibilities, or its dangers.

The sole idea of the dental practitioner was to give the patient something better than the partial plates then in use, something resembling more closely the lost natural teeth in firmness and in ability to perform their normal functions.

Crude as crown and bridge-work then was, it was sufficiently successful to be appreciated by the community, and to be considered by the profession as promising greater usefulness than the appliances it supplanted. Patients demanded it, and this prompted an earnest effort on the part of many in the profession to discover and remedy its shortcomings. As the result of this, within a few years crown and bridge-work has earned recognition as a specialty in dental science.

As often happens when new things are introduced, or old things are so revolutionized that they enter, quickly, upon a higher stage of development, the limitations of crown and bridge-work were but slowly recognized. The importance of firm and healthy supports, due consideration of the mechanical principles in designing and construction, careful attention to occlusion, and work that was thoroughly aseptic, received but little thought during the early days of crown and bridge-work. As a result the work was usually short-lived, was not cleanly, and the appliance was not always comfortable or effective.

Looking back to this period in the development of crown and bridge-work, viewing the monstrosities inserted by thoughtless

enthusiasts as dental bridges, or reading the records of disappointment, failures and disasters, one wonders how the art survived.

That it did survive is due to the unceasing efforts of a few earnest workers who saw its promising future, and by careful study, step by step, traced failures to their source, and unraveled the principles involved in designing and constructing successful, lasting and aseptic, crown and bridge-work. Though the ideal has not been reached, crown and bridge-work has been placed upon a more secure foundation, and a most promising future is unfolded as the result of these labors.

That the crown and bridge-work of the early days was faulty was not due entirely to poor workmanship. Many of the early practitioners were especially skilful workmen and did excellent work. The trouble lay in the science not being sufficiently developed to enable them to work understandingly, especially in the preparatory work upon which so much depends. Treatment of pathological conditions was not understood and appreciated as it is now. Remedial agents and procedures, now considered indispensable, were then unknown; instruments, appliances and precautionary measures, which have aided so much to make this work effective, were then undreamed of.

Recognition of the underlying principles or factors which make for or against successful bridge-work came slowly. Prominent among these was root and abutment preparation. In a majority of the early cases, we might perhaps say in all, there was no attempt made to prepare the mouth, scientifically, for the reception of the work. The importance of pulp canal cleansing, thorough treatment of pathological conditions and effective pulp-canal filling was appreciated by a few only, and these were hampered by defective instruments and inability to properly verify the accuracy of their work. This handicap has since been removed by the introduction of delicate pulp-canal instruments and the marvelous roentgen-ray.

Abutment trimming, so important to the proper fitting of abutment crowns was often ignored; indeed, until the introduction of properly shaped abrasive wheels and disks, it was practically impossible. The introduction of these useful instruments was a step only, for until it was demonstrated that at times a devitalized tooth made as good, or even a better abutment than a vital tooth, the intense pain attending abutment trimming too frequently halted the operation before it was complete. The discovery of pressure anesthesia,



and other anesthetic processes, making possible the painless devitalizing of a pulp without injury to the tissues around the apex of the tooth, was the last step that made possible scientific abutment trimming, and the construction of an aseptic abutment crown.

Still another fundamental to crown and bridge-work success was brought to the fore when a few scientifically inclined earnest workers, in an effort to make more effective artificial dentures, began a careful study of the various movements of the mandible during mastication. The object of these efforts was to devise a contrivance to accurately reproduce these movements so as to enable the dental workman, when mounting artificial teeth, to secure a more nearly normal occlusion.

Heretofore, if the upper and lower teeth articulated with each other when the mandible was at rest, the work was deemed satisfactory, notwithstanding that the dentures were very often quite ineffective in mastication, owing to the fact that all the teeth met only when the mandible was in the rest position. At other times but few teeth were in contact. The immediate result of these investigations was a better understanding of the mechanism of mastication, and a higher appreciation of the importance of normal occlusion that has since reached all departments of our profession. By occlusion is understood a rubbing or grinding surface contact of all the masticating surfaces of the teeth, during all the movements of the mandible, as is always the case with the natural teeth in their normal position. Articulation is a mere fitting together in one position only.

This understanding of occlusion brought to the fore an imperfectly recognized cause of failure of many dental bridges. With the mouth closed, the teeth on these bridges fitted the opposing teeth accurately, but during mastication they touched at a few points only. Except for this fact these bridges might have given many years of excellent service, but owing to defective occlusion the force of mastication was concentrated upon a few teeth, which resulted in literally pounding the structure to pieces in a short time. In other cases the stress set up a destructive irritation in one or more of the supporting abutments, which just as surely resulted in the bridge failing.

We now know that it is impossible for any one tooth to be unduly strained during mastication, or other movements of the mandible if the occlusion of the denture has been properly adjusted, be it a plate, a crown, or a bridge.

Crowning of vital teeth proved to be the cause of numerous failures, although at one time a vital abutment was deemed more reliable than one devitalized. After a few years many cases, where vital abutments were used, developed dento-alveolar abscesses, the pulp in the meantime having died as the result of irritation, perhaps from denuding of its enamel when preparing the crown for an abutment cap, or perhaps from irritation due to the cement. In other cases an overstimulation of the pulp produced secondary dentin deposits, pulp stones, and other kindred troubles.

Until within recent years but little thought has been given to the stress of mastication, the force developed by the muscles moving the mandible, and the force required to properly perform the function of mastication. Until this information was available, designing a bridge to withstand this force year after year was mere guess-work. Too often the stress of mastication and the strength of the bridge or its abutments was grossly underestimated, and failures thereby invited. We now know that ample strength must be provided, and we know also, approximately, the relative strength or carrying capacity of the different teeth when used as abutments. This is another forward step, and an important one.

There is still another point, recently impressively brought to the fore, and a very important point it is. A very serious charge has been brought against crown and bridge-work by our medical brethren. They claim that as generally designed and constructed, crown and bridge-work is often a serious menace to the patient's health. That many serious ailments have been caused and maintained by septic conditions associated with crown and bridge-work often worn by the patient with great comfort and satisfaction. The proof presented is so strong and convincing as to challenge investigation, and prompts the question, Why?

This brief résumé of the progressive development of crown and bridge-work will no doubt have suggested to the thoughtful reader the answer to this important question, and may, perhaps, have suggested another. Why was not this discovered earlier, when the art was crude, and the work in all its phases more imperfectly done?

Medical science has made a marvelous advance during recent years in tracing pathological lesions to their causes. Many disorders that were formerly treated with indifferent success, by methods suggested by the symptoms developed, are now recognized as pathological conditions due to remote causes, causes at times



located far from the seat of trouble, and seemingly to the unscientific observer, having no connection whatever with it. The cause recognized and removed, the disease is cured.

This has been and still is the case in many instances to wearers of crown and bridge-work. They have suffered, in some cases for years, with but little relief until the medical attendant was led to suspect that septic infection was the real cause. A careful, step-by-step diagnosis by exclusion has perhaps located this in a highly priced piece of bridge-work, a masterpiece of prosthetic dentistry. Its removal has disclosed a horrible condition of affairs. A judicious use of the forceps and oral prophylaxis, followed by a rapid cure, proved the diagnosis correct.

In order to purge crown and bridge-work of any possible stigma now resting upon it, our profession must make practical use of the knowledge gained by experience, and that furnished by the research and observations of our medical brethren. No half-way measures will suffice. It must be made aseptic from the foundations up. All pathological conditions must be thoroughly and radically treated, and the treatment continued until a cure is effected and all sources of septic invasion removed.

In comparing the general output of crown and bridge-work as we see it today with that of the past, there is not that marked difference in its character we have a right to expect, considering the tremendous advances which have been made in our knowledge of the physiology and pathology of the dental pulp, and the technic of root and pulp-canal treatment. This is really where the trouble is. This knowledge has not been utilized as it should have been in making crown and bridge-work better and safer.

Modern methods of treating such pathological conditions as have been responsible for the undoing of crown and bridge-work are radical, and radically different from those which have prevailed in the past. Pulp and pulp-canal treatment as it should be done when preparing for crown and bridge-work is tedious, it takes time, it requires patience and exacting care to make sure that it is well done. The mechanical preparation of roots and abutment teeth, as we now know they must be prepared, is very different from the slipshod methods of the past. It is regrettable that these matters have not been generally realized. Had this specialty correspondingly developed with the development of our knowledge of the various technical procedures underlying the scientific construction of bridge-work, we should have so improved the character and

efficiency of the average output of bridge-work, as to have made it beyond all comparison better than the bridge-work of the past.

In order that these results may yet be accomplished by the means already at our command, it is necessary that we give earnest attention to, not only the underlying principles upon which all good bridge-work is founded, but also sympathetic and careful attention to the infinite number of minor as well as major details, both technical and artistic, which are collectively necessary to the attainment of excellence in this as in all things which are worth doing well.

## CHAPTER I.

### ARTIFICIAL CROWNS.

WHEN the natural crown of a tooth has become broken down or decayed to such an extent that it is impracticable to restore it by means of fillings or inlays it becomes necessary to resort to some other means of restoration to enable it to perform its normal function. This is done by means of an artificial crown.

There are several types of crowns which are used, or have been used for this purpose, differing from each other chiefly in the manner of their retention, the first type being retained in position by means of a pin or post inserted into the enlarged pulp canal. The second is held in place by means of a collar or band which encircles the stump of the tooth. The third is a combination of these two, having both a band and post to give the necessary support.

The first of these is used almost exclusively in the teeth anterior to the molars. The second is confined almost wholly to the molars but at times is used as far forward as the bicuspsids and under certain conditions for the anterior teeth. The third is used principally in the anterior teeth, but is also at times indicated in the posterior teeth.

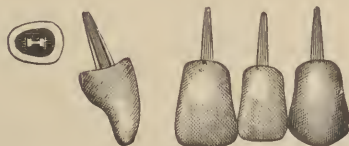


FIG. 1

There are two classes of this first type of crown; one being that in which the post is an integral part of the crown itself, being baked into the porcelain or soldered to it. An example of the first mentioned in this class is the old Logan crown having a flattened and grooved platinum post baked into its base (Fig. 1). This crown was used extensively for a great many years but at the present time it is practically obsolete. The second consisted of a floor with a post extending through it, to which a backed facing was soldered (Fig. 2). This was commonly known as the pin and plate crown. The second class is one in which the crown and post are separate, there

being an opening in the base of the crown extending entirely, or only part way through it in which the post is cemented or otherwise fixed (Figs. 3 and 4).

Examples of this class may be found in the Bonwill crowns, Davis crowns, Justi crowns, and the English tube teeth.

These crowns are indicated chiefly for temporary work, where a tooth has been broken and must be quickly replaced while the permanent crown is being made.

There is little choice between the different crowns of these types. That which best meets the requirements of a given case in mould, shade and texture may be chosen.



FIG. 2



FIG. 3



FIG. 4

There are also two classes of the second type of crown. The first is used exclusively in the back of the mouth, being made entirely of metal and is represented by the gold shell crown. The second class is a combination of both metal and porcelain, having a band for retention, but the exposed portions, the face or occlusal surfaces being covered with veneers or porcelain. An example of this class may be seen in the jacket crown.

In the third type we have the so-called Richmond crown, with band, floor and post to which a backed facing is soldered and also the same base with an all porcelain crown attached.

These latter types may be used as single crowns, or as abutment crowns, or dummies in bridge-work.

The accompanying illustrations (pages 25 and 26) are accurate reproductions from *Traité de la Partie Mécanique de l'art du Chirurgien-Dentiste*, par C. F. Delabarre, published in 1820. They give a very good idea of the crown work which was done at that time.

We are enabled to reproduce these figures through the kindness of Dr. E. J. Ranhofer, of New York.



FIG. 5

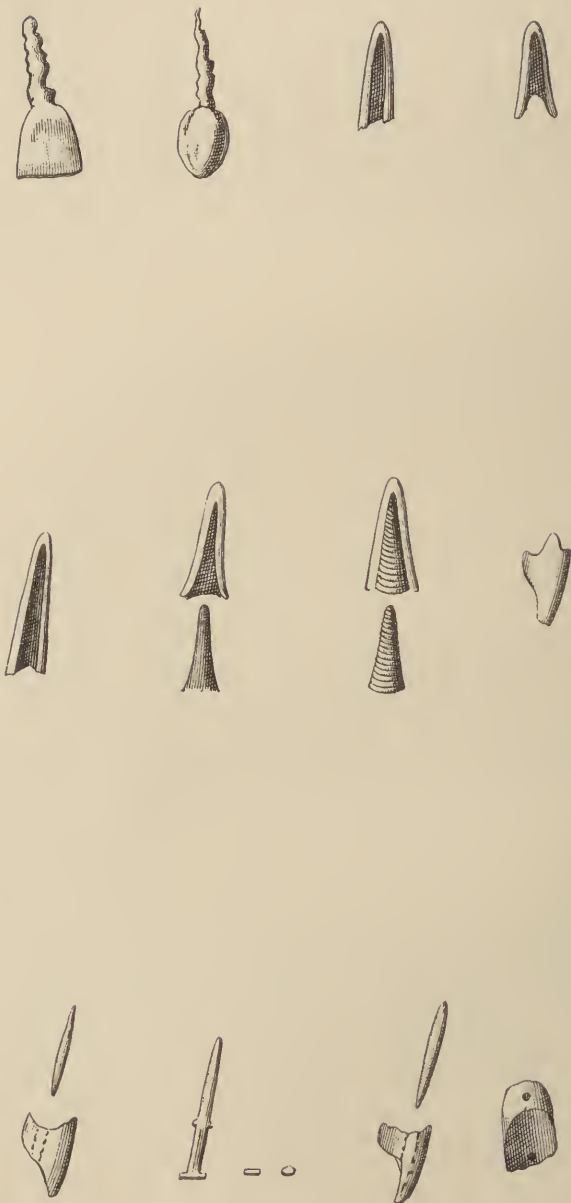


FIG. 6

## ESSENTIALS TO SATISFACTORY BRIDGE-WORK

**General Considerations.**—When consulted regarding the advisability of inserting a piece of bridge-work, there are three fundamental factors to be considered: the number, position, and condition, of teeth or roots available as abutments. The whole story of requirements for this work may be summed up in these three words. If the available teeth or roots are lacking in number, or are unsatisfactory as to position or condition, an essential to success is wanting, and the work is contraindicated.

There are certain mechanical and scientific principles governing this work and these same principles are involved whether we are placing a bridge in the mouth or across a river. There must be sufficient number of abutments to carry the weight which will be imposed upon it, and their position and condition must be such as to give stability to the structure, and to withstand any strain to which it may be subjected, otherwise it will collapse.

**Partial Plates vs. Bridge-work.**—In a very large percentage, probably in the majority of mouths where partial plates are now worn, bridge-work could be used to much better advantage, and would be far more serviceable than are the plates. Partial plates are always decidedly objectionable and are to be avoided if possible. The plates, almost invariably injure the soft tissues and the adjoining teeth, the pressure gradually forcing the gum away from the necks of the teeth, which are abraded by the constant movement of the plate, and in many instances this results in their loss. This is especially true where the plate is of small dimensions, carrying but a few teeth.

In every case, or at least all but the simplest, it is best to take plaster impressions of the mouth and make accurately articulated models, trimmed so that they may be examined from every point of view, both from the inside as well as the outside. These models should be studied carefully before deciding on any definite line of operation.

The number, position, and general condition of the teeth being satisfactory, the success of a crown, or of a bridge, depends entirely upon the preparation of the teeth, or roots, which are to serve as abutments. By this preparation is meant not simply the mechanical trimming of the teeth or roots for the reception of the bands or posts, but it begins at the beginning with the treatment of any pathological conditions which may be present, the devitalizing and removal of the pulp, and the sterilizing and filling of the canals. This will be considered in the succeeding chapter.



## CHAPTER II.

### PATHOLOGICAL CONDITIONS IN THEIR RELATION TO CROWN AND BRIDGE-WORK.

It is not the intention of the writer to consider the treatment of pathological conditions except as they are directly related to crown and bridge-work. Inasmuch, however, as a healthy condition of the teeth and roots utilized as supports for crowns and bridges is a fundamental to success, pathological conditions of the teeth and their treatment, is of the utmost importance to crown and bridge-workers.

Each factor making for success or failure must be carefully considered, and nothing left to chance. Loose teeth need not necessarily preclude the idea of inserting a bridge; they should be carefully studied in order to determine the cause, and whether or not they can, by thorough treatment, be brought to a normal, healthy condition. If this is impossible, then, of course, unless other teeth are available, a crown or a bridge is not to be thought of.

**Loose Teeth.**—The loosening of the teeth may be traced to any one of many conditions, but the most prolific cause of this trouble is malocclusion or want of occlusion. It many times happens that where even a single tooth has been extracted from either the upper or lower series, the remaining teeth shift their positions so that in time the entire occlusion of all of the teeth is broken up and there is a complete malocclusion of the whole mouth. Where this has happened, pyorrhea will make its appearance and no cure can be effected until the occlusion has been perfectly corrected, when in the majority of cases, the trouble will entirely disappear. The chances are very great that this malocclusion is the true cause of pyorrhea.

When from any cause it has been found necessary to remove a tooth that may affect the occlusion, by far the better way to treat such a case is to immediately make some appliance if only temporary, which will restore the lost member, thus preventing the shifting of the remaining teeth, and the disastrous results which might sometimes follow.



Kidney troubles may be reflected in the mouth. In the case of a diabetic patient even where the occlusion is not at fault, the teeth may become loose, the gums livid, bleeding easily and the whole mouth and teeth becoming sore and painful, the trouble being aggravated with the increase of sugar in the blood. Such a case should be referred to the physician, with no thought of dental work until a cure has been effected.

**Pyorrheal Conditions.**—Conditions are frequently met with in the oral cavity resembling pyorrhea, where the occlusion is perfect, but there is really no trace of this disease. They may be caused by some local irritation, such as ligatures forgotten and left around a tooth, below the gum margin, causing irritation resulting in infection, and a flow of pus. The same effect may be brought about by a splinter, as from a toothpick, or some such like irritation. These cases may, at first sight, be mistaken for pyorrhea. The removal of the cause usually effects a cure.

**Putrescent Pulp Canals.**—In treating a putrescent pulp canal the first step is to cleanse it mechanically, as thoroughly as possible. The greatest care must be exercised in doing this so as not to force any of the putrescent matter or gas through the apical foramen. The instruments best suited for this purpose are the Donaldson canal cleansers or broaches of this type. These instruments are barbed in such a manner that the barbs follow around the shaft in the same manner as does the thread on a right-hand screw, so that by rotating to the right, the instrument is drawn into the canal without the necessity of using the slightest force.

The broach is dipped in carbolic acid or other strong antiseptic, the point placed in the canal and turned slowly to the right. As it is carried into the canal it is frequently withdrawn and cleansed of the débris adhering to it, until the vicious matter is entirely removed. By working in this manner there is little danger of carrying any of the putrescent mass through the end of the root. It is of the greatest importance that not the slightest force be used on the instrument. After the bulk of the softened mass is removed, the sides of the canal are scraped with the same instrument, until it is fairly well cleansed.

Sodium and potassium is then used, being carried into the canal with a fine instrument, burning out any of the disintegrated pulp tissue which remains in the root. This should be done thoroughly, and a little of the sodium and potassium may be left in the canal until a subsequent sitting. When the patient returns, the canal

is cleansed and dried and a dry dressing of tricresol and formalin used. The dressing is prepared by twisting a wisp of cotton on a smooth broach, dipping it in the solution and squeezing it dry between the folds of a napkin, moving it to different places in the napkin until the excess is all taken up. It is then introduced into the canal and sealed in with gutta percha. This can be repeated at intervals of a few days until the canal is ready to be filled. This is determined by the absence of all pain or tenderness and by the dressings coming out dry, white and sweet. If there has been any disturbance in the apical region, the radiograph should show a clearing up of tissues at that point.

The canal is then washed out with a solution of bichloride of mercury and peroxide of hydrogen, after which it is thoroughly dried with alcohol and filled. Formalin may also be used in sterilizing the canals.

**Sterilizing a Pulp Canal with Formalin.**—In sterilizing a pulp canal with formalin, the following method will prove effective. After the root has been as thoroughly cleansed mechanically as is possible under the existing conditions, it is dried with alcohol and the canal wiped out with a strong solution of formalin, running from 10 to 40 per cent the full strength of the solution, using a wisp of cotton twisted around a broach as a carrier. It is then dried with hot air or a heated root-drier, thereby driving the fumes of the formalin into the tooth structure. This operation is repeated a number of times until it is certain that the root has been thoroughly sterilized, after which it may be filled.

Where there has been a slight irritation in the apical region, it is a good plan to enlarge the foramen very slightly before treating, and a dry dressing of tricresol and formalin may be sealed in the canal and left for a day or two, to be repeated if necessary.

Where there has been an excessive and continued irritation, it is best to treat the case in a thorough manner, opening through the process to the apex, giving it the same treatment indeed, as in the case of a dento-alveolar abscess, and then filling the root at once.

When on opening into a tooth, if the pulp is dried up and in a mummified condition, the canal should be given the same treatment and care as though the pulp was putrescent.

The same treatment should be employed in the case of cotton filled roots which are sometimes met with, without regard to the condition they may seem to be in, foul or sweet. In a major-

ity of these cases the canals are in a putrid condition, and before being utilized they should be treated as advised for the canals having putrescent pulps.

### PULP INFECTION AND TREATMENT OF RESULTANT CONDITIONS.

There are many causes which may bring about the death of the pulp and unless this condition is recognized very early and properly treated, trouble of a more or less serious nature is liable to follow.

There are cases where the pulp has become devitalized and remained quiescent for a number of years, the patient being unaware that there is anything wrong with the tooth, but this is not of frequent occurrence; more often the trouble becomes manifest within a comparatively short time.

With the infection and decomposition of the pulp tissue, the danger begins. A minute portion of this putrescent matter, or a little of the gas generated by it, finding its way through the apical foramen will set up an irritation and inflammation; infection follows resulting in the formation of a dento-alveolar abscess. This condition up to within a few years was too often lightly considered, and an abscessed tooth was looked upon as of minor importance, when in reality it is a very grave condition and may cause serious pathological disturbances, and not infrequently death has followed from septicemia caused by resorption of pus.

**Dento-alveolar Abscess.**—This is one of the troubles with which the crown and bridge specialist is very frequently confronted. As a general thing, it is also one which is not difficult to cure.

In this as in every step in crown and bridge-work, thoroughness is necessary to success, and unless one is willing to give the time and attention necessary to effect a cure, it is far better not to attempt its treatment.

With the formation of pus around the apex of the root, there is a destruction of tissue extending in all directions, thus forming an irregular cavity or sac into which the apex of the root extends (Fig. 7).

As the amount of pus increases, it will gradually force its way through the alveolar process and gum tissue, thus establishing a fistula.

If there is a cavity in the tooth through which the pus, after

passing through the canal, may be discharged into the mouth, there will be no external fistula; this is termed a blind abscess.

The treatment of an abscess which has no outlet for the pus excepting that through the root of the tooth, should never be undertaken. The extent to which the disintegration of tissue has attained depends largely on the age of the abscess or the period of time over which it has been running. Where this is great, the destruction of tissue is correspondingly greater and this destroyed tissue must be removed before a cure can be effected. Treatment through the root may relieve the trouble temporarily, but it is liable to recur at any time.

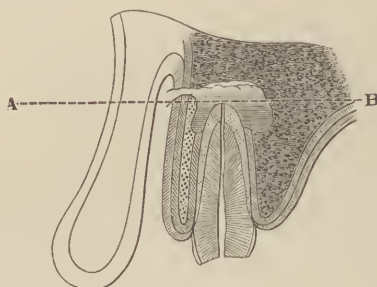


FIG. 7

In the case of an acute dento-alveolar abscess, where there is a fistula established, a cure can generally be effected quickly and easily. It is very rarely that it is necessary to give it more than one, or, at the most, two treatments, in order to effect a permanent cure, but in doing this, every step of the operation must be done thoroughly.

For many years the writer has had almost uninterrupted success in the treatment of this trouble by using the following method:

The canal is first cleansed as thoroughly as possible mechanically, using Donaldson's canal cleansers, or instruments of that type, and scraping the sides of the canal thoroughly so as to remove every particle of diseased tissue which can be reached.

It should then be ascertained beyond doubt that there is an open fistula, through which the remedies will readily flow, and this can be done by using distilled water or a mild antiseptic solution, after which the first agent used is hydrogen peroxide.

Objections have been strongly urged against the use of this agent, the claim being made that it will cause necrosis and sloughing, but during the experience of many years, the writer has not had a

single case where this has occurred. If the peroxide were forced into a closed sac under pressure, then serious trouble might ensue, but where there is a free vent, there seems to be practically, no danger from its use. If the operator objects to the hydrogen peroxide, a saline solution may be used in its stead, although it does not seem to be as effective.

**Treatment of Acute Dento-alveolar Abscess.**—In the treatment of acute dento-alveolar abscess it is necessary that suitable instrument for injecting the remedies be used. A rubber bulb syringe, with platinum point, known as an abscess syringe is most useful

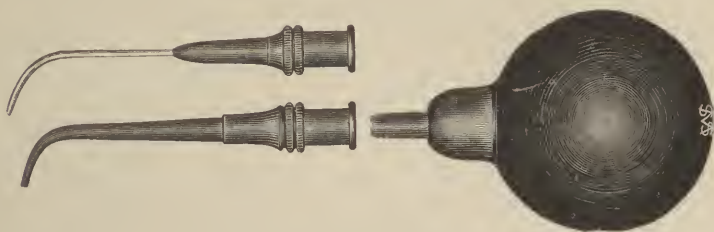


FIG. 8—Bulb syringe.

for this purpose (Fig. 8). The capacity of the bulb of this syringe is about one-quarter of an ounce.

In order to insure the remedy being forced through the canal and out through the fistula, it is necessary to use a packing, preferably of rubber. This is very easily made by forcing the needle through a piece of heavy separating rubber, of sufficient size to entirely cover the opening in the tooth or root, letting the end of the needle extend a little beyond this rubber packing, as in Fig. 9.



FIG. 9

The syringe is then filled, the point is introduced into the opening in the canal or tooth, and the rubber pressed tightly over the opening and around the needle with a pair of cotton-pliers. This will effectually prevent the fluid from escaping at this point, and will insure its reaching the place where it is needed.

The abscess is first washed out with sterile water so as to ascertain that there is a free vent, then the hydrogen peroxide or saline solution is forced very slowly through the root and out of the fistula, and this is continued as long as there is any effervescence. It is sometimes necessary to use a large amount of the solution before the pocket is entirely cleansed. At times 1 or 2 ounces or even



more may be required, but it should be continued until the solution comes through perfectly clear.

This solution is followed by the standard solution of aromatic sulphuric acid. This is used in its full strength as given in the United States Pharmacopœia and contains about 10 per cent by bulk, or 20 per cent by weight, of sulphuric acid.

The amount of the aromatic sulphuric acid used is from  $\frac{1}{4}$  to  $\frac{1}{2}$  of a syringe-ful, or from  $\frac{1}{16}$  to  $\frac{1}{8}$  of an ounce, or at times even more than this.

The point of the syringe is inserted into the canal and the rubber packing pressed tightly against the tooth, as with the first solution used, and the acid forced through very slowly. This helps to destroy any remaining diseased tissue and acts as a stimulant. The acid should be met, as it comes through the fistula with a syringe-ful of a saturated solution of bicarbonate of soda, so as to counteract, or neutralize, the action of the acid before it comes in contact with the teeth and the soft tissues of the mouth. The bicarbonate of soda should be used freely, as much as 3 or 4 syringe-fuls during the injection of the acid, and afterward the mouth should be rinsed freely with the same, but none of it should be carried into the root or pocket.

After the acid has been used, the root should be filled at once. If it is left open for any length of time, infection may recur, and it will be necessary to repeat the operation, as there is a serious risk of reinfection as long as the root remains open.

After treating an abscess in this manner and filling the root canal, it will generally require from ten days to two or even three weeks before the parts are finally healed. During this time there will be a discharge of blood and serum through the fistula, presenting the appearance of pus, but this is a perfectly natural condition, as there is a normal sloughing of the disintegrated tissues which must be expelled as the parts are healing.

At times when the edges of the wound are fresh, the fistula may close up at once, or within two or three days, but it will break out again, and this may be repeated several times; it will not heal finally until all of the sloughed tissue has entirely disappeared and healthy granulations have replaced it.

It is very rarely, in the case of an acute abscess, that it is necessary to repeat this treatment, but it should be remembered that the cure depends entirely upon the thoroughness with which the operation has been performed.

**Establishing a Fistula.**—If there is no external opening, and the abscess has been draining through the pulp canal of the tooth, it is necessary to establish a fistula. Occasionally, by sealing the opening through the tooth for a time, Nature will establish one with comparatively little discomfort to the patient, but if this cannot be done, it becomes necessary to make an opening through the gum and process.

A spear-pointed drill is best suited for this purpose; it should be of a large size, sharp, and perfectly sterilized.

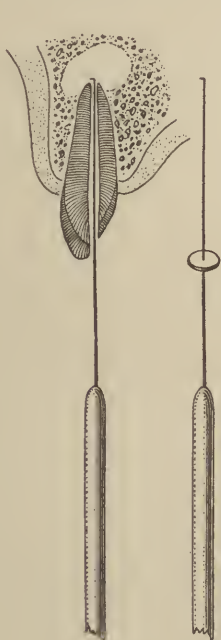


FIG. 10

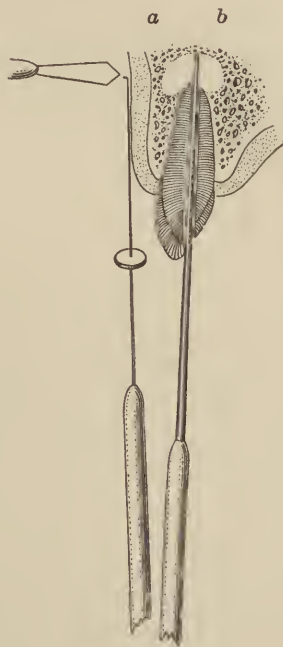


FIG. 11

**Locating the Apex of the Root.**—It is necessary to first locate the apex so as to know exactly where to drill. The foramen is slightly enlarged in order to ascertain the exact length of the tooth or root. This can be done with a small hooked broach, passing it through the canal and catching the hook over the end of the root. A small piece of rubber dam is pressed down over the broach to the incisal edge of the tooth or against the end of the root (Fig. 10). The broach is then removed. The position of the rubber indicates the exact distance from the end of the root or the incisal edge of the

tooth to the apex. A perfectly straight broach is then inserted, being of a larger size than the one used in measuring the length of the root, one that will wedge in the canal with the end passing through the foramen into the pocket, the handle extending beyond the incisal edge of the tooth, as in Fig. 11, *b*. By following the line of this broach the exact direction of the canal is indicated.

By placing the hooked broach over the gum and bringing the piece of rubber dam even with the incisal edge of the tooth, or with the face of the root, it will show exactly how far from the incisal edge to drill in order to strike the pocket or the end of the root (Fig. 11, *a*).

Using these two as a guide, and following the direction of the broach which is wedged into the root, the drill can be directed so as to reach the sac with certainty. This operation can be quickly and easily performed by using a general anesthetic, but it is very rarely that a general anesthetic is indicated, as the time required is so short that a local anesthetic, used hypodermically, will give satisfactory results.

**Painless Insertion of the Hypodermic Needle.**—With patients who are of a highly nervous temperament, or where the tissues are extremely sensitive, the pain caused by the insertion of the hypodermic needle is at times almost as great as would be the pain of the operation if it were performed without an anesthetic. The pain caused by the forcing of a hypodermic needle into the soft tissue may be greatly lessened if, after the syringe has been filled, the flattened side of the point of the needle is pressed tightly against the gum and the end of the finger pressed over the point, at the same time pressing on the plunger. It is held thus for a moment and gradually the needle is forced into the tissue, the pressure on plunger being kept up all the time. In this way the tissues are anesthetized in advance of the needle, and the operation rendered almost painless. The gum should be first cleansed and dried with alcohol and it is well to touch it with iodine before attempting to insert the needle.

The opening through the gum to the process can be made with a lance, a trephine, or by using a sharp spoon-shaped excavator; with the latter, by dipping it in carbolic acid and scraping the gum a little bit, then dipping it in the acid again and repeating this operation until the process has been reached. It is possible thus to go through the tissue to the process without drawing blood, and causing very little or no pain to the patient.

It is possible to take a drill, with the edges of the blade very sharp,



and drill directly through the gum, but unless the edges of the drill are very sharp, there is danger that the gum tissue may be caught, and twisted around the drill, and badly torn. The use of the lance is the quickest and easiest method, making a straight incision on a line with the long axis and over the apex of the tooth, or, if it is desired, a crucial incision may be made.

The point of the drill is placed over the apex of the root as indicated by the broaches which are serving as guides.

The engine should be run very rapidly and the aim be to strike the end of the broach which is wedged in the root canal, at about the point where it emerges through the foramen.

Some operators, especially among the younger practitioners, are timid and dread performing an operation of this kind, but it is very simple and is quickly done, not requiring more than a few seconds at the most.

As soon as the pocket is entered, a fistula is established through which the remedies can be forced freely.

**Chronic Dento-alveolar Abscess.**—When an abscess has become chronic, extending over a period of several years, a necrotic condition in the apical region is established, and a portion of the root will also be necrosed. This necrosed area must be entirely cut away and the diseased portion of the root removed in order to effect a cure.

**Treatment.**—The apex is located in the manner already described. The incision in the gum should be somewhat larger than where simply establishing a fistula. It should be at least one-half inch in length. A large spear-pointed drill is first used and is followed by a large coarse rose or pear-shaped bur to enlarge the opening through the process and bur away the necrosed bone. The necrosed bone must be entirely removed, and during the operation, frequent examinations should be made with an explorer or excavator, and the burring continued as long as there is the slightest trace of necrosed tissue. This can readily be determined by the sense of touch. The necrosed bone has a coarse or honey-combed texture, readily recognized by the instrument, while the healthy bone is smooth in comparison.

After the diseased tissue is entirely removed, the wound is washed out with sterile water, and is then given the same treatment as already described in the case of an acute abscess using hydrogen peroxide or saline solution and aromatic sulphuric acid, after which the root is filled at once.

**Amputation of the Root End for the Relief of Dento-alveolar Abscess.**

—In amputating the apex of a tooth root, some operators advise the use of a fissure bur, cutting straight across the root, thus removing the end in one piece.

The objection to this method is that at times a large piece of the root is cut away and it may be of too great a size to be removed through the opening in the process without enlarging it. If it is not removed it will act as an irritant and there will be a recurrence of the trouble.

A large and sharp rose bur or pear-shaped bur is better for this work, starting from the apex and burring away the root gradually as far as is necessary. The root is thus reduced to fine particles which are easily washed out from the pocket. The after-treatment is the same as that for an acute abscess.

Some operators prefer filling the root before amputating and the filling is burred away with the root; while others amputate the apex first and insert the filling afterward. The danger of employing the first method, is that there is always a possibility of loosening the root filling with the bur and thus leaving a chance for future trouble.

Very satisfactory results are achieved by filling the root after amputating. The length of the root is taken with a hooked broach and a canal plugger is selected which will reach only to within about one-eighth of an inch of the end, the same as in the filling of a root with an enlarged foramen.

The pocket is first treated the same as for an acute abscess, being washed out with hydrogen peroxide or a saline solution, followed with aromatic sulphuric acid.

An instrument having a broad flattened end is passed through the opening in the process and pressed tightly over the end of the root, being held firmly in that position with the left hand. The canal is then thoroughly dried.

A gutta-percha point, which has previously been selected and which is slightly larger than the plugger which is to be used, the length being about that of the canal between the end of the plugger and the end of the root, is fastened to the plugger point by heating. This is dipped in eucalyptus oil and packed tightly against the instrument which covers the end of the root. By filling the root in this way, we may be quite sure that the filling is firm, and there will be no liability of leakage.

If the crown of the tooth is good, and the canal is not to be used for the reception of a post, the entire canal may be filled with the

gutta percha, packing it tightly against the instrument covering the end of the root.

If the wound is large, it is better that it be packed lightly with antiseptic gauze, which will act as a seton and keep the part drained. This dressing should be changed every two or three days and the wound washed out with an antiseptic solution. Healthy granulation will quickly begin and the depth of the wound will diminish as it is filled in with healthy tissue. The treatment should be kept up until the wound has become filled with healthy tissue to within about one-quarter of an inch of the opening. The dressing and washing may then be discontinued. Healing will be complete within a very short time if all of the necrosed tissue has been removed. If this does not take place, it is evidence that there is still remaining some diseased tissue, and further treatment looking to its removal is needed.

### CHAPTER III.

## CROWN AND BRIDGE-WORK IN RELATION TO THE VITALITY OF THE PULPS IN SUPPORTING TEETH.

THERE has been a great amount of discussion among dentists for the past few years, due to the differences of opinion among both dentists and physicians regarding the use and treatment of vital and non-vital teeth.

There are many who are radically opposed to the devitalization of the pulp of any tooth, for any reason, or under any circumstances.

Others are equally insistent that any tooth in which there is no pulp, where there has been the slightest disturbance in the apical region, should be removed at once.

Again, there are some who go to the extreme of protesting against the retention in the mouth of any pulpless tooth, even where the tooth is perfectly firm, has never given the slightest pain, and where the radiograph shows a perfectly healthy condition.

It is surprising that so many dentists should have held to these extreme opinions for it had been impressed upon them from the beginning, how valuable the dental organs were and how necessary they are to the health and comfort of the patient.

It is only within a comparatively short time, however, that many of the men of the medical profession have given much attention to the teeth.

It is really only within the last few years that the students of medicine have been taught the value of these organs or have given any thought to the oral cavity.

The writer well remembers that when as a student, the men of the medical and dental schools had their anatomy lectures in common. The parts on which the professor was to speak were placed on the table before the lecture began. On entering the hall and seeing from the specimens that the lecture was to be on the teeth and mouth, some medical student would cry out, "This is a dental lecture," and practically the entire body of medical students would leave the hall, thinking that these lectures could not be of any possible benefit to them.

There were many physicians and surgeons, however, who realized

the importance of the care of the teeth and appealed through lectures and papers for greater consideration for the dentist and his work. Gradually conditions began to change and at times physicians consulted the dentist about the teeth of a patient before making a diagnosis. The presence of pus and its effect on the system was of course well known and with the advent of the roentgen ray, many sources of infection were found in the mouth. From the readings of many of these radiographs, there were many good reasons for the condemnation of a very large proportion of the root work which had been done up to that time, but because the greater part of the work was faulty, that was no reason why all treatment of teeth should be condemned and the teeth extracted. But such was the case, and many times, not only were teeth which had, or were suspected of having non-vital pulps removed, but patients were advised to have all of their teeth, good and bad, extracted and plates substituted.

The greater part of the medical men did not take this radical stand, but there were many men of prominence, whose word carries great weight with both the dental and medical professions who did, great harm has resulted therefrom.

When we consider that in a normal mouth where all of the teeth are present, a maximum force of 250 pounds is exerted in crushing certain substances, and only about 30 pounds where plates are worn, the inferences to be drawn are, to say the least, startling.

As a matter of fact, these extremists had ample justification for taking a very decided stand against existing conditions. The manner in which by far the greater proportion of the root work, as shown by the radiograph, had been done was discouraging to the most optimistic. In many series of radiographs in the possession of the writer, not more than 10 per cent of the canals have been filled to the apex.

It is a mistake, to say the least, to advise the removal of all pulpless teeth where the radiograph shows a disturbance in the apical region. Of course, there are many so far gone as to necessitate their extraction, but there are many others which by careful and persistent treatment can be brought to a healthy condition and do their work as supports for bridge-work for many years with no recurrence of the original trouble.

Because there may have been some necrosis, there is no reason why a tooth should be extracted without making every effort to effect a cure.



As to removing all teeth in which the pulps are dead, where the radiograph shows a perfectly healthy condition with no disturbance in the apical region, it would be doing the patient the greatest possible harm to extract such teeth.

What is to be done where an incisor crown has been broken off, the root being perfectly healthy, or with a tooth which has an inflamed and aching pulp which is sure to die? Are such teeth to be extracted without any effort to render them useful?

Where a tooth or a root is needed as a support for a bridge, even if it is diseased, every effort should be made to bring it to a healthy condition. It is remarkable how great numbers of these teeth will respond to careful, patient and persistent treatment.

There is no form of denture made which so nearly reproduces the lost organs or any which functionate so perfectly as well-made and properly constructed and articulated bridge-work does and it should be utilized where ever it is possible to do so.

A very large proportion of the partial plates which are inserted are worthless, being of no practical value to the patient and more often than not, a menace to the health of the remaining teeth.

Where a vital tooth is needed as a support for a bridge and better and more permanent results can be obtained if the pulp is removed, if the work of devitalizing, and the treating and filling of the canals is skilfully, thoroughly and aseptically done, it is perfectly justifiable to devitalize it and there will be no ill-effects from having such a tooth in the mouth. There is far less likelihood of trouble from such a tooth than there would be from much grinding, in properly preparing and crowning a vital tooth, or from placing a huge inlay capable of supporting such a bridge.

Prior to the advent of the roentgen ray, there was some excuse for much of the imperfect root work that was done, but there was no excuse for all of it. Even as it is, there is still a very large part of the work being done that is an injury to the patient, no advantage being taken of this invaluable aid.

No root work should ever be started or carried through without the aid of the roentgen ray, and every step should be verified before going on with the next. If this is done in a thoroughly aseptic manner and all of the canals are perfectly filled, there will be no future trouble and the roots will do their work and last as long as will a tooth with a vital pulp.

It is not so much the question of the devitalization of the pulp and the filling of the canals as it is of *the manner in which it is done.*

In the case of a very young subject, where teeth have been lost and the patient, perhaps, has been under orthodontic treatment, and it is necessary to bridge the space in order to retain the teeth in proper occlusion, a temporary bridge may be made, mutilating the teeth as little as possible, simply making space enough between those which are to serve as abutments and adjoining teeth to allow for the thickness of a metal band, but not cutting through the enamel. After the work has been placed in the mouth, it should be frequently examined and a careful watch kept over the patient until such time as it may be advisable to insert a permanent fixture.

### THE CAUSE OF SOUND TEETH DISCOLORING AFTER DEVITALIZATION.

If the operation of devitalizing, and the after-care of the tooth has been properly done, there will be no discoloration. The discoloration of a tooth from which the pulp has been removed is due, not to the fact that the pulp has been devitalized, but to the improper treatment of the tooth after devitalizing.

Quoting from his own experience, the writer does not recall a single case in which a tooth has become discolored after removing the pulp, but he has seen and treated many such cases, and has invariably found unmistakable evidence of the manner in which this condition was brought about.

In devitalizing any of the anterior teeth, the tooth is opened from the lingual or palatal side, or through a cavity, perhaps, on the mesial or distal side, drilling in the direction of the apex. The pulp is removed through this opening and the canal cleansed and filled. Usually it will be found that this part of the work has been well done, but the operator has not gone far enough in his work to prevent the trouble. As will be seen in the illustration (Fig. 12), the horn of the pulp extends far up into the crown of the tooth, while the opening has been made far below it. The result is that this extension of the pulp remains in the tooth after the canal and cavity has been filled, as in Fig. 12, where it decomposes, and in time the tooth structure becomes infiltrated with this putrescent matter causing the discoloration.

The writer does not remember, and has no record of ever having opened up a discolored tooth where he has not found the conditions as described above.

After the canal has been opened, the pulp chamber should be

enlarged sufficiently near to the incisal edge of the tooth to permit of the removal of every particle of pulp tissue. This can be done with a rose bur in the right-angle hand-piece, working from the lingual side, and opening it up enough so that the extreme apex of the pulp chamber can be reached, Fig. 13. After the pulp has been entirely removed, the cavity is thoroughly sterilized and filled with cement of any suitable color.

Although, if the work of devitalizing the pulp and filling the canals

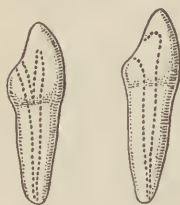


FIG. 12 FIG. 13

always be a slight difference in the opacity, owing to the removal of a part of the dentin and the placing of the cement lining which may render it slightly noticeable in certain lights, or when viewed from certain angles. This will be especially true if the tooth so treated is standing next to its mate, as would be the case if the pulp of one of the centrals was devitalized. With the cuspid, there are so many teeth between it and the corresponding tooth on the opposite side of the mouth, that even a marked difference in color would not be in the least conspicuous. The following may be set down as a rule which should invariably be observed.

Where there is a choice of teeth, one of which is to be devitalized to serve as an abutment for a bridge, *always devitalize the pulp of the tooth which stands farthest away from its mate.*

In the case of a lost lateral, the cuspid and central being in equally good condition, the cuspid should be used as the abutment, but if the central incisor is badly decayed or broken, then of course it will be policy to utilize it.

### DEVITALIZATION OF THE PULP.

When it is found necessary to devitalize the pulp of a tooth prior to its preparation for an artificial crown, or for any other reason, there are several questions to be considered. The first of these is: In which of the methods that may be employed is there the least danger of irritation or injury to the tooth or its adjacent parts? (2) In what way may the operation be performed with the least pain to the patient? (3) How can it be most quickly and easily accomplished?

**Arsenic.**—There are several methods and agents employed for the devitalization of the pulp, any one of which may be indicated



under certain conditions. Among the agents that have been used for this purpose, arsenious acid was one of the earliest and also the one most generally in use, but it has gradually been abandoned and at the present time this method is almost obsolete, although there are still a few who employ it. It is the one, however, which requires the greatest care in its use; is dangerous in unskilled hands, and is not always certain in its action.

The writer believes that it is best to avoid the use of arsenic if this can be done, as there is always a possibility of disturbances following its use, such as arsenical pericementitis or even necrosis. The former of these may not manifest itself immediately, but sooner or later it may appear either in a mild or an aggravated form.

If the arsenic is not sealed in perfectly, especially if the cavity extends below the gingival margin, necrosis is sure to ensue, which in some cases might have far-reaching effects. Some patients are peculiarly susceptible to this poison; and in the mouths of such, arsenic applied for a few hours only would be sufficient to devitalize the pulp completely, while in others it might remain for days with seemingly little effect. In the former case, if it were left in the tooth for any great length of time, it is almost certain that its action would not be limited to the pulp itself, but would extend through the foramen and beyond the apex and involve the surrounding tissue. Especially would this be true if the foramen were somewhat enlarged. The danger would be greater when using it on a young patient than on an elderly patient, as in the former the root may not be fully developed, and the foramen be widely patulous, in which case, carbolic acid, creosote or some such agent is indicated.

Cases also occur in which there is an imperfection in the walls of the root canals. A condition of this kind is fortunately very rare and is one which it is impossible to foresee and guard against. If arsenic is used, disturbances which may result in serious injury to the patient are unavoidable. Very rarely it may happen that the pulp will resist the arsenic and repeated applications will have no effect, in which event, some other method of devitalization must be employed, although it will generally be found that where the pulp resists the action of the arsenic it is also likely to resist the action of any other drugs which may be used.

By far the safest and most rapid method is immediate devitalization. There are several different ways of accomplishing this by surgical means, either by the use of a general or a local anesthetic and extirpating the pulp at once with broaches, or by using what

was termed the heroic method. This latter consists of driving the pulp out with a pointed orange-wood stick without anesthetizing. Since the advent of pressure anesthesia, this method has become nearly obsolete, but there are still occasions where it can be used to advantage and a few words descriptive of the technic will not be out of place.

**The Heroic Method.**—This method was successfully employed, wherever possible, for many years by numbers of dentists who feared the use of arsenic. It was characterized by some as being barbarous, and in fact, to one not familiar with the operation it might seem to be so, but there are times where it is indicated and if the operation is skilfully performed, it is instantaneous in accomplishing the result and comes as near being painless as any method that can be employed.

At the present time it is rarely used and might be termed an emergency method. It is indicated only in the single rooted teeth where through an accident, one or more of the teeth have been broken off, leaving the pulp exposed.

The author has been criticized in a previous edition of this book for treating of this obsolete method. On the other hand, he has been the recipient of thanks from some for the description given of the technic of this operation, as they have found it valuable in the cases mentioned above, and that is the excuse for continuing it in the present edition.

In employing this method of pulp extirpation, the pulp must be well exposed and the operator should have a clear idea as to the general shape and size of the pulp canal of the tooth to be operated upon. The end of an orange-wood stick is whittled to correspond in size to the canal, and is placed within convenient reach together with a heavy, loaded mallet (Figs. 14 and 15).

The rubber dam should be applied wherever it is possible to do so. This having been done, the point of the orange-wood stick is dipped in carbolic acid and placed at the entrance of the canal and a quick, sharp blow given it with the mallet. If the orange-wood has been properly shaped, the pulp will be forced out between the canal wall and the stick, or will be found clinging to the latter when it is withdrawn. If this does not occur and any of the pulp remains in the canal, it is carefully removed with barbed broaches. The canal is then thoroughly cleansed, sterilized and filled.

The operation is performed so quickly that the pulp is paralyzed by the shock, and the pain should be no greater than that felt from

the slight prick of a pin. This happy result depends entirely upon the careful following out of the technic, for at the hands of an awkward manipulator it might cause the patient a great deal of pain.



FIG. 14

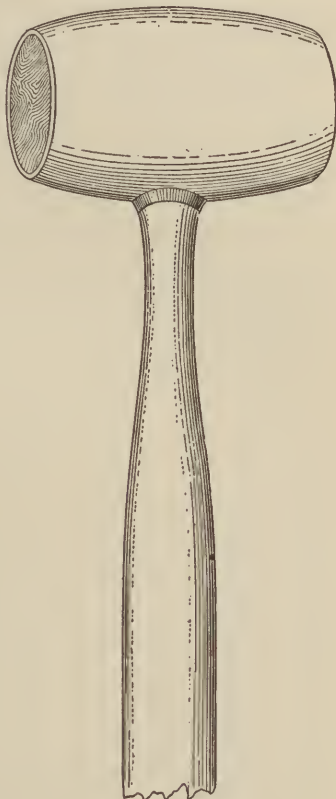


FIG. 15

#### **TREATMENT OF INFLAMED AND ACHING PULPS PREPARATORY TO DEVITALIZING.**

It should always be borne in mind that neither arsenic nor an anesthetic will act upon an inflamed or congested pulp. If the pulp is in this condition, it has been the experience of the writer that a dressing of oil of cloves or eugenol and sulphate of morphia is one of the best applications for relieving the pain and reducing the inflammation. A pellet of cotton is saturated with the oil of cloves

or eugenol and from  $\frac{1}{40}$  to  $\frac{1}{30}$  of a grain of the morphia is added to it. This is placed in the cavity and allowed to remain until the pulp is quiescent, which will usually be in from twenty-four to forty-eight hours, after which the anesthetic may be applied.

**Pressure Anesthesia as Used in the Removal of the Pulp.**—With the introduction of pressure anesthesia the work of devitalizing and removing pulps has been very much simplified.

A number of instruments have been devised for anesthetizing the pulp through the crown of the tooth. These are in the form of a powerful syringe, by means of which great pressure can be obtained.

An opening is made through the enamel to the dentin with a small bur, corresponding in size to the point of the syringe, which is then placed in this opening and pressure applied to force the anesthetic into the tooth structure. If the point fits the hole accurately, in a majority of cases a satisfactory anesthesia will be obtained. Many times, however, the syringe point does not accurately fit the hole through the enamel, the anesthetic escapes around it instead of being forced into the dentin, and in consequence the application is ineffective.

Another, and in fact the original method, is to place the anesthetizing solution into a carious cavity, the decay in the bottom of the cavity having first been carefully removed, or an opening made for the purpose, and over this a piece of unvulcanized rubber is placed. This is pressed into the cavity with a strong instrument, forcing a sufficient quantity of the solution into the tooth structure to produce a satisfactory anesthesia. This latter method is the one preferred by the writer. If the proper technic is carefully followed positive and satisfactory results may be confidently expected.

One, and perhaps the principal cause of failure in applying the pressure in this manner, is that the operator uses for carrying the solution a piece of cotton entirely too large for the purpose. The cotton is dipped into the anesthetic solution, placed in the cavity and the pressure applied. If the mass of cotton is too large to be covered by the rubber, some fibers are left projecting from the sides of the cavity; when the pressure is applied, these give vent to the solution, so that instead of its being forced into the tooth structure, it escapes by following the cotton fibers extending over the edge of the cavity.

It must be remembered that in applying pressure anesthesia in any manner whatsoever, that the pressure must be direct and

positive, without any leakage, in order to force the solution into the dentin or into the pulp.

**Sterile Field for Operation.**—Before applying pressure anesthesia the greatest care must be used to insure a sterile field for the operation. If there is a gangrenous or septic condition of the body or any part of the pulp, this must first be corrected and the parts made as thoroughly aseptic as possible. If this is not done, septic gases or matter may be forced through the apical foramen and cause serious trouble.

In order to devitalize a perfectly sound tooth, an opening should be made directly on line with the axis of the tooth so as to gain direct and free access to the pulp. The first step is to grind through the enamel. This is best done with a small stump carborundum point, or a diamond disk or drill. The engine should be run rapidly and the tooth kept flooded with ice-water, which prevents heating, and also acts as a slight obtundent. By using ice-water freely, the enamel can be quickly pierced, sometimes, even continued until the pulp is exposed, with but little or no pain at all to the patient. Dr. George A. Thompson advocates the use of hot water, but the writer has not tried this out as yet. In the anterior teeth this opening is made on the palatal or lingual side, while in the bicusps and molars it is made directly through the center of the occlusal surface of the tooth. Fig. 16.

The rubber dam is applied as soon as the enamel has been penetrated. If from any cause this cannot be done, napkins or cotton rolls may be substituted to keep the secretions of the mouth from enroaching upon the field of operation.

The instruments needed should be ready at hand, convenient for instant use. These should include a large spear-pointed drill, large coarse rose burs, a large cross-cut fissure bur, one or two sharp spoon excavators which may be used to remove the body of the pulp and broaches for removing the pulp from the canals.

A large spear-pointed drill is the best instrument for drilling through the dentin (Fig. 17). It should not be used for drilling through the enamel, as the latter is so hard that it quickly dulls the point, with the result that it not only takes more time, but the increased pressure necessary to make it cut, heats the tooth, and renders the operation much more painful than it would be otherwise.

It is very rarely these instruments are well made as they come from the dental depots. They are generally too thick and at the cutting edges are not backed off sufficiently to cut well. They can



be greatly improved by first grinding them very thin and then backing them off so as to leave a good sharp-cutting edge which will cut deeply and cleanly into the dentin and clear itself readily. (Fig. 18.) If the edges are thick and straight across and have not this clearance (Fig. 19), the drill will drag and heat, causing pain and rendering the operation more lengthy and difficult.

The enamel having been pierced, the rubber dam is applied and the tooth thoroughly dried. The point of the drill is placed on the dentin pointing in direct line with the axis of the tooth's root, with the engine running at high speed. As soon as the patient experiences pain, it is time to begin the use of pressure anesthesia.



FIG. 16



FIG. 17



FIG. 18



FIG. 19

Ethyl chloride may also be used in making the exposure. In drilling the opening, when the tooth begins to be sensitive, the spray should be applied, intermittently at first, touching the tooth only for an instant, repeating at short intervals, each time keeping it on for a little longer period, until the tooth becomes insensible to the touch of the instrument. In this way the tooth is cooled gradually and the pain or shock which occurs when the spray is applied directly and continuously is avoided. The spear-pointed drill is now used, and if the tooth again becomes sensitive before the pulp is reached, the spraying is repeated.

**Local Anesthetic for Desensitizing.**—There are a number of different preparations used in the devitalization or the anesthetizing of the pulp. Novocain seems to be a favorite agent with many dentists. The writer, however, has had excellent results from using the pure crystals of cocain in conjunction with some fluid as a vehicle, usually favoring a local anesthetic solution.

The local anesthetic, which seems to work best, and in fact, has been found by the writer superior either for extracting or wherever a local anesthetic is indicated, is as follows:

Acid, carbolic . . . . .		10 gr.
Cocain hydrochlorid . . . . .		10 gr.
Atropia sulphate . . . . .	2 per cent solution	10 min.
Nitroglycerin . . . . .	1 per cent solution	10 min.
Adrenalin chlorid . . . . .	Sol. (1 : 1000)	10 min.
Distilled water . . . . .		2 oz.

After using and recommending this anesthetic for a great many years, the writer has neither seen nor heard of any ill results following its use. It is, however, wise to use this, and all allied preparations with caution, using no more than is absolutely needed.

In making the application, only a very minute piece of cotton should be used. A piece no larger than one-quarter the size of a pin-head is ample for the largest tooth. This is dipped in the anesthetic solution and then a slight excess of the cocain, which has previously been finely powdered on a glass slab, is taken up on the cotton and it is placed at the bottom of the cavity.

A piece of soft, unvulcanized rubber is then placed over it and pressure brought to bear with an instrument which nearly fills the opening. It must be remembered that in order to obtain perfect results there must be a positive pressure, and if the instrument be too large or too small it will not do the work as well. If a positive pressure is obtained, it is not necessary to keep it up longer than from twenty to thirty seconds. The vulcanite and the pellet of cotton are then removed, the opening dried, and the spear-pointed drill is once more used.

If the tooth becomes sensitive again before the pulp is exposed, the operation is repeated. It will be found, however, that, as a general rule, with one or two applications of the anesthetic, the exposure can be obtained, without pain to the patient. At times, where there has been an excessive deposit of secondary dentin, it may be necessary to make a number of applications, as secondary dentin is very dense and the solution will penetrate only a very little distance. After the exposure has been made, the final application should be made directly on the pulp, the pressure being kept up for about thirty seconds, when it will be found that the pulp has been completely anesthetized and the pulp chamber can be opened and the pulp removed.

It should be remembered that in using the anesthetic with pressure, the pulp is not devitalized, but simply anesthetized, and if the operation of removing the pulp is long continued, sensation may return. In multi-rooted teeth, when the canals are very minute and difficulty is experienced in opening into them, sensation

may return to the pulp of one or two of the canals while the pulp was being removed from the others. This necessitates a second application.

If the tooth has been broken down by decay and a cavity exists through which the pulp is accessible, this cavity may be utilized. The disintegrated tissue, however, must first be thoroughly removed; for its presence will hinder the action of the drug. The anesthetizing solution on a small pellet of cotton is then placed in the cavity, and pressure applied as before described.

If the pulp cavity is freely exposed, the anesthetic may be injected into it with a hypodermic syringe. This, however, is more painful, and possesses no advantage over the method just described.



## CHAPTER IV.

### THE PULP CANALS.

#### POSITION OF THE PULP CANALS.

WHEN about to devitalize any tooth, one or more radiographs should be taken of the roots in order to determine whether the tooth in question can be utilized and the canals opened, enlarged, treated and filled to the apex.

If the radiograph shows that any of the roots are so distorted that it is a mechanical impossibility to open them to the end, there should be no thought of devitalizing, as such a tooth would be sure to cause trouble eventually.

After the canals have been opened, broaches or wires should be placed in them and a second radiograph taken to determine whether they have all been opened to the apex.

One or more of the roots may be curved and the broach may not have gone to the end of the canal as in Fig. 20. If this is the case, the work is renewed, bending the end of the broach so as to follow the curve of the canal (Fig. 21), and working until the end of a fine broach just passes through the foramen, and another radiograph is taken. If this shows that the canal is thoroughly opened, it is prepared for filling.

The canal should be enlarged enough so that a good-sized point can be used in filling, as, if the canals are very minute, it is practically impossible to fill them properly.

After filling, another radiograph is taken to verify the work and if it shows that any canal is not perfectly filled, the filling is removed and the canal refilled and verified as before. All this takes time, but if perfect results are to be attained, this time must be given, and if every step of the work is carried out carefully and conscientiously, there will be no future trouble.

Here the radiograph is of unquestioned value and no operation

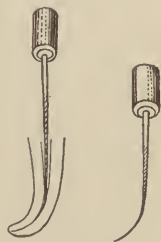


FIG. 20    FIG. 21

on the canals should be undertaken without its aid. It will show the shape and inclination of the roots and the approximate size and location of the canals.

Before undertaking to remove the pulp from a tooth, the operator should have an accurate knowledge of the anatomy of the teeth. He should know the number of roots which each tooth should possess, and where to look for entrance to the canals on the floor of the pulp chamber of a normal tooth, and he should also be able to form some idea of their approximate size.

Some of the canals are frequently very minute and difficult to locate, and a knowledge of their normal position is helpful in finding them.

All operations are more quickly and thoroughly done if the operator works systematically and by some well-considered rule. This applies with much force to the operation of locating and opening the pulp canals.

**Opening into the Pulp Chamber of Molar Teeth.**—In enlarging the entrance to the pulp chamber do not fear to make a large opening.

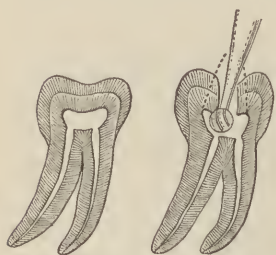


FIG. 22

FIG. 23

It is impossible to get into the different canals in the molars, and cleanse them as they should be cleansed, through a minute opening in the crown of the tooth. A large opening should be made through the crown, and the pulp chamber opened to its full size so that the entrance to every canal is easily accessible. It does not weaken the tooth to do this. As a chain is only as strong as at its weakest link, so with a tooth, and this point is

where the pulp chamber approaches the sides of the tooth (Fig. 22).

After drilling into the pulp chamber, the opening through the enamel at the entrance to the cavity can most easily be enlarged with a cross-cut fissure bur, but the use of this bur should extend only through the enamel and not to the pulp chamber. The best instrument to enlarge this is a large rose bur, passing it through the opening and under the ledge, or as it might be termed, the roof of the pulp chamber, and pulling the bur toward the occlusal surface (Fig. 23).

This should be continued until the explorer shows that the sides of the cavity are flush with the sides of the pulp chamber and the explorer slides smoothly into it.

A fissure bur, an inverted cone, or any square-ended instrument should be avoided in doing this work, as they are sure to strike the sides of the pulp chamber, leaving ledges or grooves on which the broaches will catch, and render the locating of the canals much more difficult; whereas, by using round burs only, the floor of the pulp chamber is not marred, there will be no roughness to interfere with the instrument, which will then much more readily find the openings to the different canals.

**Locating the Pulp Canals of the Upper Molars.**—As a rule, it is more convenient to first locate the palatal canal in the upper molars. This canal is much larger, and occupies a position which renders it more easy of access than are the others, and it is rarely that there is any trouble in locating it at once and removing the pulp.

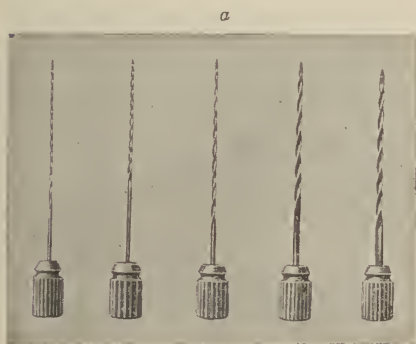


FIG. 24.—Kerr broaches.

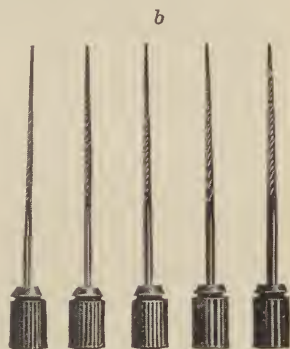


FIG. 25.—Kerr canal files.

The writer has found that the best instruments for locating the canals are the short, knob-handled broaches of the Kerr type (Figs. 24 and 25). These instruments are made of triangular steel wire, twisted, and brought to a fine point. They are much stronger and are less liable to be broken than are the barbed broaches. Then, too, being shorter, without barbs, and with just the right degree of stiffness, they admit of a far more delicate sense of touch than does a long and very flexible instrument.

When using these broaches, if conditions permit, the rubber dam should always be in place, but if this is not possible, the mouth should be protected with napkins, so as to keep the parts dry, and also, if the broach should slip from the fingers, to prevent its dropping into the throat.

The palatal canal having been located, the next one to look for is

the anterior buccal. To reach this, the handle of the broach is passed distally and palatally, extending the point of the instrument far forward toward the mesio-buccal corner of the tooth, and if the pulp chamber has been carefully opened, there will be very little difficulty in finding this canal. It sometimes happens that the entrance to this canal is located so far mesially that it will be necessary to cut entirely through the mesio-buccal corner of the tooth in order to get free access to it.

There still remains the distal canal to be accounted for. If, when the instrument is in the anterior buccal canal, it is slowly withdrawn, sliding the point lingually through the groove in the floor of the pulp chamber, as a rule the point will find the entrance to this canal with very little difficulty. These canals are often very minute and extremely difficult to open. For this the Kerr, broaches or the Kerr canal files (Fig. 25) are used. These latter are most excellent instruments. They are twisted much more closely than are the ordinary broaches and are made so that they cut like a file on withdrawing. They are worked a little way into the canal by rotating to the right and then withdrawn, beginning with the small ones, and working very carefully; using little or no force to push them into the canals, but allowing them to work their way easily as the broach is rotated. The sodium and potassium preparation may be used to advantage in such cases, working it in with a broach. Sodium dioxide is also used for this purpose, and will at times prove quite effective. Again, a 50 per cent solution of sulphuric acid may be of assistance. A little of it, indeed, may be sealed into the root and allowed to remain until a subsequent sitting, when it frequently will have so softened the contents of the canal that the broach will readily find its way to the end.

Fig. 26 will give a fair idea as to the position in which these canals are generally found, the large palatal canal *c* being about in the center of the palatal root and the anterior buccal canal *a* being found very close to the anterior buccal corner. The distal canal *b* will be found nearly on a line between the anterior buccal and the palatal canal, or slightly distally to it, but very rarely at right angles with the other canals. Occasionally, the two buccal canals have a common opening into the pulp chamber (Fig. 27), and in such cases, the entrance to the separate canals will be found just a little below the pulp chamber floor.

Occasionally, but very rarely, an upper first or second molar will have but a single root. When this is the case, the canal will

be very large, the pulp chamber sloping from all sides toward the center of the tooth, and the canal tapering to the apex (Fig. 28).

Again we may find one of these teeth which has but two roots. When this is the case the buccal canal is usually as large or even larger than the palatal canal. If, on opening the tooth, the instrument drops readily into the buccal canal, midway between the mesial and distal sides of the tooth, and if it is very much enlarged throughout its entire length, it is a fairly certain indication that there are no more than two canals. If, on the contrary, this canal is very much constricted, it indicates the existence of another canal.

Where the molar has four roots, the two palatal canals will generally be larger than the two buccal, and one will be almost directly behind the other following the line of the arch (Fig. 29, *a* and *b*), although neither of them will be as large as where there is but a single palatal root. The two buccal canals will be about in normal position (Fig. 29, *c* and *d*).




FIG. 26



FIG. 27



FIG. 28



FIG. 29



FIG. 30

#### Locating the Pulp Canals of the First and Second Lower Molars.—

Normally, the lower molars have but two roots, almost invariably, however, there are three distinct canals which must be cared for, one in the distal, and two in the mesial root. While in reality there is but a single canal in this root, it is so constricted between the buccal and lingual openings that this part of the canal is almost obliterated, the space between the walls of the canal at this point being so slight that there is, practically, no pulp tissue between them (Fig. 30), but they converge toward the apex and may have a common foramen. Again these canals may be entirely separate and distinct, each having a single foramen or there may be several in the form of a delta (Fig. 31).

The distal canal *c* being the one most easily accessible, is naturally the one first looked for. This canal being much larger than those in the anterior root, and the position being favorable, it is readily located and the pulp easily removed.



The canal next sought for is generally determined by the inclination of the tooth, if this be excessively to the lingual it would naturally be the lingual canal (Fig. 30, *b*), as this position of the tooth renders it more easy to reach. In locating the canals in this root, the rule in regard to the order in which they are opened is not followed as closely as it is in locating the buccal canals in the upper molar. At times, the buccal canal (Fig. 30, *a*), is more quickly and easily located than the lingual. At all times after the buccal or lingual canal has been found, it is much more easy to locate the other.



FIG. 31

Very frequently the distal slope of these roots is such that it will be necessary to cut the mesial wall of the tooth well toward the gum line in order that the instrument may follow the line of either the mesial or distal canals (Fig. 32). The buccal canal of the mesial root is the principal offender in this respect, and it is sometimes necessary to cut the mesio-buccal corner of the tooth entirely away before an entrance into the canal can be effected.

The mesial canals are frequently so constricted and tortuous as to render it extremely difficult to open them all the way to the apex. At times it is necessary to spend hours, or even days, to get these canals properly opened and enlarged.

These canals sometimes diverge buccally and lingually as they leave the pulp chamber, and converge as they approach the apex, having a common foramen.

If it is practically impossible to entirely open but one of these canals, and the other has been opened to within a very short distance of the apex, the little pulp tissue remaining in this small space between the filling that is to be placed in the canal which has been opened to the end of the root, and the filling which will be placed as far down in the other canal as it can be placed, will hardly do any harm.



FIG. 32

The canals, of course, must be perfectly sterilized, particular attention being paid to the one which has not been opened entirely to the apex. The canal from which the pulp has all been removed is filled very carefully, making certain that it is filled all the way to the end. The remaining canal, which has not been fully opened, is saturated with a solution of zinc chloride, after which it is filled as far as possible, so that only a little thread of coagulated pulp tissue is left in the root. This is entirely cut off and isolated so

that the danger of subsequent trouble is very remote. If the operator desires, this canal can be filled with some mummifying paste, but it is only in cases of this kind that such a filling is indicated.

Occasionally these teeth, as in the case of the upper first and second molars, may possess a greater or less number of roots than normal, and there may be but a single root or there may be three or even more. There is rarely any trouble in opening the pulp canal of a single-rooted lower first or second molar, all the way to the end of the root. As in the case of an upper molar, the pulp is always very large and peg-shaped, so that it is easily removed.

The third molars or wisdom teeth are especially lacking in uniformity as to the number of their roots; they may have but a single root or there may be many. These roots frequently converge and are fused together forming one large peg-shaped root in which there may be several canals. These canals are frequently so small and tortuous as to render it almost impossible to open all of them their entire length.

It is largely this uncertainty in regard to their condition which has often rendered them unserviceable as abutments for bridge-work, but with the advent of the radiograph, these operations have been simplified and made much easier and with its aid, if care and sufficient time be given, it is very rarely success cannot be attained. In such teeth it would be impossible to give any fixed rule as to the opening of the canals and removing the pulp, except that the pulp chamber should be fully opened so as to give free access to all the canals which it is possible to find.

**Locating and Opening up the Pulp Canals of the Upper Bicuspid.**—The upper first bicuspid, is a double-rooted tooth with the canals opening on the buccal and lingual side. The canals of these roots are sometimes quite constricted, and require considerable time to open them all the way to the end. With a little perseverance and the use of the sodium and potassium, or sulphuric acid, this can, however, generally be accomplished.

Occasionally the root has a very sharp curve near the apex. Indeed, it is at times bent almost, if not quite, to a right angle with the rest of the root. In such cases it may be impossible to remove all of the pulp tissue and there are times when it may be advisable to amputate these curved root ends, before using the teeth as abutments.

The upper second bicuspid sometimes show exactly the same conditions as are to be found in the mesial root of the lower molars,

a single root, but practically two canals, which should be treated in a similar manner to those of the lower molars. These canals may be entirely separate and present all the appearance of a first bicuspid, but if they are opened all the way to the end, many times it will be found that they unite at the apex in one common foramen, and if one of the canals be filled, the filling will be forced a little distance up into the other canal.

A two-rooted second bicuspid is frequently found, but this need not be especially considered, as the treatment would be the same as for the first bicuspid.

**Locating and Opening up the Pulp Canals of the Lower Bicuspids and Anterior Teeth.**—The lower bicuspids have but a single root, and the pulp is approached directly through the center of the cusp.

All of the six anterior teeth, both upper and lower, are opened from the lingual side, as near the center as possible, and it is very rarely that any trouble will be encountered in removing the pulp and thoroughly sterilizing and filling the canals.

**Roentgen-rays in Pulp Canal Work.**—The discovery of the roentgen-rays and the introduction of the roentgen-ray machines has been of great value to the dentist, and especially so in pulp-canal work. It has enabled him to open up the pulp canals and to work with almost absolute certainty, where, before its introduction, he had been working in the dark, and pulp-canal operations were to a very great extent, mere guesswork.

As stated before, no root work should ever be undertaken without the aid of the roentgen-ray. It is especially valuable before starting to work on the tooth at all. The film will show at a glance the number, position, and approximate length and shape of the roots, and the location of the canals, thus enabling the operator to work much more quickly than he otherwise could (Fig. 33).

In all cases, after having opened and enlarged the canals, the broaches should be left in place or fine wires should be inserted to the depth to which they have been opened, and another roentgen-ray taken to verify the work (Fig. 33). The illustration shows this very clearly, and we can appreciate the value of these pictures as an aid in this work. Many times, as in Fig. 33, the second picture will show that a canal, in which it was thought that the work had been perfectly done, had not been opened nearly to the end, and had it been filled without carrying the work further, might have resulted in serious trouble. At times it is well to submit the patient to a third exposure before proceeding to fill the canals (Figs. 33 *a* and 33 *b*). It is always advisable and at all times a great satisfaction,



to know whether our work has been perfectly done, or otherwise. A roentgen-ray taken after the roots have been filled will readily show this (Fig. 37).

The use of the roentgen-ray is also a great saver of time. In the early days the writer has often worked for hours over a tooth, endeavoring to open up certain canals, but has failed until a roentgen-ray of the root has been taken. This has shown, perhaps, a curve in the root which necessitated the cutting away of a large portion of the mesial wall of the crown and bending the broaches in a certain direction before it was possible to get into the canal more than a short



FIG. 33



FIG. 33 a



FIG. 33 b

FIGS. 33, 33 a, and 33 b.—Show the different steps in opening up the canals of a crooked-rooted lower molar.



FIG. 34.—Shows marked disturbance in apical region of lower first molar, due to traumatic occlusion.

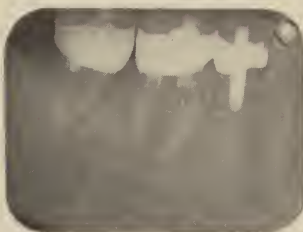


FIG. 35.—The occlusion of the molar shown in the preceding picture was carefully corrected and (Fig. 35) shows the radiograph of the same tooth taken about a year later.

distance, but after securing the films, and properly shaping the broach, he has been enabled to complete the work and open the root all the way to the apex within a very short time (Figs. 33 and 37).

The value of the roentgen-ray to the dentist cannot be over-

estimated, and those who are taking advantage of it are doing far better work than it would be possible for them otherwise to do.



FIG. 36.—Shows the canals of the lower second bicuspid and second molar opened to apex and wires inserted.



FIG. 37.—Shows the canals in the bicuspid and two molars filled. The upper third was not supposed to be filled, as the canals were to receive posts as supports for crowns.


### REMOVING THE PULP AND CLEANSING THE PULP CANAL.

The Donaldson canal cleansers, and instruments of that type are best suited for the purpose of removing the pulp where the canal is sufficiently large to admit of their entrance (Fig. 38). These broaches are barbed on all sides, the barbs being cut around the shaft following the direction of the thread of a right-hand screw. Such instruments should be used with care, being necessarily very delicate, as in barbing them, the broach is cut partially through, weakening it to a great extent.

The broach should be held in the fingers lightly and should never be forced. In entering the canal the broach is rotated slightly to the right, allowing it to be drawn into the pulp tissue and after entering to a sufficient depth may be withdrawn with the pulp, or a portion of it adhering to it. Never allow the broach to become jammed. Keep touching lightly, twisting it the least bit with each forward motion until it catches a little, then withdrawing it, and continue these

FIG. 38.—Donaldson's pulp canal cleansers.

movements until the apex is reached. Should the broach become jammed, it is released by rotating carefully to the left.

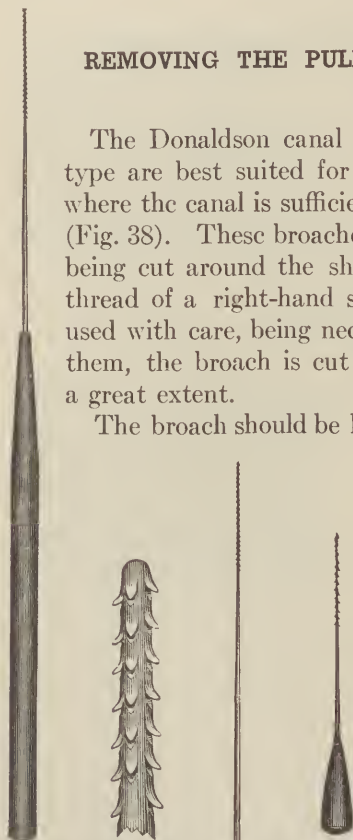

Where the canals are very small, the Kerr canal files are best for enlarging the canals and removing the pulp, beginning with the smaller and working up to the larger. While these broaches are much stronger than are the Donaldson, care must be exercised in their use, as the finest of them are very delicate.

Where the canals are so minute that trouble is experienced in opening them, even with the finest broaches, the use of sodium and potassium, or sodium dioxide, is indicated, the sodium and potassium being preferred. A small amount of the preparation is carried to the canal on the broach and worked into it with a pumping and rotating motion. This will facilitate matters and tend to enlarge the canal slightly, so that the broach may readily follow it.

At times a drop of 50 per cent sulphuric acid in the canal will very materially assist in the work, and sometimes if a little of the acid or sodium and potassium is sealed in the canal and left there until a subsequent visit of the patient, it will enable the remainder of the canal to be more easily opened.

The openings from the canals into the pulp chamber are generally somewhat constricted, as shown in Figs. 22 and 23. They should be slightly enlarged at this point with a Gates-Glidden drill. They are thus not only rendered easier of access to the broach, but the removal of the pulp is also facilitated.

**Instruments Must be Perfectly Sterile.**—It is to be understood that in all of these operations, the instruments must be thoroughly sterilized before using, and sometimes during the operation. This is best done in superheated steam or by boiling. The former is by far the most thorough and efficient of any method which can be employed. Fig. 39 shows an apparatus for sterilizing by steam. The instruments are placed in a tray, which is put in a highly heated cylinder. A little water is then injected into the cylinder and is instantly converted into steam of several hundred degrees of heat and the instruments are thoroughly sterilized in a very few moments.

Formalin is also a very good sterilizing agent, but it is better to use a stronger solution than is generally employed for this purpose. A solution of formalin diluted with water alone will corrode the instruments so as to ruin them in a short time, but a solution composed of one part formalin to three parts of a saturated solution of bicarbonate of soda, may be safely used and is very effective.

Instruments placed in this solution and left for several days will remain as bright and clean as when first put in.

The canal should first be cleansed mechanically, the sides being thoroughly scraped with the barbed cleansers so as to remove every particle of pulp tissue that it is possible to reach.

At all times, after the pulp has been removed and the canals opened, it is well to use the sodium and potassium. A platinum point is best suited for this purpose, although twisted broaches of the Kerr type may be used. A small portion of the sodium and potassium is taken up on the instrument, carried into the canal and worked in as previously described. This will have a tendency to destroy any organic matter remaining in the canal and render it perfectly sterile.



FIG. 39

The sodium and potassium may be used freely, but not to excess, as an excessive use of this agent has a tendency to burn the life out of the tooth structure and render it brittle.

After the canals have been opened to the end of the roots, those which are very minute should be enlarged sufficiently to allow the filling to be properly inserted. This can be done with the canal files by working them back and forth in the canals until they are of the desired size. The Donaldson canal cleansers can be used, but greater care must be exercised, as they are more easily broken, and the time required is much longer than when the Kerr files are used.

After the pulp has been removed, the No. 1 fine or extra fine file is used to enlarge the foramen. At times the anesthesia may have extended beyond the end of the root and care should be used not

to carry the broach too far. The broach can now be left in the canal, a little gutta percha packed around it, the rubber dam removed and the radiograph taken, after which the broach is removed and a dry dressing of tricresol and formalin placed in the canal and sealed with gutta percha. If the operator prefers, the broaches can be removed and fine wires placed in the canals before taking the radiographs, but the broaches are more easily carried to the extreme end of the root. At the next visit of the patient, if the radiograph shows that the canals are opened to the end, they can be enlarged for filling. Only the smallest broach should be carried through the foramen and the canal should be enlarged to within about one-thirty-second or one-sixteenth of an inch of the apex. The No. 1 broach is carried into the canal until the patient feels a slight sensation, showing that the end has just passed through the foramen, but not enough to cause pain. It is noted carefully, or a little piece of rubber dam can be passed over it to show the exact depth to which it has gone, and this will serve as a guide in using the other broaches. This is now removed and the No. 2 used, carrying it not quite so far as the No. 1 has been. The No. 1 is now passed to the full depth again so as to keep the small foramen open, and the No. 3 used, then the No. 4, No. 5 and often the No. 6, after each, using the No. 1 to keep the foramen free. Again we emphasize the necessity of having the broaches absolutely sterile. The canals are now ready for filling.

In single-rooted teeth or in roots where the canals can be quickly and easily opened and cleansed, there is no objection, and in fact it may sometimes be necessary, to fill the canals at the same sitting. When this is so, the radiograph should be taken with the broaches or wires in the canals and the films developed and examined before enlarging the canals or filling.

When ready to fill, the canal is thoroughly washed with a solution of bichloride of mercury and peroxide of hydrogen, the solution being composed of  $1\frac{3}{4}$  grains of bichloride of mercury to 2 ounces of peroxide of hydrogen. This makes a bichloride solution of a strength of about 1 to 500 and will insure the thorough sterilization of the canals. This solution should not be used, however, until just previous to filling the roots. If it is sealed into the canals, it is apt to cause the patient pain, which may continue for some time. After having used the bichloride solution, the canals are wiped out and thoroughly dried with alcohol preparatory to filling.



### TENDERNESS OR SENSITIVENESS AFTER THE REMOVAL OF THE PULP.

Tenderness or sensitiveness which at times, though rarely, follows the removal of the pulp may be due to a minute portion of pulp tissue missed by the broaches, and still adhering to the walls of the canal. This is especially likely to occur when the canal is very much flattened, and the pulp is compressed to a knife-like edge, generally on the lingual or palatal side (Fig. 40). This is most likely to occur in the cuspids and lower bicuspid teeth.



FIG. 40

Occasionally, when a patient returns to have the pulp canal filled, on a visit subsequent to that on which the pulp was removed, some part of the canal may be extremely sensitive. When such is the case, it is quite probable that a small portion of pulp tissue still remains in the canal.

Sometimes the pain will cease at once on thrusting a barbed broach quickly to the end of the root and twisting it. Generally, however, the use of a little of the sodium and potassium preparation will permit of the removal of this thread of sensitive tissue without pain.

In obstinate cases it may be necessary to use a little cocaine, or local anesthetic, pumped as far into the canal as possible, before being able to remove the cause of trouble.

### ENLARGING THE PULP CANAL FOR CROWN PINS.

In enlarging the canals for the reception of the post, none but safe-ended instruments should be used. Instruments such as spear-pointed drills, rose burs, fissure burs and others of a similar character, should never be employed for this purpose, as they will not follow the canal, and there is danger of perforating the sides of the root, and causing trouble for both the patient and the operator.

**Determining the Length of the Root.**—When enlarging the pulp canals it is well to know the approximate length of the root, so as to be able to tell how far it will be safe to go and how long a post can be used, and this can generally be determined with sufficient accuracy from the radiograph.

In preparing a root for a crown in which pin or post is to be used for retention, it is often better to enlarge the canal to the desired size and depth before filling the apex. The length of the canal is

determined with a fine broach and then further enlarged with the canal files. Gates-Glidden drills, Fig. 41, of different sizes, beginning with the smallest and ending with the largest, are then used to the depth to which it is desired that the pin should go.

These latter instruments are safe-ended, having a round, smooth guide point, which will follow an opening, but will not cut at the



FIG. 41.—Gates-Glidden nerve-canal drill.

end (Fig. 41, *a*). The instruments should not be forced at all, but should be allowed to work their own way into the canal, withdrawing frequently to clear them, and just touching lightly until the desired depth has been reached.

These instruments were first made with the shank tapered, with the lightest and weakest part close to the head (Fig. 41, *b*), and if broken, only the head of the instrument remained in the canal. It was very difficult, at times, indeed, impossible, to remove them. Later they have been made tapered in the opposite direction, so that the lightest and weakest part is far up on the shank, and if broken at this point (Fig. 41, *c*) the part left in the root can be removed with comparative ease. When purchasing instruments it is wise to see that they are of the later pattern.

The Gates-Glidden drills are followed with reamers of suitable size, bearing the writer's name (Fig. 42), enlarging the canal sufficiently to take a pin or a tube of the size desired. These instruments are also safe-ended, having a smooth-rounded guide point the same as the Gates-Glidden drill. They will follow the canal and enlarge it, but will not cut at the end, and in using them, there is not the slightest danger, hardly a possibility, with ordinary care, of perforating the root.

The manner in which the canal of a tooth is enlarged depends upon the style of a crown that is to be used.

**Enlarging Pulp Canals for Richmond Crowns.**—Where a Richmond crown, or a crown with porcelain facing and a solid metal back is



FIG. 42.—Root-reamers.

to be used, after the canal has been opened, the reamer is partly withdrawn and sloped lingually, enlarging the canal at the gingival end of the root in that direction (Fig. 43, *a* and *b*). The object of enlarging the canal in this manner is to allow plenty of room labially, to place the facing.

If, in any of the four upper incisors, the canal is simply enlarged on its original line, the facing will come directly over the opening. This would necessitate cutting the pin off flush with the floor of the cap, in order that the facing might set flat on the floor (Fig. 44). The alternative would be to pursue another method. This consists of grinding the lingual side of the facing, toward the gingival end, and curving it outward so that only a small portion of it rests on the extreme labial side of the cap. The backing is then made to conform with this, coming down flush with the floor, thus making room enough to engage the pin in the solder (Fig. 45).

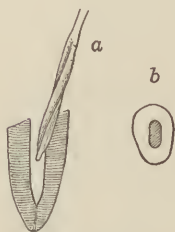


FIG. 43



FIG. 44



FIG. 45



FIG. 46

In the first method, by grinding off the pin, and setting the facing flat on the floor of the cap, the crown would be rendered very weak, as the only attachment the post would have would be to the thin floor of the cap, and but little force would be necessary to tear it away (Fig. 44). By sloping the canal lingually and then giving the post a slight bend in that direction, it will leave plenty of room labially to place the facing in its proper position without weakening in the least the attachment of facing or post (Fig. 46).

The objection to the second method, that of grinding the facing labially, carrying the backing down to the point of contact with the floor of the cap, and filling in this space with solder, is that it too often makes the work conspicuous. The mass of gold being carried so near to the labial face of the tooth renders it visible. It will glitter, or cast an ugly dark shadow between the teeth, and be very unsightly. This is especially true if the teeth are quite



fan-shaped, with broad spaces between them near the necks and applies particularly to the upper six anterior teeth (Fig. 47). There are times when the facings may be ground in this manner, as in the case of the bicuspsids, or more rarely, even in the cuspid, where they are broad at the neck, but ordinarily it is not advisable.

**Enlarging Pulp Canals for an All-porcelain or Downie Crown.**—Where an all-porcelain crown or a Downie crown is to be used, on any of the six upper anterior roots, and in the lower jaw on any of the roots anterior to the molars, either building up the entire crown with porcelain, or using a facing and building up the lingual portion only, the canal is simply enlarged in its original direction so that the pin will set directly in the center of the root. This applies especially to the upper anterior teeth where there is but little force exerted except in an outward direction. The reason for this is as follows: Porcelain is a very fragile material and its strength is



FIG. 47



FIG. 48



FIG. 49

only in proportion to its bulk. By having the post in the center of the root, and cutting a groove on the lingual side of the facing between the tooth pins (Fig. 48), so that the post will set in nearly or quite flush with the back of the facing, it permits a greater bulk of porcelain lingually to the post, thus giving increased strength to the crown (Fig. 49).

If the post is allowed to come lingually, as in the case of a Richmond crown, it would permit of but little porcelain back of it, particularly if the bite was very close, thus rendering it very much weaker than it would otherwise be. This does not apply so particularly to the lower anterior teeth as with them the greater pressure is inward.

When placing a Richmond or a porcelain crown on an upper first bicuspid root, it is very rarely that there is any necessity for using more than one of the canals for the post and the palatal canal should always be chosen. In mastication, the force exerted on

these teeth is always upward and outward, the lingual stress being very slight (Fig. 50), consequently if the post is well anchored into the palatal root, there will be no necessity for one in the buccal root, for the reason that the direction of force is such that the crown will always be forced tightly against the root on the buccal side, and the post in the palatal canal will bind it firmly to the root at that point (Fig. 51). The only exception to this is where the crowns are gone and the roots having extruded somewhat, are broken down or much decayed far down under the gum. From the fact of their being so short, it may at times be advisable to utilize both canals in order to give the necessary retention.



FIG. 50



FIG. 51

### FILLING THE PULP CANAL.

There are many different methods and materials used in filling pulp canals. Satisfactory and permanent results, however, depend fully as much on the manner in which these fillings are inserted as it does on the materials which are employed for the purpose. Among these we find gutta-percha points, oxychloride of zinc, gold, chloropercha, paraffin and even wood points. It is probable that gutta percha and oxychloride of zinc are more extensively used than any of the others.

**Gutta-percha Points.**—Of all materials, the writer believes that the very best results are obtained from using gutta-percha points. He also believes that a filling of this material is much more easily inserted, and that it is possible to carry the filling to the extreme end of a very fine canal with a great deal more certainty than can be done with any other material.

As a preliminary to the operation, it is understood that the rubber dam is to be applied, if the conditions will permit, and if not, other means must be used to keep the mouth as dry as possible.

Napkins or cotton rolls will help matters, but will not prevent the seeping moisture or serum. Within a comparatively recent date, a new preparation has been placed on the market known as Liquidam. This can be painted on the gum around the tooth or stump and with the aid of cotton rolls or napkins will often keep the field perfectly dry.

A point is selected of a size corresponding to the canal which is to be filled, and placed for a time in the bichloride solution to sterilize it. It is then dried on a napkin and attached to the end of a canal-plugger by heating the point of the instrument. The canal, being thoroughly cleansed and dried with alcohol, is slightly moistened with eucalyptus oil, carrying it into the root on a small wisp of cotton twisted around a broach. The gutta-percha point is first dipped into the oil of eucalyptus and then just the tip of it into aristol or iodoform, after which it is placed in the canal and worked into it with a slight pumping motion, carrying it farther and farther as the oil softens it, until the extreme apex is reached, which, in the majority of cases, can be told by the patient wincing. If the point has not become loosened from the plugger by this time, it can be freed by rotating the plugger a little, after which the point is packed tightly into the end of the canal.

It is not objectionable to see the patient wince a little during the operation of filling a pulp canal. In fact, it is rather desirable, as it is a very good, though not an infallible indication that the end of the root has been reached.

Chloroform may be used in place of the eucalyptus oil, injecting it into the root and working the point with a pumping motion the same as where the oil is used. It is not probable, however, that it will make as perfect a filling as where the eucalyptus oil has been used. The chloroform evaporates or penetrates the tooth structure very rapidly, so that the softened gutta percha soon becomes a sticky mass adhering to the side of the canal, and has a tendency to prevent the point going freely to the apex. Then, too, the rapid evaporation of the chloroform is liable to cause a shrinkage of the gutta percha, so that after a time it ceases to fully fill the canal.

The eucalyptus oil is much to be preferred to chloroform, as it is of a healing and soothing nature, besides possessing antiseptic properties which persist in the canal for many years. It is also a slight solvent of gutta percha, and makes an excellent lubricant, so that the point slides into the canal freely.

The canals are filled with the gutta percha to within about one-sixteenth of an inch of the floor of the pulp chamber. The part which remains unfilled is then carefully cleansed with alcohol and dried thoroughly, after which it is filled with oxychloride of zinc.

Where it is intended to use the canal in order to insert a post as an attachment for a crown, the canal may be enlarged at once, with a reamer, to the desired size and depth, enlarging it to within about one-eighth of an inch, or a little less, from the apex, before filling.



FIG. 52

A very short gutta-percha point is then used, dipping it in eucalyptus and aristol, and just filling the apex, packing it tightly against the shoulder left by the reamer (Fig. 52). The canal is then wiped dry and the gutta percha covered lightly with oxychloride of zinc.

**Filling Pulp Canals with Enlarged Foramen.**—Where the apical foramen is very much enlarged, as it will be in the case of an undeveloped tooth, gutta percha is the only suitable material for filling, and care must be used so that the filling is not forced beyond the apex. The exact length of the root is first ascertained by passing a hooked broach through the enlarged opening and marking the length with a small piece of rubber placed over the broach (Fig. 53, *b*).

It is always advisable to have at hand a series of different sized canal pluggers, from which one is selected which will pass into the canal only to within about one-eighth of an inch, or a little less, from the end (Fig. 53, *a*). This can be told by placing it alongside of the hooked broach used for measuring its depth. A blunt gutta-percha point is now selected, slightly larger than the end of the canal plugger and a little shorter than the distance from the end of the plugger to the end of the canal (Fig. 53, *c*). This is attached to the end of the plugger, and is then dipped in eucalyptus and aristol and pressed firmly in place at the end of the root, the canal having been previously dried. The plugger is then loosened by rotating, after which the canal is washed and dried with alcohol and the gutta percha is covered over lightly with oxychloride of zinc.

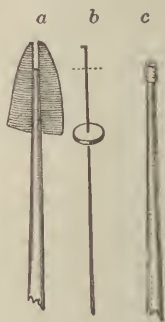


FIG. 53

The diameter of the gutta-percha point having been somewhat greater than that of the canal to be filled and also slightly shorter,

it packs very tightly in place as far as the plugger point will carry it, and at the same time the contraction of the canal elongates it a little, so that the apex can be perfectly closed. Then too, the plugger being of large size, renders it impossible for the filling to be forced beyond the point desired, and through the foramen where it might act as an irritant.

A plugger of a smaller diameter than the apical foramen should never be used in filling these canals. An accident or a sudden movement of the patient might cause the filling to be forced through the end of the root, with no possibility of removing it.

If the entire length of the canal is to be filled, the operation will be very similar to the one described. The size of the foramen is ascertained with a suitable plugger. The plugger used for filling should be just large enough so that it will pass into the opening of the canal from the floor of the pulp chambers, not much more than one-sixteenth of an inch. The size and length of the gutta-percha point is determined from these two pluggers and the hooked broach. It is made of a slightly larger diameter and a little shorter than the canal. After it has been dipped in the eucalyptus oil, it is worked into the canal with a pumping motion and packed tightly in place as far as the plugger point will carry it. The one-sixteenth of the canal remaining unfilled, is covered with oxychloride of zinc.

Where chloropercha is used as a filling, a little iodoform or aristol should first be put into the canal, after which the chloropercha is pumped in with a broach, a fresh supply being added as the chloroform evaporates.

When it is carried well into the canal, a gutta-percha point may be forced into it, but it is questionable if this will make as perfect a filling as a gutta-percha point, as there is necessarily a much greater shrinkage where chloroform is used than there can be where only a very small portion of the oil of eucalyptus is used as a lubricant.

Oxychloride of zinc should never be used for a filling where the foramen is very much enlarged, and it is probable that in all cases, the gutta-percha point is to be preferred. Zinc chloride is a strong irritant, and if a slight amount is carried beyond the apex and into the tissues, it may set up an inflammation difficult to control, causing considerable pain and discomfort to the patient.

On the other hand, gutta percha is an inert substance, and if a little is carried beyond the apex, the irritation caused by its presence is slight, and will soon pass away.



Another objection to the use of oxychloride of zinc as a canal filling, especially in any of the teeth anterior to the molars, is the difficulty of opening the canals so filled for the reception of a post, if at some future time it should become necessary to crown the roots. This difficulty, however, may be overcome to a certain extent, if after the canal has been filled with the oxychloride of zinc cement, before it begins to harden, a gutta-percha point is inserted and forced as far toward the apex of the root as possible. Indeed, it is a wise precaution to do this in all cases, when using oxychloride of zinc as a canal filling.

### TREATMENT OF PERFORATED ROOTS.

A perforated root is a complication frequently encountered, and unless slight and the perforation is favorably located it is at times quite difficult for the operator to decide what is best to do. If the perforation is large; if there has been much mutilation of the root or irritation of the soft tissues, or it has been of long standing, it may, perhaps, be best to remove the tooth or root. Each case, however, must be decided upon its own merits, with a strong leaning toward the forceps in all doubtful cases.

On the other hand, if the tooth or root is especially valuable to the patient, and conditions are favorable, it is best to make the effort, as it is sometimes possible to restore even a badly perforated root to a healthy state with a fair chance of its remaining so.

Where the perforation is recent, and there has not been much mutilation of the tissues, it can nearly always be treated and properly filled so as to render the tooth serviceable.

In all of these cases unless the perforation has been very recent it is quite likely that the soft tissues have grown into the cavity. This intruding tissue must first be removed by excision, or it may be cauterized with trichloroacetic acid, carbolic acid, or iodine. Where the size of the growth is not great, the opening may be cleared by packing the cavity tightly with dry absorbent cotton. This will expand as it becomes moist, and will force the gum tissue out. At times gutta percha may be used for this purpose, the cavity being tightly packed.

There are different materials which may be used for closing these perforations, such as gold, gutta percha, oxyphosphate of copper, thin platinum or tin foil burnished over the perforation and then covered with one of the above, and lastly, copper amalgam.



In the experience of the writer copper amalgam has proven to be the most satisfactory material which can be used in a large majority of these cases. The tissues seem to take more kindly to it than to any of the others, and if the work is done carefully, there will be practically no irritation. Many times, where everything else has been tried and failed, copper amalgam has proved most effective.

**Manner of Treating Perforated Pulp Chambers or Canals.**—The parts are first thoroughly sterilized and then a little adrenalin chloride may be left in the cavity for a few minutes, to check any hemorrhage or flow of serum, after which the cavity is thoroughly dried with alcohol.

Where there is a very large perforation in the floor of the pulp chamber it is well to lay a little piece of platinum in the form of a cross over the opening, as in Fig. 54, so as to prevent any excess of the amalgam from being forced through. This is then covered with the copper amalgam, using a broad-faced burnisher and spread-



FIG. 54



FIG. 55

ing it carefully over the floor of the pulp chamber, the sides of which have been previously undercut slightly so as to hold it. The mereury should be well squeezed out of the amalgam before putting it into the cavity.

The canals should also be kept free from the amalgam. If the perforation extends near them, pins, which have been oiled or wiped with vaseline or cocoa butter, can be placed in the entrance of the canals, and the filling smoothed into place, after which the pins may be removed, leaving the entrances to the canals free (Fig. 55). The copper amalgam at this stage being very soft, and also very slow setting, the teeth should be carefully protected and any further operation in the pulp chamber or canals should be postponed to a subsequent sitting. The amalgam may be covered lightly with temporary stopping, care being exercised not to use pressure enough to force any excess through the perforation.

Where the perforation is at the end of the root, it may be filled

with a gutta-percha point, in the manner described in treating of filling pulp canals with enlarged foramina, or packed with copper amalgam, using a large instrument which will penetrate the canal only to within about one-eighth of an inch of the apex.

Where there has been much inflammation, a dry dressing of tricrosol and formalin is probably the best, or one composed of one of the essential oils and iodoform or aristol may be used in the canal, changing it frequently, until the soreness has passed away, when the root may be filled as already described. An excess of the oils or tricrosol and formalin should be avoided, or it may act as an irritant. After dipping the cotton in the liquid, it should be squeezed between the folds of a napkin before applying.

Where the perforation is at the side of the root, if it be not far above the gum line, a small, thin, flat-ended instrument can often be passed under the gum and held to the side of the root, so as to cover the opening. With this in place, the amalgam can be packed into the perforation and against the instrument. When the opening is so located as to be inaccessible from the outside, a trial plug should be made for the perforation, showing the size of the opening and also giving an idea as to the amount of material



FIG. 56

which will be necessary to fill it. For this purpose, a piece of base plate gutta percha is used, passing it into the canal, packing it carefully into the opening and forcing it through to the outer wall of the root. This plug is then removed and will give the size and shape of the perforation (Fig. 56). A little adrenalin chloride on cotton may be left in the cavity while the filling is being made ready.

A small piece of copper amalgam, slightly larger than the trial plug is now prepared. The cavity thoroughly sterilized and dried, and the sides of the opening grooved or slightly roughened, so as to hold the filling in place. The material is then packed into place and smoothed over carefully, so that very little or no excess material is forced through the opening into the tissues and left to harden.

If it is desired to use gutta percha to close the perforation, the trial plug can be sterilized and shaped so that it will reach not quite to the outer wall of the root, leaving a slight excess on the inner side. The plug is then fastened to the end of the instrument, wiped lightly with eucalyptus oil and placed in the opening and packed flush with the canal wall.

It should be remembered that if the root is to be banded, the amalgam should be kept within bounds so that it will be impossible for it to come in contact with the band.

### FRACTURED ROOTS.

This is a troublesome complication and of somewhat frequent occurrence. It is often difficult to decide whether a root which has been split can be saved or should be extracted. The fracture of a root is often brought about by placing upon it an artificial crown without banding or protecting the root, and more frequently occurs in the incisors and bicusps, than in the other roots.

In the majority of cases, where there is a bad fracture of long standing, and where the broken parts are widely separated, it will be necessary to remove the root, but sometimes it can be made to do good service, even when it has been split all the way to the



FIG. 57



FIG. 58



FIG. 59



FIG. 60

apex. As an example an upper central incisor may be taken (Fig. 57). If the fracture is recent, and the parts are not much separated; and the gum tissue has not crowded in between the broken parts, they can often be brought together, and by crowning the root properly, it can be made to last for a number of years.

As a preliminary, the enamel is removed and the stump made slightly conical and any tissue which may have worked in between the separated parts should be carefully removed and the opening washed out and thoroughly sterilized. To facilitate this, an instrument can be placed in the split and the broken halves forced farther apart, and after the cleansing are drawn together. This is done by using a strong iron wire. The wire should be heavier than that used for taking the measurements of the roots, being about No. 28- or No. 30-gauge in thickness and is placed over the root and forced under the gum, down against the process as far as possible. At times it may be necessary to slit the gum on the labial side in order that it may be placed far up on the root. The wire is twisted tightly

at the labial side until the halves are brought into close contact (Fig. 58). After the parts are brought together, the excess of the twisted end of the wire is cut away and the remainder pressed upward close to the gum so that the sharp end will not injure the lip.

Frequently, a strong clamp placed over the root will assist very materially in bringing the parts in close contact, and the wire is passed under this and tightened. A tightly fitting band is then made for it with pin and floor complete. The band should be made of heavier material than for an ordinary crown and No. 28-gauge of coin gold is here indicated. It should be made deep enough to go all the way to the process and if necessary a lance can be used to loosen the gum around the stump so that this can be done. The stump having been faced, but not so deeply under the gum on the labial side as in the case of a sound root, and the canal carefully enlarged, the wire is removed and the band festooned and driven as far up as it will go, close to the process. It is now scribed around the inside to the face of the stump, removed, trimmed to the line and faced off with a fine flat file. A floor of No. 28- or No. 30-gauge coin gold is sweated to it and trimmed, letting it extend beyond the band all around about one-sixty-fourth to one-thirty-second of an inch (Fig. 59). A hole is now made in the floor, the cap placed on the root, the post fitted into the enlarged canal, waxed to the floor of the cap and removed for soldering. This is probably all that can be done at one sitting and the root is rewired and the parts drawn tightly together.

The cap is invested and the pin soldered to the floor with 21K solder. After the pin is soldered, the investment is broken away from the sides of the band and the band covered with the same solder and made flush with the extended floor all around (Fig. 60). This gives ample strength to prevent stretching and the possible chance of the broken parts of the root separating.

When the patient again appears, the wire is removed from around the stump, the cap put in position, the impression and bite taken and the root rewired. An articulated model is now made and the crown is completed.

After it has been finished it is cemented to the root and when the cement has thoroughly hardened, the wire is removed. This renders the root perfectly firm, and if the work has been skilfully done, it may last for a great many years.

Where there is only a minor fracture of the root, the piece which is broken away can be removed and the band made to cover the line of fracture,

### BANDING ROOTS WHICH HAVE BROKEN APART AND SEPARATED.

Cases are met with where the roots of broken-down molar teeth have separated from each other, but are still, individually, long and firmly set. If properly treated, many of these may be used to assist in supporting a bridge as well as though the entire tooth were standing.

Take the case of an upper molar, where the palatal root has become separated from the other two, as in Fig. 61. These roots



FIG. 61

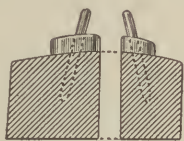


FIG. 62

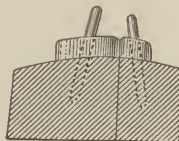


FIG. 63



FIG. 64

should be brought together. The gum, however, must first be crowded from between and from around the sides of the roots, so that a clear impression of the outline can be obtained.

The canals in the palatal root and one of the buccal roots are enlarged as much and as deeply as possible and pins placed in them, and an impression taken.



FIG. 65



FIG. 66



FIG. 67

A model is prepared from this and dried thoroughly. It is then trimmed, carefully cutting down the sides of the root and across the line of fracture, care being exercised not to scrape the sides of the roots in the least. The plaster is then cut away from between the roots (Fig. 62), and the two parts are brought in contact in their normal position and held there by waxing or setting in fresh plaster (Fig. 63). A band is fitted to this plaster stump, carrying it well into the depression where the roots are constricted (Figs. 61 and 64).



The pins having been removed from the model, a staple of heavy round platinized gold, or clasp wire, with a large loop (Fig. 65), is then made and fitted in the canals, as shown in the model, so as to go in with a spring and hold the parts tightly together, as in Fig. 66. This staple is then pressed still closer together and is forced in the root in the mouth. The spring exerts a steady pressure and it will generally be found that in a few hours the parts have been brought into contact. The staple should be left in position for a couple of days after the parts are in contact so that the roots may become somewhat set in their proper position. The staple is then removed, the canals thoroughly cleansed and the staple reset with cement. The band is then placed on the stump, the impression and articulation taken and the crown is made and finished in the usual manner. After it has been cemented, providing the work has been carefully done, the tooth will be practically as good as ever and will last for many years.



FIG. 68

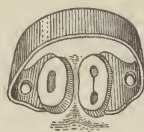


FIG. 69



FIG. 70

Another case which is frequently encountered is where the two roots of a lower molar have become separated, at times, for quite a distance. If they are of good length and firmly set they can be utilized. If they are standing far apart (Fig. 67), it may be well to crown the roots separately and then build up any form of attachment to carry a bridge that conditions favor. If the distance is not very great, say, not exceeding one-sixteenth of an inch at the most, they can be treated in the same manner as advised for the upper molar. If they are standing well out of the gum they can frequently be brought more quickly together by placing a very strong, low clamp (Fig. 68) over them, and leaving it for a time (Fig. 69). This will help to bring the separated roots together, and after they are in contact they can be held in position with the staple in the manner already described (Fig. 70).



## CHAPTER V.

### RELATIVE STRENGTH OF THE TEETH AS SUPPORTS FOR BRIDGE-WORK.

THOSE who do crown and bridge-work should have a good understanding as to the relative strength of the different teeth, and what reliance can be placed on them as supports in carrying a bridge. (The carrying capacity of the different teeth varies greatly, and it is important to know, approximately, how much work they will do under varying conditions.)

For many years the writer has made a careful study of this subject with the view of determining just what may or may not be expected of the different teeth when serving as anchorages for bridge-work. He has made many observations under widely varied conditions, and has arranged a table for the upper and lower series.

Of course it is understood that conditions may exist which would cause a variation in the order as given, but where the conditions are normal the table will be found to be nearly correct.

**Teeth in the Upper Jaw.**—The teeth which may be considered as first in strength and endurance as abutments are the cuspids. These are followed by the first and second molars. It is perhaps a question as to which of these teeth, the molars or the cuspids, form the most permanent anchorages, but it is probable that the balance is rather in favor of the cuspids. After the first and second molars come the second and first bicuspid. It is really difficult to choose between these teeth, as under proper conditions each seems to do the work equally well, although, if there is any choice, it might perhaps be given to the second bicuspid.

Next in order come the central incisors, then the laterals and lastly the third molars or wisdom teeth. The third molars are placed last in the list on account of the uncertainty regarding them, and also their position being so far back in the mouth as to render them very difficult of access in devitalizing, treating, and in preparing them for the reception of the crowns and fitting of the bands. At times these teeth are large and strong and well rooted, and will serve as abutments, practically, as well as the other molars,

lasting for a great many years, but on account of the uncertainty associated with them, they are placed at the end of the list.

**Lower Series.**—The strength of the lower series follows practically the same order as those in the upper, with the exception that here the lateral and central incisors are placed at the end of the list. The roots of these teeth are very small and frail, and they are placed last, notwithstanding the uncertainty associated with the third molars.

**Form of the Arch.**—The formation of the arch is an important factor in the carrying capacity of the teeth. A bridge which in one mouth might be of the utmost value to the patient, in another, where the conditions are seemingly the same, the teeth being equally good, but with a differently shaped arch, bridge-work might prove to be a detriment rather than a benefit.

Properly treated, a tooth can be made to do far more work than it was originally intended to do. One tooth may do the work of two or even three, under certain conditions, but these conditions must be carefully and conscientiously studied. It is impossible to lay down any fixed rules governing this point, and show just where bridge-work is or is not indicated. In two cases, which on first seeing may seem to be identical, there will be found some point of difference, such as occlusion, inclination of abutments, etc., which may necessitate the treating of one case in an entirely different manner from the other.

Frequently, a case may be presented which at first glance seems ideal for this kind of work, but on studying it carefully, will prove to be altogether unsuitable. On the other hand, a case, which on first thought seems unsuitable, may, after careful scrutiny, prove to be one of the best. To sum up in a few words, there are no two cases which are exactly alike and each must be carefully studied and decided upon its own merits.

### **THE STRAIN ON A BRIDGE OCCLUDING WITH A PLATE.**

Whether a bridge is to occlude with the natural teeth, or with artificial teeth on a plate, may properly have a deciding influence when considering its construction.

If the making of a bridge for the lower jaw is under consideration, and a full plate is being worn in the upper, a perfectly satisfactory

and lasting bridge can be placed, longer and with fewer and less strong abutments than would be safe were it to occlude with the natural teeth, as the force of mastication is far less where a plate is worn than where the natural teeth are standing.

### BRIDGE SUPPORTS.

**When and Where Bridge-work is Indicated.**—Although it is impossible to lay down any fixed rules governing this work, there are some typical cases which are frequently presented that will be considered.

Beginning with the simpler cases, take the anterior part of the mouth where one tooth is missing, for example an upper lateral, both of the adjoining teeth being in perfect condition. Now, in a great many of these cases, a small plate is used to restore the missing tooth, using clasps around some of the other teeth to retain it in place. A plate of this kind is rarely serviceable and is bound to injure the other teeth, probably eventually doing far greater harm to the patient than could possibly be done if the pulp of a vital tooth were *properly* devitalized, the canal *perfectly* filled, and the tooth or root used as an abutment for a small bridge restoring the missing tooth. In spite of what may be said to the contrary, a plate for a case of this kind is constantly moving. The teeth to which it is attached are abraded and the constant shifting pressure will cause a recession of the gum from around the necks of the adjoining teeth. The ideal fixture here would be a small bridge anchored to an adjacent tooth.

In a bridge of this kind, it is generally much better that the tooth serving as a retaining abutment should be devitalized, and that tooth should always be the cuspid. The reason for this is not that the central is a weak tooth, for it would be amply strong to carry the dummy, but for very good reasons which will be given later.

This does not imply that it is always necessary to cut off the crown of the tooth and replace it with an artificial crown. By devitalizing it and using an "inlay abutment," the natural crown of the tooth is preserved and if the work be skilfully and accurately done, such a bridge will be lasting, in spite of the fact that the pulp has been removed.

There is an inflexible rule which should be followed in all cases of restoration with bridge-work whether it be of a single tooth or of a

series of teeth. It is this: *Always have at least two supports for a bridge.* Never trust to a single tooth to carry the dummy. Always provide some additional support at the opposite end of the bridge, if it has but a single retaining abutment, even though this additional support be but a slight one.

When the two lateral incisors are missing, ordinarily the two centrals will safely carry the dummies restoring the lost teeth, but if the teeth should seem weak or the arch V-shaped, additional support should be had in the way of a light spur resting against a small gold filling or inlay on the lingual surface of each of the cuspids. This will prevent the bridge from being forced labially.

Where the central incisors have been lost, the laterals will serve as abutments. It is best to cut them off and crown them, as these teeth are generally too weak and slight for inlay abutments, but they should receive additional support from the cuspids, as in the case of the missing laterals.



FIG. 71



FIG. 72

Where a central and a lateral, both of the same side, have been lost, as in Fig. 71, the central and lateral of the opposite side, if they were decayed or broken down, could serve as the main or retaining abutments, but they should have additional support from the cuspid in the way of a spur resting in a pit or groove in a gold filling or an inlay. In a case of this kind, if the central and lateral were in good condition, the cuspid alone would serve as a retaining abutment with the spur resting on the lingual side of the remaining central.

Where the central and lateral of opposite sides (Fig. 72) are to be restored, the remaining central and lateral may be used with additional support from the cuspids, as above.

If one or both of the cuspids should be badly broken down or devitalized, these should be used as abutments, crowning or using inlays with tubes if the bridge is to be removable. Should the remaining incisors be good teeth a bar could pass behind these and if desirable, a small spur could rest on the lingual surfaces, so that the whole stress would not come on the cuspids.

Where all of the incisors are missing, a lasting bridge may be made by using only the cuspids as abutments, providing these teeth stand well apart and the bridge can be made on nearly a straight line with the abutments, or with only a slight outward curve, (Fig. 73). Where the arch is V-shaped and narrow, so that when in position the center of the bridge will extend outward far beyond the line of abutments, as in Fig. 74, the leverage might be so great, if the cuspids only were used, as to force the body of the bridge



FIG. 73



FIG. 74

upward and outward, thus inclining the cuspid roots forward, making a gradually increasing space between the upper and lower incisors and eventually loosening the cuspid abutments (Fig. 75).

With an arch of this shape, it is necessary to secure some additional supports. This can be done by utilizing the first bicuspid as well and giving them a broad occlusal surface. This will effectively overcome the tendency of the body of the bridge to move upward. In order to do this, it would be necessary to force the



FIG. 75

bicuspid abutments downward, the cuspids, which are always deeply set, serving as a fulcrum, and this would be impossible on account of their occlusion with the lower teeth.

In the case of a full denture there should be at least four good strong abutments. The two cuspids and a first or second molar on each side of the arch would form an ideal case for a minimum number of anchorages. A bridge of this kind should be made in one piece, thus making one side assist in supporting the other.



**Large Bridges, One Piece or Divided.**—If, with only the four abutments, the bridge is made in two parts, divided at the median line, the tendency will be for the two halves to be forced outward buccally, thus separating the parts and leaving an ever-widening space between the central incisors. If we increase the number of abutments, having the two central roots in position, then the bridge might be made in two sections divided at the median line. In a case of this kind, however, all of the abutments should be made parallel, as they would be if the bridge was to be made in one piece, so that if the parts ever showed a tendency to separate, they could be removed and connected by soldering, with the certainty that they would go easily into their proper position in the mouth after having been so united.

It should be remembered that we cannot have too many supports, and that every additional abutment adds just so much to the chances of long life for the bridge.



FIG. 76



FIG. 77

Another typical case is where the first bicuspid and first molar have been lost, as in Fig. 76. In this case, ordinarily the second bicuspid and second molar would be sufficient as abutments, unless the bicuspid had moved back toward the second molar, so as to leave a much greater space than could be filled by a single bicuspid dummy; in which event the cuspid should be used as an additional supporting abutment as the increased leverage of the dummies would be too great a strain on the bicuspid abutment, Fig. 77. The same plan should be followed where the two bicuspids are missing and the two molars are used as abutments.

Where a single bicuspid or a single molar is missing, as a rule there need be but a single retaining abutment, but the other end of the bridge should have a support in the way of a spur resting in a filling or an inlay.

We might go on indefinitely giving instances where bridge-work might be used, but these few typical cases will serve as a guide for further operations of this character which may be encountered.



**CONDITIONS MAKING FOR SUCCESS IN CROWN AND  
BRIDGE-WORK.**

The success of crown and bridge-work depends entirely on the preparation of the teeth and roots. By this preparation, it is not meant simply the mechanical trimming for the reception of the bands or caps, but it begins at the beginning, the devitalization of the teeth and the cleansing and filling of the canals. If this is not properly done, bridge-work can never be a success.

A loose or diseased tooth does not necessarily preclude the idea of using it as an abutment for a bridge. There are many times where such teeth, by proper treatment, may be brought to a perfectly firm and healthy condition, and a tooth or root should not be sacrificed as long as there is the slightest chance of bringing it to such a state, but we should not decide definitely to use it until it is certain that a cure has been or can be effected.

## CHAPTER VI.

### TYPICAL SHAPES OF THE TEETH. MECHANICAL PREPARATION OF THE TEETH AND ROOTS FOR THE RECEPTION OF THE BANDS.

THE surgical treatment of the teeth having been properly carried out, the success of the work then depends upon the mechanical preparation of the teeth and roots for the reception of the caps or bands. In order to do this properly, it is necessary that the operator should thoroughly understand and be familiar with the anatomy of the teeth. A careful study should be made of the shapes of the different teeth as they would appear if cut off about one-sixteenth of an inch below the gum line.

It is an excellent plan for the beginner to take a number of the different teeth which have been extracted and cut them off to about one-sixteenth of an inch beneath the gum line, or grind them until the contour is entirely removed to about that point, so that the band can pass over the stump and fit the root tightly. He should not confine his study to a single tooth of a given character, but should observe many, and note any variation from the typical shape. There is a typical shape to all of the teeth, and it is rarely that this shape will vary, probably not in 1 per cent of all the cases encountered.

All of the teeth or roots, if properly prepared, present something of an oval or triangular shape, being broad on the buccal or labial side and narrower on the lingual or palatal side. This must, of necessity, be the case in order that they may be accommodated in the arch. The appended chart, Fig. 78, well illustrates this and will give an idea of their various shapes as they would appear when observed from the occlusal or incisal ends of the stumps or roots.

The cross sections are made at the extreme overlapping edge of the enamel or about one-sixteenth of an inch beneath the gum line, the distance to which the band is supposed to be carried on the root.

#### TEETH OF THE UPPER JAW.

In making a study of the teeth in the upper jaw, we find that the cuspids are nearly true ovals, or egg-shaped, being broad on the buccal and narrower on the lingual sides.

The shape of the lateral incisors is almost an exact reproduction of the cuspids but of course being very much smaller.

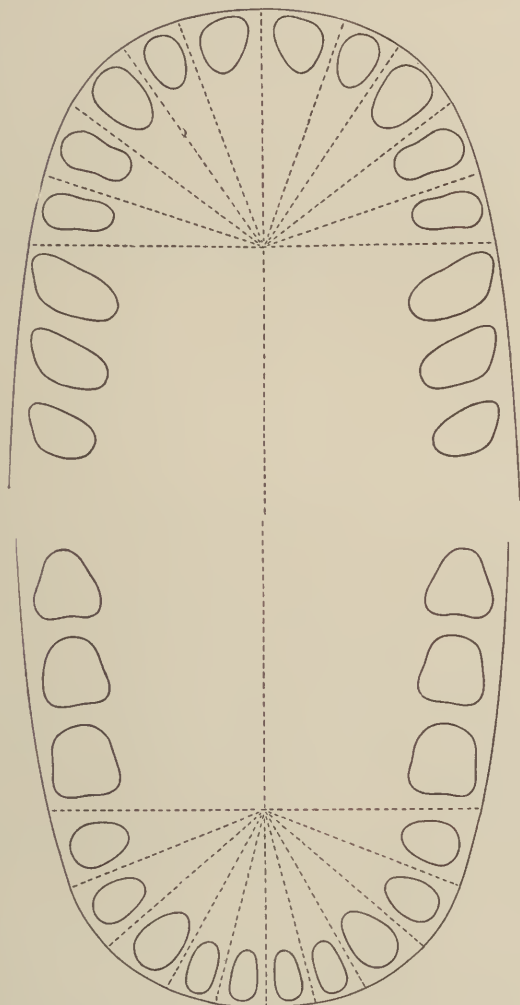


FIG. 78

In the first bicuspid, while it still preserves the same general oval shape, it will be seen that it is much broader buccally and lingually proportionately, than are the cuspids, the buccal and lingual diameter of this tooth being nearly twice as great as the mesial and

distal. After the contour has been entirely removed from this tooth to about one-sixteenth of an inch below the gum line, it will be found by following the curve of the buccal and lingual sides of the root and completing the circle on each of these sides, that there will be two perfect circles, the lingual being slightly smaller than the other (Fig. 79).

The second bicuspid root is practically of the same shape as the first, the only difference being that the second bicuspid root will be slightly smaller than the first, but the proportionate mesial distal and buccal and palatal diameters remain practically the same.

In the first molars, this triangular shape is still preserved, but as in the case of the bicuspid, the buccal and lingual diameter is usually



FIG. 79



FIG. 80

about twice as great as the mesial and distal, being broader on the buccal side, where we have the two buccal roots, and narrower on the lingual, where there is but one. This may vary at times, and the tooth be as broad, or even broader on the lingual side, when there is an excessively large palatal root and the disto-buccal root sets well inside of the arch between the mesio-buccal and palatal root, as in Fig. 80, but this is an abnormality and very rarely occurs. It will always be found that the distal root sets considerably farther inside the arch than does the mesial, thus giving the stump a more distorted appearance.

The second molar presents the same general shape as in the case of the first, but the stump is proportionately a little shorter buccally and lingually than is the first molar.

Very rarely the first or second molars have but a single root and then again, at times, they may have four. In the latter case, the palatal side will nearly always be broader than the buccal, as the two palatal roots usually follow the curve of the arch more nearly than do the buccal roots, and stand side by side mesially and distally, one directly behind the other (Fig. 81).



FIG. 81

With the third molar, or wisdom tooth, if it has the normal number of roots, it will have the same general shape as in the other two molars, but this will be still smaller proportionately, buccally

and lingually, than the second, being more nearly round than are the others. However, the shape of this tooth is subject to a greater variation than are any of the others, as it may have but a single root or at times even as many as five or six.

The central incisors, have still the same general ovoid form as the others, but somewhat distorted. This root has more the general outline of the molars, but is proportionately very much shorter labially and lingually, and is decidedly triangular in shape. If these teeth are properly set in the arch, there will be a V-shaped space between the two roots lingually. The distal sides of the labial face of these roots, as in the case of the molars, set a little farther in the inside of the arch than does the mesial.

### TEETH OF THE LOWER JAW.

In the lower jaw we find the central incisors still preserving their ovoid character, but decidedly different in shape from the upper, being proportionately much longer labially and lingually than are the centrals in the upper. These roots are very small and as a general rule are of little value as supports in bridge-work.

The lateral incisors are practically of the same shape and character as are the centrals, but somewhat larger, and while not of particular value as supports for a bridge, still they are much better than are the centrals. The shape of both of these roots, is often very much like that of the upper second bicuspid, and at times the labio-lingual diameter is nearly twice that of the mesial and distal.

The cuspids, as in the upper, are nearly true ovals, but the lingual corner is generally much sharper than is the case with the upper cuspids.

The first and second bicuspid are also nearly true ovals and both practically of the same shape, the first being slightly smaller than the second, but the lingual side is proportionately broader and rounder than are the cuspids.

The shape of the lower molars is very different from that of the molars in the upper jaw, but they still tend to the oval.

**First Molars.**—This tooth is more nearly square, being broad and nearly flat on the mesial side, the same on the buccal and lingual, the lines converging slightly toward the distal, while the distal side is more convex owing to the difference in the shapes of the roots (Fig. 82). The mesial root is almost exactly the same in character and shape as the upper second



FIG. 82

bicuspid root, the buccal and lingual diameter being about twice that of the mesial and distal, while the distal root is more rounded than is the mesial. If there has been a recession of the tissues there will be a slight depression on the mesial side of the stump where the root is constricted, and also on the buccal and lingual sides where the roots begin to bifurcate (Fig. 82).

The second molar presents the same general shape, but the distal root is smaller, making this tooth slightly narrower proportionately on the distal side than is the first molar.

With the third molar, if they have the normal number of roots, the distal root is still smaller, the prepared stump often forming an almost perfect triangle, with the corners rounded. As is the case with the upper wisdom tooth, however, the shape of this tooth is subject to more variation than are the others, as they may have but a single root or they may have several.

The foregoing is a fairly accurate description of the shapes which the stumps of the different teeth will present after they have been properly prepared for the reception of bands. If we carry these shapes in mind, we will find that the work of trimming will be very much simplified. In trimming, we are always working toward the typical shape and being familiar with these shapes will materially aid us in the work of preparation and will also enable us more readily to detect any variation from the typical formation.

### TRIMMING OF THE TEETH.

Wherever bridge-work is used, it is necessary that the teeth or roots, which are to serve as abutments, should be reinforced as much as possible in order to give strength and stability to the abutments,



FIG. 83



FIG. 84

and also to overcome, as far as may be, the possibility of their being fractured. In order to accomplish this result, it is essential that the roots should be banded. To do this properly, the contour of



the tooth must be entirely removed, so that the band, when it is passed over the crown of the tooth, will hug the neck tightly, and reduce the possibility of gingival irritation to a minimum (Fig. 83). If this contour is not removed, the band will stand away from the root, cut into the tissues and set up an irritation which may eventually result in the loss of the tooth (Fig. 84).

In all of the teeth the bulk of the trimming will be on the mesial and distal surfaces, the contour of the crown being greatest at the points of contact with the adjoining teeth, and gradually diminishing as we approach to gum line, until at a point about one-sixteenth of an inch beneath this line, or at the overlapping junction of the enamel with the dentin, it entirely disappears.

**Trimming of Lower Molars.**—In taking up the technic of the preparation of the teeth for the reception of the bands, the preparation of the lower first or second molar will be first considered.



FIG. 85



FIG. 86



FIG. 87

Viewed from the buccal or lingual sides, the contour of these teeth is very great. The mesial and distal diameter at the point of contact with the adjoining teeth is from one-third greater to, at times, even twice that which it is at the neck, or about one-sixteenth of an inch below the gum line, at the point of junction of the enamel with the dentin. Viewing them from the occlusal surface, they are oblong, generally being slightly broader at the mesial side than at the distal side.

The teeth should be trimmed so that the sides are very nearly parallel, being slightly larger at a point about one-sixteenth of an inch beneath the gum line (Fig. 85). It is very necessary that the stumps should not be made too conical, as if this is done, there will be very little hold for the crown which is to be placed on it and after being cemented it would require but a slight blow or strain to loosen it (Fig. 86). On the other hand, if the sides are nearly parallel, a very strong retention is obtained and it would require a greater strain than is ordinarily brought to bear on the teeth to loosen the cap from its position (Fig. 87).

In order to give the teeth the desired shape, it is necessary to have instruments of suitable design, so that the work of preparation may be performed easily, and at the same time with as little pain and inconvenience to the patient as possible.

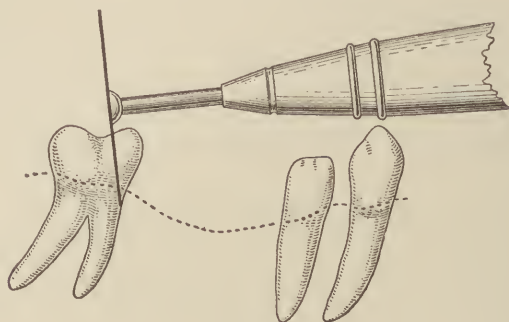


FIG. 88

The trimming of these teeth cannot be done with a hand-instrument, as the bulk of material which must be removed, in order to allow the passing of the band, is so great that if sufficient force were exerted to strip the enamel or contour from the tooth, it would be great enough to remove the tooth from the socket, so that the only way to remove it is by grinding.

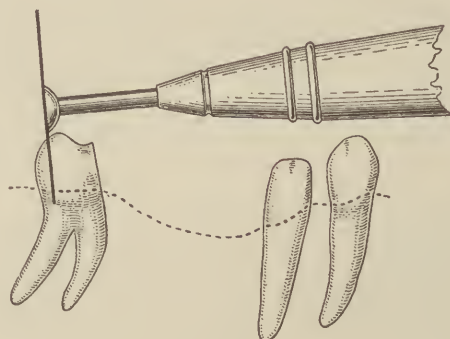


FIG. 89

It is impossible to prepare these teeth with a straight flat-faced wheel, so that they will be parallel with an anterior abutment, as in order to remove the contour entirely on the mesial side, it would be necessary to cut far back toward the center of the tooth, thus

giving it a backward slope from the gum line (Fig. 88). Furthermore, to remove the contour from the distal side with a straight, flat-faced wheel would necessitate cutting forward and into the distal root, leaving a ledge which would render the fitting of the band extremely difficult (Fig. 89). This trimming is best done with a saucer-shaped disk, as shown in the illustration (Fig. 90). With this the sides can be reached from almost any angle, the contour easily removed, and at the same time the parallelism with the anterior abutment preserved.

The wheels which have been found most suitable in these cases are the Leaming disks, or wheels of the same design. These Leaming disks are made of carborundum and vulcanite, are very uniform

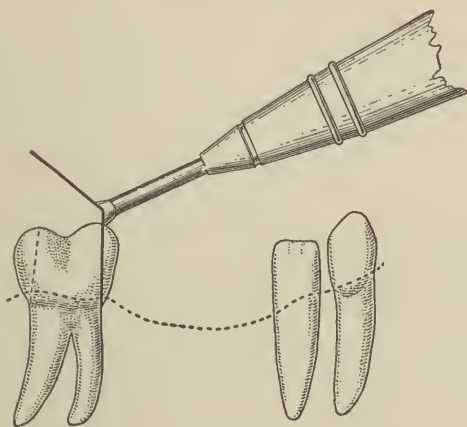


FIG. 90

in texture and are much superior to the ordinary carborundum wheels, as they will wear evenly and remain perfectly round and true until they are worn away entirely to the hubs.

The disk, which is used most frequently, is known as No. 421, (Fig. 90). This disk is very thin and of an equal thickness from center to circumference. This disk is suitable only for cutting on its edge as it is very thin and continued pressure on either the face or reverse side is liable to break it off at the hub.

The wheel and tooth should be kept constantly flooded with cold water, preferably iced. This can best be done with a syringe small enough to be held in the left hand, at the same time leaving some of the fingers free to hold the lips or cheek out of the way of the wheel.

A small bulb syringe, the No. 33 abscess syringe, is most suitable for this purpose (Fig. 91).

There are appliances made for keeping the wheels wet which are attached to the hand-piece, the water being carried through a

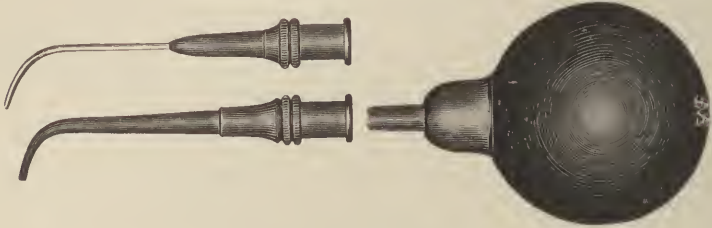


FIG. 91.—Bulb syringe.

tube to the wheel (Fig. 92), but generally these are not as satisfactory as the ordinary syringe; as they are in the way of the operator and do not allow of a firm grasp on the hand-piece. When an assistant is employed at the chair, the operator can hold the lip or cheeks

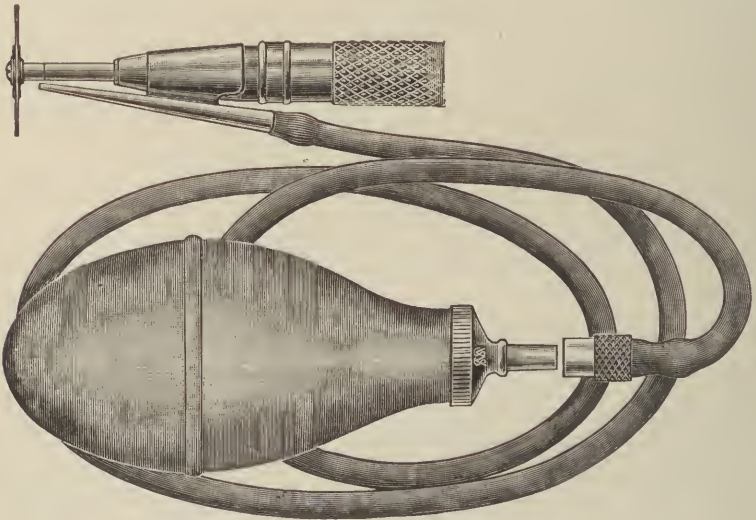


FIG. 92.—Devised by Dr. C. E. Edwards.

away with a mirror or other suitable instrument, while the assistant drops the water.

The tooth is examined carefully with an explorer in order to determine the approximate amount of tooth structure which will

have to be removed. The edge of the wheel is then placed on the occlusal surface at just about the point determined by the explorer, and the bulk of the contour can be removed in one piece (Fig. 90).

The hand-piece should be firmly held so that it is impossible for it to escape from the control of the operator. It is grasped between the thumb, and the first and second finger of the right hand. In working in the lower part of the mouth, the third and fourth fingers are braced firmly against the anterior teeth in the lower jaw, as in



FIG. 93.—Position of the hands and instruments in trimming the teeth in the lower left side of the mouth. Fig. 94 shows the position in working on the right side.

Figs. 93 and 94. In this manner the instrument is held perfectly steady, and should it become jammed between the teeth, the wheel might be broken, but could hardly escape from the operator's control so as to injure the tongue or cheek of the patient.

By working in this manner, the operator has absolute control of the instrument and the firm grasp will inspire his patient with confidence in his ability to do the work with the least possible injury to the soft tissues.



If the dentist be left-handed, the method of work just described should be reversed.

**Trimming the Lower Molars.**—In trimming the lower molars, there are three principal cuts to be made (see Fig. 95). The first, and generally the greatest, is on the mesial side of the tooth. The second is on the distal side while the third is on the lingual side. These cuts should be made in the order here given.



FIG. 94

The explorer shown in the illustrations, Figs. 96 and 97, is most suitable for use while trimming the teeth, as it is so shaped that every part of a tooth is easily accessible to it and the sides of a very long tooth can be reached to, or even beyond, the gingival border.



**Mesial Side.**—In grinding, the hand should be held very steady and the wheel must not be forced, but should be allowed to work its way through the tooth with little more pressure exerted than that which the weight of the hand-piece gives to it. This is continued until the contour on the mesial side of the tooth has been removed (Fig.



FIG. 95



FIG. 96



FIG. 97



FIG. 98

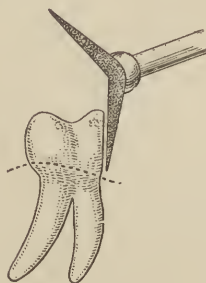


FIG. 99



FIG. 100

98). If on examination with the explorer, it is found that not quite enough of the tooth structure has been taken away, and that there still remains a little shoulder, as shown in the illustration (Fig. 99), the use of another wheel is indicated. This wheel is known as No. 422 (see Fig. 99) and is of the same make as No. 421. It is saucer-shaped, as is the other, but as seen by the illustration, that while it

comes down to a fairly sharp edge, it thickens gradually as it approaches the hub, and is made of a coarser material. It is much stronger and cuts more rapidly than does the No. 421. The wheel being thick and strong, it can be used on either the face or reverse side.

The shoulder left after using the fine wheel should be examined in order to determine just about how much more material it is necessary to take away. The face of this wheel is then placed against the tooth the same angle being preserved as with the first wheel, and the face of the tooth cut back until the explorer shows that we have gone the required distance (Fig. 100).

This will leave a little ledge, because this wheel should not be used for cutting below the gum line, as its thicker edge and coarser material would mutilate the gum unnecessarily.

The thin disk, No. 421 with which the first cut was made is then used, placing the edge of the wheel on the ledge and cutting to the required depth beneath the gum line. The explorer is now used and should pass freely under the gum, and smoothly along the root. If it is found that it is the least bit too full, the cutting should be continued until it is perfectly flush and smooth with the side of the root as in Fig. 98.

It should be understood that in trimming the teeth properly it is necessary to mutilate the gum tissue more or less. If the contour is entirely removed it is necessary to cut to a sufficient depth beneath the gum line to accomplish this and the loss of a little blood should occasion no alarm. There is no tissue in the body which heals so quickly as the gum tissue. In a perfectly healthy mouth, even where the gum has been quite badly mutilated, the tissue will be found entirely healed in a few days. It is of course understood that it is absolutely essential in all of these operations that the instruments be perfectly sterile.

By using ice-water freely, in fact it is well to have pieces of ice in the glass from which the water is taken, it will act as a partial local anesthetic for the time being, so that the cutting beneath the gum can be accomplished with much less pain to the patient than it would be otherwise.

*Distal Side.*—The mesial side having been satisfactorily finished, the second principal cut in the trimming should be undertaken (Fig. 95). This cut is made with the same wheel or disk as was used in trimming the mesial side.

It should be remembered that the distal roots of these teeth are

more rounded than the mesial. If the hand-piece be held perfectly steady in grinding down this side, owing to the shape of the wheel the distal surface of the stump would be ground concave rather than convex. This can be overcome by giving the hand-piece a to-and-fro sidewise motion following the outline of the root, determining with the explorer whether it has been done accurately. This should be carefully watched, and the grinding continued, using the same motion, until the instrument shows that the contour on this side of the tooth has been entirely removed.

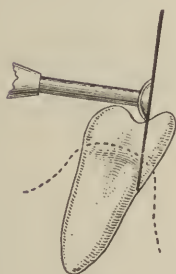


FIG. 101

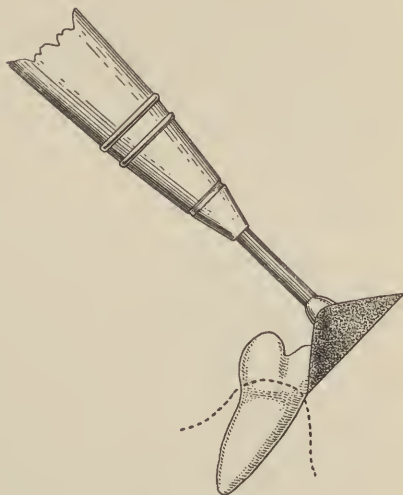


FIG. 102

*Trimming of the Lingual Side.*—The natural inclination of these teeth is lingually, as will be seen in the illustration, Fig. 101, and in making this third cut they should be ground so that the lingual side is nearly perpendicular.

In removing the lingual contour, it is best to stand on the side of the patient on which the tooth to be trimmed is located. If the tooth is standing by itself, a thin flat disk (Fig. 101), may be used, and nearly the whole amount of the contour removed with one cut, starting from the occlusal surface in the manner already described in the trimming of the mesial side (Fig. 101). The trimming of this side should be carried well below the gum line, perhaps even further than on the mesial or distal sides.

A smaller wheel of a different shape may also be used for this purpose, and also to complete the trimming, after the bulk of the contour has been removed. This wheel, one of the Leaming set, is of an inverted cone-shape and known as No. 500 (Fig. 102).

If there is an adjoining tooth, great care must be exercised so as not to mutilate it, and in that case, we would use the reverse side of the No. 500 throughout the trimming of this surface (Fig. 102).

There are diamond disks made to correspond in shape with these wheels, which work beautifully. The disk No. 1, Fig. 103, corresponding in shape to the No. 500, can be used wherever the No. 500 is indicated.

The disk No. 2, Fig. 104, of the shape of the No. 421, will take the place of the carborundum disk of that number and also of the No. 422, and as it is made of copper charged with diamond dust, there is no danger of the disk being broken when using it on its face or on the reverse side.

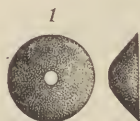


FIG. 103



FIG. 104

The initial cost of the diamond disks is much greater than that of the carborundum and vulcanite, but as they will last a great deal longer they are the cheapest to use in the long run, as one of them will outwear dozens of the others, and will not break should it become jammed.

*Buccal Side.*—The three sides of the tooth having now been completed, there remains the buccal side to be trimmed.

As will be seen from the illustrations, Figs. 101 and 102, when the lingual contour has been removed so that this side of the tooth is nearly perpendicular, there is very little tooth structure to be removed from the buccal side and at times, if the lingual inclination of the tooth is excessive, there may be nothing at all. The little that may have to be removed can be taken away with the reverse side of the inverted cone, No. 500. It is most easily reached from the opposite side of the mouth, grinding away a little at a time, using great care not to cut too much, as should this happen it will leave a shoulder or ledge under the gum over which the band must pass,

thus making the fitting of the band a very difficult operation. It will be found necessary to remove a little more structure toward the disto-buccal side, as the bucco-lingual diameter of the distal root is somewhat less than that of the mesial.

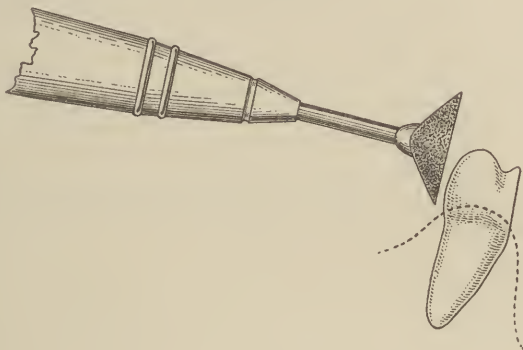


FIG. 105

At times, where the mouth is large or the cheeks are very flexible and can be drawn well back, the trimming of this side of the tooth can be accomplished with the flat face of the No. 500 wheel (Fig. 105), or the face of a small flat disk, working from the side of the mouth on which the tooth is located (Fig. 106), using, of course, extreme care to protect the adjoining teeth.

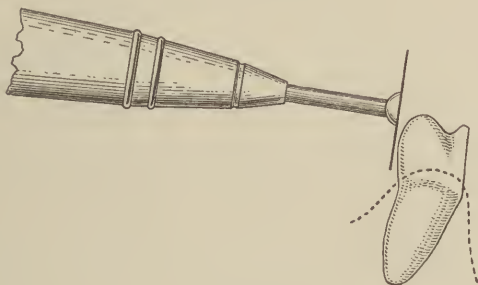


FIG. 106

The trimming of the four sides of the tooth having been satisfactorily completed, it will be found that the stump is nearly square, being slightly narrower on the distal side than on the mesial and it should also be slightly conical, being a little larger just below the gum line. The operation is completed with the rounding of the corners.

The mesio-lingual corner can be reached by using the No. 421



disk or the diamond disk corresponding to that number, working from the opposite side of the mouth and giving a rotary or swinging motion to the hand-piece, being careful not to cut too deeply into the stump so as to leave a ledge.

The mesio-buccal corner can be reached with the same wheel or with the face of a small flat disk, using the rotary motion and carefully following the curve of the root at that point.

In trimming the distal corners, if the tooth is standing alone they can be easily rounded by using the reverse side of the No. 500 wheel and giving it a rotary motion, sweeping around the corners from side to side. If there is a tooth adjoining the one which is being trimmed, it will be necessary to use more care in grinding. A part of this corner contour can be removed by using the reverse side of the inverted cone, going as nearly to the gum line as possible without cutting the adjoining tooth. After the operator has taken away all that he can with the disk, it will be necessary to remove any corners or points remaining with scalers, or other suitable hand-instrument.

The diamond disk corresponding to No. 500 can be mounted on a suitable mandrel with the face or concave side of the disk outward, and if used in the right-angle hand-piece, the distal corners can be finished to a sufficient depth beneath the gum line, so that there will be no necessity for using the hand-instrument.

Very coarse emery cloth disks will be found to be a great help in rounding and finishing the distal corners of these teeth, after they have been roughened down with the carborundum or diamond disks. These are also especially useful where there is an adjoining tooth standing distally to the one which is being prepared. Their flexibility renders it possible to follow the rounded corners of the roots and at the same time, as they are safe-sided, there is no possibility of injuring the face of the tooth behind it.

Where there is a very great forward inclination of the molar as is so frequently the case, where teeth anterior to it have been lost for some time, as in Fig. 107, there will be little or no cutting necessary on the distal side of the tooth. Of these two sides, all of the trimming, will be on the mesial. The tilting of the tooth so far forward will allow of the band being passed perpendicularly over the crown of the tooth, clearing the enamel on the distal surface and striking the neck of the tooth beneath the gum line, as in Fig. 107.

The same wheel should be used for grinding the mesial surface of the tilted tooth, as would be used were the tooth to stand in nor-



mal position. In such cases it is necessary to start far back, to or even beyond the center of the tooth and cut well below the gum line on the mesial side, even farther than it would be, were the tooth standing upright so that if the band were the fraction of an inch longer than necessary it would not pass beyond the trimmed side of the root and leave a sharp edge cutting into the tissues, as the inclination of the root is such that there would be a very decided overhanging ledge at any depth on the root to which we might grind (see Fig. 107).

The buccal and lingual surfaces of the tooth are trimmed in the manner already described, using the same instruments as where the tooth stands in normal position.

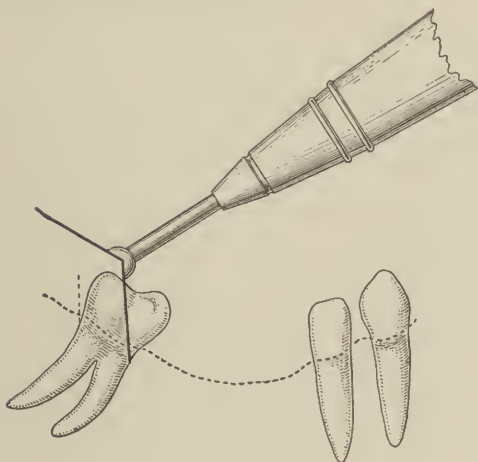


FIG. 107

It should be remembered that it is better to overtrim a tooth than to undertrim it. If too much of the contour is removed, so as to leave a ledge beneath the gum, so that the band cannot pass over it, the band can rest on this ledge and do very little harm (Fig. 109); whereas, if undertrimmed, the band will stand away from the neck of the tooth below the gingival margin and with the ragged line of cement may set up an irritation which will eventually result in the loss of the tooth.

**Lower Bicuspids.**—In trimming the bicuspids, the same methods and wheels may be used as in trimming the molars, using the edge face and reverse side of the wheels. The mesial and distal contour of these teeth may often be removed in one piece, as in the case of

the molars; but it frequently happens that the contour is not sufficient to allow of this. In such cases the operator should cut down between the teeth carefully and remove the contour very gradually,



FIG. 108.—Position of the small cup-shaped disk in trimming the distal side of the lower bicuspid or molars.

using the No. 421 disk. The No. 500 can be used for the lingual and buccal sides. The greater amount of contour here, as in the case of the molars, is on the lingual side, but proportionately not so great as in the case of the molars.

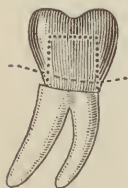


FIG. 109

The mesio-lingual corners of the lower bicuspid are the most difficult to reach, and in many instances it may be necessary to use a scaler to remove the tooth structure at these points which has been left by the wheel. However, the diamond disk corresponding to the No. 500 used in the right angle,

will very materially assist in the operation, held in the same manner as in Fig. 110.

The mesio-buccal corners can be best rounded by using the face of very thin, small flat disks, and giving the hand-piece a rotary motion. The trimming of the distal corners should be done the same as in the molars, using the reverse side of the No. 500 wheel and rotating to follow the curve of the root. In case there is an adjoining tooth, the scalers or the inverted cone diamond disk may be used in the right angle.



FIG. 110.—Manner of using the small cup-shaped diamond disk in the right-angle hand-piece in trimming the buccal side of the bicuspid and molars.

**The Upper Molars.**—The shape of the upper molars is very different from that of the lower molars, although as in the case of the lower molars, the greatest amount of tooth structure to be removed is from the mesial and distal surfaces.

The crowns of the upper molars, viewed from the occlusal surface are diamond-shaped, the greatest diameter being from the anterior buccal corner to the posterior palatal (Fig. 112). The same wheels may be used in their preparation as were used in the preparation of the lower molars.

As in trimming the lower molars, there are three principal cuts to be made, mesial, distal and buccal (Fig. 113).

*Mesial Side.*—The first cut is on the mesial side of the tooth and the bulk of the contour will be found at this point, being slightly



FIG. 111.—The same instrument in the right-angle trimming the lingual side of the lower bicuspid.

greater than that on the distal side. The first cut should be made with the No. 421 carborundum or with the diamond disk of the same shape. The bulk of the contour can be removed with a single cut.

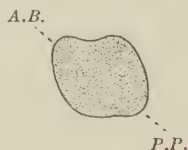


FIG. 112

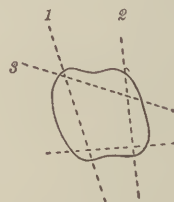


FIG. 113

In trimming the right upper molars, the third and fourth fingers are braced on the lower anterior teeth in the manner shown in the illustration, Fig. 114.

In grinding the left upper molars, the third and fourth fingers are braced on the lingual surfaces of the upper anterior teeth (see Fig. 115).

If an examination shows that a sufficient amount has not been removed, wheels of the same character can be used as on the lower molars cutting back for a distance at the gum line with the No. 422 or diamond disk, and finishing with the No. 421.



FIG. 114

*Distal Side.*—The distal side of the upper molars, unlike that of the lower molars, is nearly flat. The contour on this surface can be removed with the No. 421, or the diamond disk, rotating the hand-piece slightly from side to side, but not so much as in the case of the lower molars.

If the tooth has extruded or the gum has receded around the neck, it will generally be found necessary to groove this surface slightly midway between the buccal and palatal sides, in order to allow the band to be bent in at this place, so that it will hug the root at the point where the roots begin to bifurcate.

*Disto-buccal Side.*—The third principal cut will be on the disto-buccal corner. The distal root, setting further inside the arch than



the mesial, the contour is consequently greater at that point. The removal of the contour from the disto-buccal side may be accomplished with the No. 500 or diamond disk, using the reverse side and working from the opposite side of the mouth, giving a slight rotary motion to the hand-piece, or with the diamond disk used in the right-angle hand-piece, care being used not to cut too deeply (Fig. 116).



FIG. 115

*Mesio-buccal Side.*—On the mesio-buccal corner it will be found that there is very little, and at times nothing at all to be removed, as frequently there is practically no contour at this point, the root at the gingiva being nearly flush with the enamel of the crown of the tooth. This necessitates only the rounding off of the sharp corner, which can be done with the face of the No. 421 or of a thin flat disk, rotating from side to side, using care not to cut into the root so as to leave a ledge, as a ledge at this point would render the fitting of the band much more difficult.



*Palatal Side.*—On the palatal side it will also be found that there is very little contour (Fig. 117) and that it can be removed with



FIG. 116.—The manner of using the small diamond disk in the right-angle hand-piece in making this cut.

the reverse side of the No. 500 wheel or diamond disk, working from the side of the mouth on which the tooth is located, and rotating to follow the curve of the palatal root.

The corners may be rounded with the wheels of the same character as were used on the lower molars, using the No. 421 or diamond disk for the mesio-palatal, with the rotary motion, and the reverse side of the No. 500 for the distal corners. The emery cloth disk will also be found useful in rounding and smoothing the distal surfaces and corners.



FIG. 117

**Upper Bicuspid.**—The bicuspid of the upper jaw, wherever a shell crown is indicated, which is rarely, are prepared in the same manner as are those of the lower, the same character of wheels being used. The corners of the upper bicuspid are much easier to get at and trim than are those of the lower jaw, and the bulk of the tooth structure left at these points by the wheel can generally be easily removed with a hand instrument.

In cutting off the occlusal surface, enough of the tooth structure should be removed to allow of the placing of a thick solid cusp. Usually there should be not less than one-sixteenth of an inch between the top of the stump and the occluding teeth. This can readily be ground away with a square-edged carborundum or corundum wheel. The corners at the occlusal surface should be rounded slightly and smoothed so as to prevent their cutting the tongue or cheek.

If, for any reason, after the teeth have been prepared and ready for the impression, the bridge cannot be placed in the mouth for some weeks, as would be the case if the patient were leaving the city for a time, it would be better to leave the occlusal surfaces of the teeth intact. The bands are placed in position, and the impression and articulation taken.

The models are then prepared and after the bands have been removed, the occlusal surfaces of the abutment stumps on the models are cut away to a sufficient depth.

The bridge is then completed, and when the patient returns before undertaking to place the bridge in the mouth, the occlusal surfaces of the stumps are ground away to a depth corresponding to that which has been removed from the model.

It very frequently happens, where the teeth have been trimmed and the occlusal surfaces ground away, that the irritation necessarily attending their shaping will cause these stumps to elongate very rapidly, or shift their position, so that if several weeks have elapsed between the taking of the impression and the placing of the bridge they may have extruded so far as to be in contact with the occluding teeth. This would necessitate the further grinding of the occlusal surfaces, with the result that, from the necessity of the band passing so much farther over the stump than it did originally the fit at the gingival end might be impaired or entirely destroyed.

By leaving the cusps intact, however, the danger of the teeth elongating is entirely eliminated, and at the same time, the cusps interlocking with their antagonists, the teeth are held in their original position and prevented from shifting.

*Trimming the Anterior Teeth.*—In the preparation of the anterior teeth the work is done largely with hand instruments.

When trimming these teeth, the stump should be left standing out of the gum for from one-thirty-second to one-sixteenth of an inch, until after the contour has been entirely removed, and the band has been fitted (Fig.118). The reason for this is as follows:

If the root be cut at once below the gum line, as it will be eventually, in order to hide the band when the crown has been completed and put in place, the gum will crowd over the face of the root (Fig. 119). This, and the excessive bleeding which is sure to occur, will interfere with the vision and render the operation of trimming much more difficult for the operator and decidedly more painful for the patient. The taking of the measurement of the root is rendered much more difficult and at times practically impossible, especially if there has been a great deal of recession of the gum on the labial side.



FIG. 118



FIG. 119

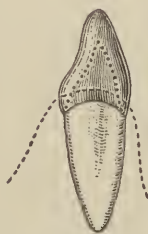


FIG. 120



FIG. 121

The difficulty of fitting the band is greatly increased, as each time the band is placed over the stump, it is necessary to crowd the gum away in order to place it, so that on the whole it is very disagreeable and unsatisfactory to both patient and operator.

Where the stump is left extending out of the gum, it serves as a guide for the instrument in trimming and enables the operator to see much more clearly just what he is doing. It also serves as a guide in taking the measurement and in fitting the band by keeping the gum away, and enabling the fitting to be done better and much more quickly, and with far less pain to the patient.

After the band has been fitted, it may be removed and the stump cut to any desired depth below the gum line, after which the band is replaced on the root and scribed around on the inside at the top of the stump, so that it may be trimmed to the proper length.

The maximum diameter of the root is at the point of junction of the enamel with the root, and this diameter generally continues about the same for from one-sixteenth to one-eighth of an inch below the enamel before the root begins to taper (Fig. 120).

If this enamel is entirely removed, it will be found that the root is of the proper shape for the reception of the band so that it will hug the root tightly (Fig. 121), unless there has been an excessive recession of the gum, in which case it would be necessary to do some cutting on the root itself.

The bulk of this enamel can be removed with scalers or enamel cleavers, and it is very rarely that any other instruments need be used on the buccal or lingual sides.

The most useful instruments for this purpose are an enlarged special No. 3 scaler (Fig. 122) and also the No. 7 scaler, which is of a slightly different shape and much thinner (Fig. 123).

These instruments should have large handles in order that the operator may hold them with a firm grip and have perfect control of the instrument so that there is no possibility of



FIG. 122.—About two-thirds actual size.



FIG. 123.—Enamel scaler.

its slipping, or twisting in the hand and injuring the soft tissues. The heavy handles shown in the illustration will be found most suitable for use with these trimmers (Fig. 122). Of late the writer has used the diamond disk No. 2 a great deal in trimming the anterior roots. It is used chiefly on the mesial and distal sides, cutting down between the roots and removing the enamel, leaving the sides perfectly smooth, and afterward trimming the labial and lingual sides with No. 3 special scaler.

*Trimming the Roots of the Upper Anterior Teeth.*—In working on the upper anterior roots, the instrument is grasped in exactly the same manner as a knife is held in sharpening a pencil, the only difference being that instead of resting on the ball of the thumb, the end of the thumb is placed against an adjoining tooth, as in Figs. 124 and 125, and the force exerted to strip the enamel from the root by a slight opening and closing movement of the hand.



FIG. 124.—The trimming of the lingual, mesial, and distal sides of the right cuspid root.

The special scaler (Fig. 122) is of such shape that it closely follows the contour of the root. It is passed down below the gum line, crowding the gum away from the root until it goes beyond the enamel which is thus stripped off until the root is perfectly smooth.

In cases where the stump may stand by itself, and there is no adjoining tooth on which to secure a rest; especially if the gum be somewhat tender, the thumb or finger of the other hand may be



placed on the gum with the end of the thumb of the hand holding the instrument resting against it (Figs. 126 and 127).

As we go farther back in the mouth, especially if the mouth be small and the cheeks tense, there will be times when it will be impossible to hold the instrument in the manner described. Then it may be necessary to grasp the instrument firmly in the right hand, and exert the force to strip the enamel with the thumb or



FIG. 125.—The trimming of the labial and approximal sides of the right cuspid root.

finger of the left hand. The illustrations give a fair idea of the manner in which this is done (Figs. 130 to 133).

*Trimming of the Roots of the Lower Anterior Teeth.*—Trimming the roots of the lower anterior teeth is much more difficult than is the trimming of the roots of the upper and the different portions of the roots are far more difficult of access. It is impossible to hold the instruments in the manner in which they are held in trimming the upper roots. The same instruments are used, however, the



operator standing at the back, and to the left of the patient, the chair being in its lowest position. The instrument is held in the right hand, and as nearly on a line with the long axis of the tooth as possible.

The fingers which are not used in holding the trimmers are braced against the teeth or some part of the upper jaw, so that there will



FIG. 126.—The trimming of the lingual portions of the left cuspid root, the thumb of the hand holding the instrument resting on the thumb of the left hand.

be no possibility of the operator losing control of the instrument and injuring the tissues. The principal force is exerted with the thumb and finger of the left hand, that of the right being used only to steady and to give a pull to the instrument.

In trimming the buccal or labial surfaces of the teeth on the right side of the mouth and around to the median line, the force used in stripping the enamel is exerted by the first finger of the left hand,

the thumb being braced on the lingual side of the tooth or jaw and in such a manner that it will not be struck by the point of the instrument. The instrument is passed beneath the enamel and pressed tightly against the root, while the pull is being exerted with the right hand, as shown in Fig. 134. Nearly all of the mesial and distal sides of the teeth may also be reached by working the instrument in the same way.



FIG. 127.—Trimming of the labial side of left cuspid, the instruments and hands being in same position as in Fig. 126.

On trimming the lingual side of these teeth, the force is exerted by the thumb of the left hand and the fingers are braced on the buccal or labial side of the teeth (Fig. 135). In trimming the teeth on the left side of the mouth, these methods are reversed, the thumb being used to exert the force when working on the buccal or labial sides of the roots and the fingers when working on the lingual (Figs. 136 and 137).

On the mesial and distal sides, the force is applied the same as for the buccal and lingual, either the thumb or finger being used as is most convenient.

Where the operator is left-handed, the method of operating and the manner of holding the instrument would be reversed.



FIG. 128.—Trimming right second bicuspid from the buccal side, the thumb of the right hand resting on the thumb of the left hand.

The enlarged special scaler (Fig. 122) is used on the labial or lingual sides of the root and if there is sufficient room between it and the other teeth it can be used on all sides; but if there are adjoining teeth so close as to prevent this, then the smaller scaler, No. 7 (Fig. 123) or, if it is available, the diamond disk No. 2 can be used on the mesial and distal sides.

The scaler (Fig. 122) is the most universal, and can be used in almost every position where there is sufficient space between the teeth.

At times the enamel, principally of the cuspids and especially on the lingual side, is so heavy and so very firmly attached to the dentin that it is impossible to start it with these instruments in such cases, the Case enamel cleavers may be used to start with, and afterward the finishing is done with No. 3 scalers.



FIG. 129 shows nearly same position, but part of the force for stripping the enamel exerted by the thumb of the left hand.

The Case enamel cleavers (Fig. 138) have a strong sharp bit, and are very useful when a great deal of force is necessary. Their shape is such, however, that they do not leave the root smooth; the surface from which they have stripped the enamel is left in grooves and ridges, so that it is necessary to follow them with No. 3.

At times, even these instruments will not break the enamel, and it becomes necessary to start its removal with small carborundum points or diamond wheels, finishing with the No. 3 scaler.



FIG. 130.—Trimming the buccal corners of the upper left molar, force exerted by the first finger of the left hand.

### FACING ROOTS FOR VARIOUS FORMS OF CROWNS.

It has already been said that the stump should be left standing for a considerable distance out of the gum, until after the root has been trimmed and the band fitted.

**Richmond Crowns.**—In the case of a Richmond crown, after the root has been trimmed, the band fitted, and the canal enlarged, the stump is cut away labially to from one-thirty-second to one-sixteenth of an inch below the gum margin, so that when the crown is completed the band will be entirely hidden. Lingually if the bite will permit, it may be left standing about one-thirty-second of an inch out of the gum, so as to give addi-

tional support and strength to the crown, cutting the stump in a straight line from the lingual to the labial side (Fig. 119). This will apply to single crowns or those used as abutments for fixed bridges.



FIG. 131.—Trimming of lingual corners of the upper left molar, force exerted by the thumb of the left hand.

**Porcelain or Downie Crowns.**—For a porcelain crown a double slope is given to the root. The root is cut labially to the same depth below the gum as for a Richmond crown, but lingually it should be carried just to the gum border, leaving it high in the center.

The reason for this double bevel, instead of making it straight across from buccal to lingual, is that it is necessary to festoon the lower edge of the band to follow the gum line, and also to allow for



a greater bulk of porcelain in order to give increased strength. The septum of the process comes much higher up on the root mesially and distally than it does at the buccal and lingual sides of the teeth, and therefore it is necessary to festoon the band accordingly (Fig. 139).



FIG. 132.—Trimming of buccal corners of the upper right molar, force exerted by the thumb of the left hand.

If it were cut straight across, in order to place a perfectly flat floor on the band, the band would be cut entirely away mesially and distally, as shown in Fig. 140. As previously stated, the strength of porcelain is only in proportion to its bulk. For the purpose of illustration, we will exaggerate the figure somewhat, so as to make clear the reason for preparing the roots in the manner described.

We will suppose the case of an upper bicuspid crown where the bite is fairly close. It will be noticed that by giving a direct slope from the buccal to the lingual side, as would be done if it were a Richmond crown, that when the facing has been ground in place and the lingual side of the tooth built up with porcelain, it would



FIG. 133.—Trimming of lingual corners of the upper right molar, force exerted by the forefinger of the left hand.

render it very weak on that side, and would be quickly crushed, as there is so very little porcelain to give strength (Fig. 141).

If it were a Richmond crown where a gold back was to be used, then of course it would not make the slightest difference, as a small bulk of gold at this point would give far greater strength than would be possible if it were made of porcelain.

It will be seen that if the tooth is cut away to the gum line, so as to give it a double slope to the stump, that a much greater bulk of porcelain could be used with a corresponding increase in the strength of the crown (Fig. 142).



FIG. 134.—Trimming the buccal side of the lower teeth, on the right side of the mouth, force exerted by the finger of the left hand.

The facing of the roots may be done with a square-edged carborundum wheel, but this necessitates an unnecessary mutilation of the gum tissue. The best instruments for this purpose are the Ottolengui root facers (Fig. 143). These instruments are made in different sizes to correspond with the different teeth, and will

do the work perfectly with but little or no mutilation of the soft tissue.

As these instruments come from the dental depots, the guide point is very much longer than it should be, unless the root is to be faced perfectly flat and at right angles with the canal. In order



FIG. 135.—Trimming the lingual side of the lower teeth on the right side of the mouth, force exerted by the thumb of the left hand.

to slope the face of the root in either direction, the instrument is inclined either labially or lingually, and unless the canal be very much enlarged the end of the point will strike the opposite wall of the canal so as to prevent the instrument facing the tooth on an angle, as will be seen in the illustration (Fig. 144). This point

should be ground off so that its length is about the same as its diameter, and then there will be no trouble in sloping the face of the root in the desired direction (Figs. 145 and 146). If the root is much decayed and enlarged at the entrance to the canal, the length of the pin will make little difference.

In using these instruments, it will frequently be found that a facer, which is large enough to cover the root mesially and distally, will not reach the lingual and buccal sides.



FIG. 136.—Trimming the buccal side of the lower teeth on the left side of the mouth, force exerted by the thumb of the left hand.

After the floor has been united to the band and placed on the root, it may be that it does not go under the gum so as to be hidden. On removing the cap and examining the root, it will be seen that the facer has left a little ridge of dentin on the labial side which has prevented the band from going to place (Fig. 146). Where such is the case, by reaming the canal a little labially or lingually



FIG. 137.—Trimming the lingual side of the lower teeth on left side of the mouth, force exerted by the finger of the left hand.

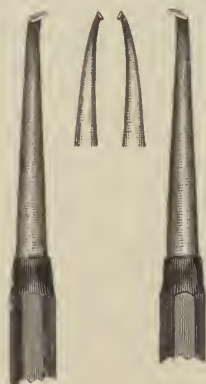


FIG. 138.—Enamel cleavers.



as shown by the illustrations (Figs. 145 and 147), and enlarging the entrance to the canal to a slight depth, it will allow the facer to cover the root at both of these places.



FIG. 139



FIG. 140



FIG. 141



FIG. 142



FIG. 143.—Root facers.



FIG. 144



FIG. 145



FIG. 146



FIG. 147

## CHAPTER VII.

### IMPRESSIONS AND MODELS.

AN impression for a working model on which a crown or a bridge is to be made should always be taken in plaster. Modeling composition, wax or any of the plastic materials which are used for taking impressions should not be used for a working model, as there is no plastic impression material made which will give an accurate impression where there are undercuts or dovetailed spaces. The material will draw and drag, and become distorted in removing, with the result that the model made from such an impression will not be a perfect reproduction of conditions as they exist in the mouth.

#### IMPRESSION AND MODEL PLASTER.

A first class impression plaster should be fine and quick setting, thus rendering the impression soft and easily cut away from the model in separating.

A good model plaster, on the contrary, is coarse and slow setting, and becomes very hard.

The difference between a good impression plaster and a good model plaster can be instantly determined by rubbing it between the fingers. The impression plaster will be fine and smooth like flour between the fingers, while the model plaster will be coarse and the grit is plainly felt.

If so situated that it is difficult to secure the different grades of plaster, it is better to procure the hardest model plaster that it is possible to get. Then, by bolting this through a fine cloth a good impression plaster will be secured, in the finer material which passes through the cloth, and at the same time, by removing this fine plaster, the model plaster will be improved. It will be slower setting, and its hardness increased.

#### WEINSTEIN'S ARTIFICIAL STONE.

This new material (a calcium barium silicate) is eminently suitable for making models and articulations for bridge-work, vulcanite-work, and other purposes, where a stronger and more durable mate-

rial than plaster of Paris is required. Models made from it, are remarkably hard and durable and not friable, like plaster of Paris or any of the Portland cement preparations.

Another most valuable property of the artificial stone lies in the fact that it possesses practically no expansion or contraction. Upon periodic examination of a number of specimens under test for a year, no measurable change was found after the initial set had taken place. It contains no gritty or coarse particles and models made of it are very dense and smooth.

The following instructions for manipulating artificial stone are given by Mr. Weinstein:

**Proportions for Mixing.**—Accurate proportioning of the powder and the water that it is mixed with is imperative, and the results far more than repay the little effort that it takes to weigh out the powder and measure the water. For an upper or lower model, the following proportions are suitable: To  $1\frac{1}{2}$  fluidounces of water add 78 to 80 dwts. (Troy) of the artificial stone powder.

The mixing is done in a rubber bowl, first incorporating approximately one-half of the powder, and gradually adding the balance, until all the powder is thoroughly incorporated. If the proportions taken are correct, the mass will be as stiff as a very thick mix of plaster.

**Preparation of Impressions.**—The impression, if plaster, should be varnished with one coat of shellac, which should be allowed to dry for at least a half hour, and then varnished with a coat of sandarac, which should be allowed to dry for at least one hour. The impression should then be immersed in water for at least five minutes, so that it may become thoroughly saturated. It is then removed and the excess water blown off with compressed air or wiped off with cotton, leaving the surface of the impression moist, but not wet. It is important that this be strictly observed, as a dry impression will absorb moisture from the artificial stone, while it is setting, and produce a poor model. Modeling compound, or wax impressions require no special treatment.

**Filling Impressions.**—As the artificial stone is mixed quite thick, it cannot be poured like plaster, but must be brushed or packed carefully into all deep parts before filling in the bulk to build up a model. To facilitate the placing of the material into deep crevices or depressions, such as are found in an impression of a case with standing teeth, the following suggestion will prove helpful: Prepare the mix according to the proportions given; take off about one-half

teaspoonful, place it in the palm of the hand, or on a cement slab and incorporate with it some additional powder until it becomes as stiff as putty. Prepare from this small mix a number of small cones, lay them aside; work down some of the regular mix into the deep recesses, using a small brush or other means, then place a cone into each depression and tamp down with a small stick or the craser end of a lead pencil. This will serve to force the plastic mix into all inaccessible places. The balance of the impression may then be filled in practically the same manner as in manipulating a thick mix of ordinary plaster. As this material sets quite slowly, ample time may be taken to fill the impression carefully.

**Separating Impression.**—The filled impression should be permitted to set at least four hours prior to separating; however, it should not be allowed to stand more than twelve or fifteen hours before separating as the hardness gradually increases, making it more difficult to do the required trimming.

The model will become as hard as well-set plaster of Paris within six or seven hours after pouring, and may then be used if necessary. The maximum hardness is attained within thirty-six to forty-eight hours.

### IMPRESSION AND BITE.

In order to secure perfect results, the model on which the bridge is to be constructed must be as nearly perfect as it is possible to make it. The impression must be clear and sharp, so that the caps and bands, which have been in position in the mouth when the impression was taken will fit accurately into place.

It is necessary that the articulation should be as perfect and accurate as is the model. It often happens that in the case of small bridges, or single crowns, this can be best secured by taking what is known as a "squash bite," that is, taking the impression and bite simultaneously in plaster and by so doing more accurate results will be obtained than it is possible to secure in any other way.

In taking the impression and bite in this manner, the plaster is allowed to become quite hard and is then carefully broken away and afterward the broken parts are easily assembled, and the model secured from this will be a perfect reproduction of the required part of the mouth.

As a general thing, however, where the case is extensive, or where a full upper or lower is to be constructed, it is better to take a bite of wax or modeling composition and then take full impressions of the

upper and lower mouth in plaster, using suitable trays for the purpose.

In constructing a full denture, it is *very* necessary, more so than in the making of small pieces, that the articulator which is used should always be one which will give all of the natural movements of the mandible. The Gisi, the Gritman or the Snow articulators can be used, but the two latter are recommended as being more simple and easy of manipulation (Fig. 166).

The Gisi is a very scientific piece of mechanism, but it is more intricate and there are comparatively few who have as yet worked it out.

The index rods of the face-bow are adjusted to the external ends of the condyles and then laid aside. The caps, bands or saddles, which have previously been made, are carefully put in place and made secure. A bite is then taken, in modeling composition preferably, using only enough to secure a perfect seating on the sides, and as much over the front as will permit of the firm of attachment of the semicircular disk to which the stem of the face-bow is attached. This should be done very carefully and it is well to remove and replace it once or twice to see that it is all right. The mouth is then closed firmly on the bite, the lips are held away, and the semi-circular disk heated and pressed well into the modeling compound and the stem held straight out from the median line until it and the composition bite have been thoroughly chilled. The clamping device is then slipped over the stem, the index rods held in place over the external ends of the condyles and the clamp fastened very firmly to the rod, after which the bite with the face-bow attached is removed from the mouth.

Careful plaster impressions are now taken of both the upper and lower mouth, using suitable trays for the purpose, leaving all of the bridge attachments in place.

After the impressions have hardened, they are removed from the mouth and if they are broken they are reassembled, the caps and attachments are removed from the mouth, replaced in the impressions which are prepared as will be given later on page 138. The models are then made of hard plaster, or preferably of "Artificial Stone" (see Weinstein's article on page 130).

When they are separated, the bite is carefully fitted to each one separately and after they are perfectly adjusted, they are both held together and waxed to keep them in proper relation while they are being mounted on the articulator.



The bite being of modeling composition and hard, allows of its being trimmed away with coarse burs at any point where it is desirable, to let it down properly on the model.

The index rods are now attached to the articulator and the models are fastened to the bows and properly built up with plaster.

After the plaster has hardened, the face-bow is removed and the bite taken from the models by softening it in warm water, thus releasing the halves and giving perfectly articulated working models.

### COLORING AND FLAVORING IMPRESSION PLASTERS.

It is an excellent idea to tint the impression plaster slightly, as this difference in color from the model will very materially aid in separating the impression from the model. Another good plan is to flavor the plaster slightly. It has been the custom of the writer for many years to tint the impression with carmine, and also to use a few drops of cologne in the water in which the plaster is mixed. This cologne not only imparts an agreeable flavor to the plaster, but in many instances it will entirely overcome the nausea to which some patients are subject when plaster is placed in the mouth. It has been found that in many instances, where it has been impossible to get a plain plaster impression without the patient becoming nauseated, that these few drops of cologne water will entirely prevent it.

The method of preparing the carmine and cologne solution is as follows: A half-ounce bottle is filled about one-quarter full with carmine, and the bottle then filled up with strong ammonia, this being the only agent available that will thoroughly dissolve it. This solution is well shaken and left standing until the carmine is all dissolved. The bottle is then left unstoppered for a day or two, until the fumes of ammonia have passed off.

About one-fifth to one-quarter of this carmine solution is put in a six-ounce bottle and the bottle filled with cologne and this gives us the coloring and flavoring solution. A few drops of this solution is added to the water in which the plaster is to be mixed, thus giving it the color and flavor desired. The cologne used must be an alkaline solution, as should it be acid it would precipitate the carmine without coloring the plaster.

The setting of the plaster may be hastened in many ways, and it is generally desirable that this be done in taking impressions. It may be accomplished by mixing the plaster with warm water or by adding to the water a little common salt, or potassium sul-



phate. Much stirring also will have the same result. The proportions of water and plaster used will also accelerate or retard the setting. The writer prefers the potassium sulphate for this purpose, as a very little will accomplish the purpose, and it does not impart a disagreeable taste to the mixture as is the case where the salt is used.

The amount used depends on the size of the impression which is to be taken. If this be small, we can use proportionately more than we could for a large impression, as a longer time is required to spread the plaster in the mouth for a large impression than it does for a small one. In the case of a full impression, very little should be used, and at times none at all. The amount used, however, will also depend upon the particular batch of plaster with which we are working, as there is hardly any two lots of plaster which will work exactly alike, some setting much more quickly than do others. In getting a new supply of plaster, it is always best to make one or two mixes, before using it in the mouth, in order to become familiar with its properties.

To get the best results for impressions, the plaster should also be thoroughly mixed. The method for mixing is as follows: First place a little of the potassium sulphate in the bowl, then as much water as is needed for the impression under consideration, adding a few drops of the carmine and cologne solution, enough to give a decided tint to the water. The plaster should never be thrown in the bowl carelessly and in large quantities, but should be sifted into the water carefully and in small quantities, taking it on the spatula and sifting it round the edges of the bowl. The plaster will work toward and settle in the center so that there will be no air confined in a mass of dry plaster.

The plaster should be added slowly until it comes just about to the surface of the water, but not enough is used to take up all the moisture. This is then carried to the chair without stirring. By refraining from stirring the mix, the plaster does not begin to set at once and it will give some little time in order to examine the mouth and see that everything is all right, the caps in position, etc. After it has been ascertained that everything is as it should be, begin mixing the plaster, stirring it with the flat of the spatula and cutting through the mass with the espatula held edgewise to work out the air bubbles. The stirring should be kept up until the plaster is just stiff enough so that it will not drop from the blade of the spatula when it is inverted. It is then ready for use in the mouth.

### TAKING A SQUASH BITE AND IMPRESSION SIMULTANEOUSLY WITH ABUTMENTS IN PLACE.

First cover well with the plaster the bands or caps on the abutments, and then fill in the spaces between the abutments, and also taking in several of the adjoining teeth. The occlusal surfaces of the occluding teeth are also covered with the plaster.

The patient is then instructed to close the mouth tightly and the teeth which have not been included in the impression are carefully examined to see if the proper closure has been obtained.

**Securing the Proper Closure.**—At times it is very difficult to get the patient to close the mouth properly on a mass of plaster or wax. There are many different ways of inducing the patient to give the proper bite, such as having the patient swallow, throwing the head far back while closing the mouth, and at times even using force to throw the chin back to where it belongs.

The writer has frequently found that where every other method would fail, a proper closure could be secured if the patient would turn the tip of the tongue as far back on the soft palate as possible and hold it there while bringing the jaws together. It will be found that it is impossible for a patient to give a wrong closure if the tongue is held in this position until the jaws are closed, as the chin cannot be thrust forward or from side to side without moving the tongue.

The impression should be left in the mouth until the plaster has become thoroughly hard and brittle. This is ascertained by testing from time to time the plaster remaining in the bowl. As soon as it breaks with a clean, sharp fracture, and when a small particle rubbed between the thumb and finger cannot be crushed, the impression will be sufficiently hard to be removed from the mouth, but as long as the plaster can be crushed between the thumb and finger and moisture squeezed from it, it should not be removed.

When it has thoroughly hardened, the patient is instructed to open the mouth, and the impression is carefully removed, every broken particle being saved. It is very rarely that an impression taken in this manner will come away whole, but will be more or less broken up, sometimes in many pieces. It is well to have a little tray with the bottom covered with a piece of blotting paper, on which to lay the impression. The broken parts, as they come from the mouth, should be so placed on this pad that it can be remembered where they belong. This will render much easier the task of putting together the broken impression.

The caps and bands are then removed from the abutments. If any of the abutments are in the anterior part of the mouth where bands are supposed to be hidden, the stumps should be protected. This can generally be done by simply taking a piece of base plate gutta percha and rolling it something in the shape shown in Fig. 148. The root is then thoroughly dried, the gutta percha slightly heated and the small end introduced into the canal. The bulbous portion is then pressed over the edge, forcing the soft tissues away. This will prevent the gum from growing over the face of the root, and will render the subsequent placing of the band or cap much easier than it would otherwise be.

At times a large-headed tack may be used for this purpose. The point of the tack can be shortened, so as to allow the head to come flush with the gum line. The shank is covered with base plate gutta percha, and it is then warmed and forced into the root and the surplus gutta percha carried over the head of the tack, so that the metal will be covered (Fig. 149).



FIG. 148



FIG. 149

**Treatment of Impression.**—After the impression has been removed from the mouth, it should be left on the blotting paper for from fifteen to twenty minutes, so as to allow the excess moisture to be absorbed, but not long enough to dry the plaster, as the impression can be put together more easily and quickly, and also more accurately, if the impression is a little moist. The parts are then carefully assembled and fastened together with a strong wax. The wax for this purpose should be sticky, tough and sufficiently hard so that it will not bend in the handling.

The writer has found that the following formula will make the best wax for this purpose:

Pure white beeswax . . . . .	16 ounces
Pure white resin (powdered) . . . . .	3 "
Gum damar (powdered) . . . . .	3 "

It should be melted in the order given, and well stirred until the powdered resin and gum damar are thoroughly incorporated

with the wax. It can be poured in cups or moulds, or rolled into sticks of any desirable size or length.

The ordinary dark beeswax and dark resin, may be used in making the wax, but it does not make a hard wax that is as clean and nice to work as does the white. We must be certain, however, that the beeswax is perfectly pure. If there should be the slightest trace of paraffin in it, the wax made from it will be worthless.

After the impression has been put together, the caps and bands are put back in it in their original positions, care being taken to see that they fit exactly into place. They are then waxed firmly in the impression with sticky wax. In the case of an anterior abutment where we have a cap and tube, the cap is held in position firmly with the instrument, and the edges of the band are waxed tightly labially and lingually (Fig. 150, points *a* and *b*) before waxing it on the sides, thus holding the caps immovable while the sides are being waxed. If we attach it in one place only at first, say on the lingual side of the cap, the contraction of the wax on cooling is liable to



FIG. 150



FIG. 151



FIG. 152



FIG. 153

draw the cap away from the impression labially, thus giving to it a false position, so that, after the model is made and the bridge completed, it will be found that it will not go in the mouth as it should.

The edges of the caps standing out of the impression are waxed heavily on the outside with hard, sticky wax (Fig. 151). This will not only hold the band in place, but will also help to hold the impression together. The inner side of the cap is covered with a very thin film of pink paraffin wax. In the case of a cap for a shell crown, or where the band is larger at the occlusal end (Fig. 152), enough wax should be put on the inside of the band to obliterate any undercuts or dovetailed spaces (Fig. 153). If there are pins or tubes in the caps they should also be covered lightly with the paraffin and wax.

The gingival edge of the band should be scraped clear of wax, so that it will set down tightly to the model. The object in having the outer edges of the band covered thickly with wax we will now explain.

If we put but a thin film of wax around the outer edge, as we do on the inside of the band, it will be noticed that after the model has been made and the band removed, that there is a fine groove in which the gingival end of the band rests (Fig. 154). The result will be that after taking off and putting on the cap a few times, some of the plaster may be scraped from around the sides of the stump which, working into the groove, will fill it partially, with the result that by the time the crown is completed, the band may not go nearly as far beneath the gum as it was originally intended that it should (Fig. 155); whereas, if it is waxed heavily on the outside, when the band has been removed, the wax is stripped away, leaving a wide groove on the model around the stump, so that if any plaster is scraped from the model and gets into the groove, it is quickly noticed and easily removed (Fig. 156).



FIG. 154



FIG. 155



FIG. 156

**Separating Medium.**—Different materials are used for this purpose such as soap, oil, shellac, or sandarac varnish, or shellac and sandarac varnish combined. Oil is a very good separating medium but the surface of a model cast in an oiled impression is never as hard as it should be, and it is also more liable to be porous. The same may be said of soap, as a separating medium. It makes separating the impression from the model very easy, and will give a clear-cut, sharply-outlined model, but as in the case of the oiled impression, the surface of the model will not be very hard. If soap is used, after using, the impression should be thoroughly washed with clear water, otherwise there will be bubbles and a porous surface which will render the model unfit for use.

Shellac is used by many to first color the impression, which is then given a coating of sandarac varnish. The use of both of these varnishes is unnecessary, as, if the sandarac varnish is slightly colored, it will accomplish the object. The varnish can be colored with various dyes, but a very simple way is to scrape a little of the crayon of an indelible pencil into the varnish, this dissolves almost instantly and imparts to it a purple color.

The impression, which is varnished until it has a glazed surface, will give a model with a much smoother and harder surface than it



is possible to secure by using soap or oil. However, the varnish should not be so thick as to obliterate the fine lines which we wish to preserve in the model.

The impression should be slightly moist in order to take the varnish and leave a glazed surface. If it is placed on a blotting pad and left for fifteen or twenty minutes after the impression has been removed from the mouth, it is generally in the right condition to take the varnish best. If the model is too dry, the varnish will soak in and not give a glossy surface. If the impression stands for some hours after taking before assembling and varnishing, it will have become too dry, and should be dipped in water and then placed on a blotter for a few minutes, before varnishing. If the model is too wet the varnish will not stick, but will roll up and scale off.

As soon as the varnish has hardened, which will be in five or ten minutes, the impression can be dusted with talcum powder, which is afterward blown out with a chip blower. This will render the separation of the impression and model very much easier.

### TAKING IMPRESSIONS IN SECTIONS.

At times it is desirable to secure an impression where the teeth are very much loosened, and where it would be impossible to obtain an impression in an ordinary tray, with any material, without risk of removing the teeth with the impression, and also causing the patient considerable pain.

There are times when some of the lower incisors may be so loose that it would be possible to remove them easily with the thumb and finger, yet it is desirable to retain them in position for a time, with some kind of a splint. By taking the impression for a case of this kind in sections, it can be done without pain to the patient, or without the slightest danger of removing the teeth.

The plaster is prepared and mixed the same as described for taking an impression and bite simultaneously. The teeth are pressed into their proper position and held so with one of the fingers of the left hand (Fig. 157). With the aid of a spatula the plaster is placed on the lingual side of the teeth and smoothed off, letting it extend a little above the incisal edge.

After the plaster has hardened, the finger is removed from the labial side, the plaster holding the teeth firmly in place. The plaster is then trimmed flush with the incisal edges, beveled on the lingual side and then slight grooves are made in one or two places



to serve as guides in putting the sections together (Fig. 158). This is now covered with a separating medium and for this purpose a soap solution is most convenient.

A fresh mix of plaster is then made, and the labial side of the teeth is covered heavily, the plaster being carried over the incisal edges, and over the beveled portion of the plaster impression on the lingual side (Fig. 159). It is then left until it has become quite



FIG. 157

hard. The labial side of the impression is then pried away, forcing it outward and upward, after which the lingual side is carefully removed.

These two halves are then put together and waxed, and we have as perfect an impression as it is possible to secure (Fig. 160), giving the interspaces between the teeth, which cannot be gotten by any of the ordinary methods of impression taking. When the model has been made from this impression, it gives an exact reproduction of

the teeth in their normal position, from which a splint or retaining appliance can be made.

This method of impression taking may also be employed to advantage in any case where there are dovetail spaces or deep undercuts. It is also valuable in securing accurate models for orthodontic or other purposes, or in the reproduction of models.

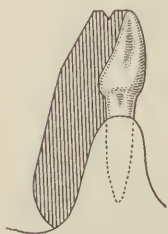


FIG. 158

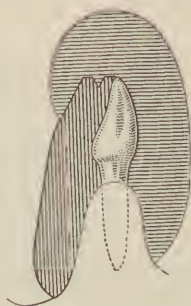


FIG. 159

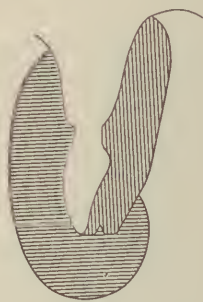


FIG. 160

When it is desirable to get a very accurate impression of a lower jaw, where the teeth are inclined very much lingually, or where there are dovetail interspaces where teeth have been lost, by employing this method impressions of the greatest accuracy are easily obtained.

In securing a full impression, the lingual sides of the teeth are first covered, the plaster being carried well down over the gum, and then smoothed so that the sides will slope away from the sides of the teeth the same as a core on an undercut model in getting a



FIG. 161

mould for casting a die (Fig. 161, *a* and *b*). The upper side is trimmed, preferably, about one-thirty-second of an inch below the occlusal surfaces of the teeth. The plaster is then given a coating of the soap solution, and an impression taken over this, using an ordinary tray, carrying it well down over the plaster which has been placed on the lingual sides of the teeth (Fig. 162).

After the impression has hardened, the tray is removed together with the impression, leaving the plaster cores first placed on the lingual sides of the teeth, still in the mouth (Fig. 161, *a* and *b*).

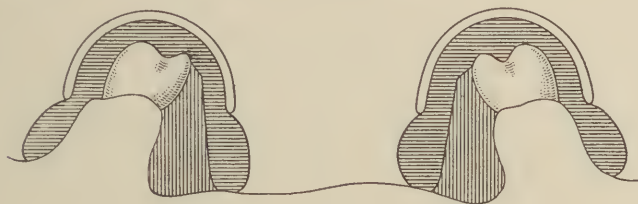


FIG. 162

These pieces are then pried away and placed back in the impression in the tray (Fig. 163).

A full and perfect impression of the mouth has thus been secured from which a much more accurate model can be made than it is

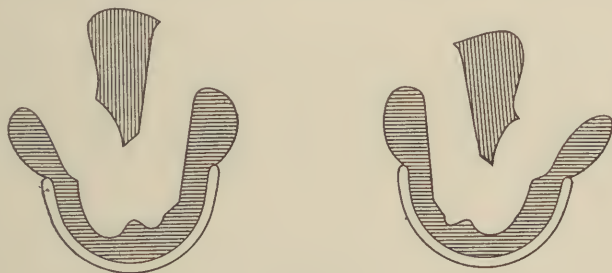


FIG. 163

possible to obtain from an impression taken in the ordinary manner. This method will also be found very useful where an exact reproduction of a plaster model is desired.



FIG. 164

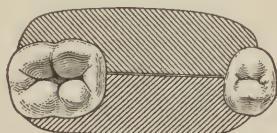


FIG. 165

An impression of dovetailed interspaces, from which teeth have been lost (Fig. 164), can easily be obtained by putting plaster first on the lingual side of the teeth, and letting it come to about half

way through the space to the buccal side. This is smoothed off, covered with a separating medium, and filled in from the buccal side (Fig. 165), and an impression taken over that in a tray in the manner already shown in Fig. 162.

### ARTICULATORS.

In crown and bridge-work, the question of occlusion is of most vital importance, as the stability and life of the work depends to a very great extent upon its proper occlusion with the opposing teeth.

In all extensive cases of bridge-work, it is absolutely essential the only first-class anatomical articulators, capable of reproducing the natural lateral or triturating movements of the mandible, so necessary for perfect mastication, should be used (Fig. 166). For single crowns, and at times for small bridges, it is at times permissible to use some other type.

Nearly all of the small, so-called crown articulators on the market are absolutely worthless so far as securing good results are concerned. With these articulators, the only movement possible is simply the up and down, or opening and closing movement of the mandible. Of late, however, a few small articulators have been placed on the market which are capable of imitating the various movements of the lower jaw.

A plaster articulator, if it is properly made, will give excellent results for single crowns and also for small bridges, and the manner of making such articulations will be described further on.

In making an entire denture, the matter of occlusion is of especial importance, and the difficulty of securing an accurate articulation is far greater than where only a portion of the teeth are to be restored. If a full bridge is to be made for the upper jaw, and the majority of the teeth in the lower jaw are in place, the attachments for the molars can be made and if properly articulated will then serve as a guide in getting the bite, or the occlusal surfaces of these teeth may be built up with cement so as to interlock with the lower teeth, and open the bite to the proper distance.

In some of these cases, however, the impression and bite can be taken in plaster, the same as in smaller cases, and the face-bow used to serve as a guide to mount the models properly on the articulator. The semi-circular plate, to which the stem of the face-bow is attached, is pressed in the soft plaster as soon as the patient has

closed the mouth and the upper surface of the disk partially freed from the plaster, as it is necessary to remove it to permit of the plaster impression being nearly all cut away before the model is mounted on the articulator.

The face-bow is used in exactly the same manner as in taking a modeling composition or wax bite as previously described. The index rods are adjusted to the external ends of the condyles and the stem of the plate, which is imbedded in the plaster, is fastened in the clamping device and the whole retained in place until the plaster has thoroughly hardened, when the impression with the bow attached is removed from the mouth.

It will be remembered that after imbedding the disk in the impression, the plaster has been scraped partially away from the upper surface for the purpose of weakening it so that the disk can easily be removed. This is done by holding the impression in one hand and grasping the stem in the other and lifting it until it breaks away, care being used not to disarrange the adjustment of the stem in the clamp on the bow.

The caps and bands are now removed from the mouth and carefully put in the impression and waxed in place, in the manner already described, and the impression varnished. After varnishing it is well dusted with talcum powder and the surplus powder is blown out with the chip-blower so as to render the separating easier.

The lower half of the model is cast first and the surplus plaster placed on a slab. The model is then placed on the plaster and leveled very carefully. After this has hardened, the upper side is cast and this is also inverted and placed on the surplus plaster on the slab, leveling it so that this side is parallel with the lower half. In casting both the upper and the lower, care must be used not to get any plaster at the point where the plate, from the face-bow, has been broken away.

After the model has thoroughly hardened, the bulk of the impression is carefully cut away, simply leaving a few points of contact to hold the halves in position and also preserving the surfaces where the semicircular plate has been attached. The plate is then carefully fitted in its proper position and waxed firmly. The bow is attached to the articulator and the models are fastened to the articulator with plaster. The face-bow is now removed and the remainder of the impression is cut away.

If the face-bow has not been used, the model is prepared in the



same way, casting the lower half first and leveling it very carefully on the surplus plaster on the slab, so that the occlusal plane will be as nearly correct as it is possible to make it. The upper half is then cast in the same manner and made so that the upper and lower surfaces are perfectly parallel.

After the model has thoroughly hardened, the impression is cut away, leaving only three or four points of contact to retain the parts in their normal position. In such cases, the anterior part should be well exposed, and also the buccal sides of the molars on each side of the model, so that the position of the median line can be determined. The exposed parts will serve as a guide in mounting it on the articulator, after which the remaining parts of the impression can be cut away.

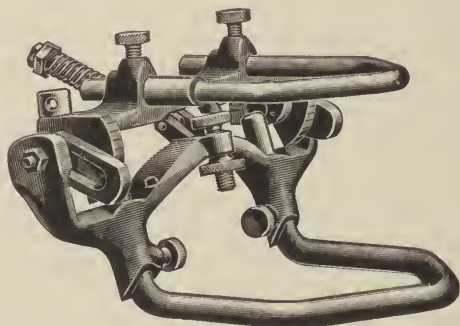


FIG. 166

**Making a Plaster Articulation.**—It is always best to follow some fixed rule in making small models from a “squash” plaster impression and bite. In fact, to follow some fixed rule of procedure in all of our operations will be time-saving. The lower half of the model is always cast first, irrespective of which jaw the bridge is being made for. The object of this is as follows:

A very large proportion of bridges made are those which restore teeth which have been lost from either side of the mouth, extending from the bicuspid to the molars. The models for these cases will often be made on nearly a straight line, their shape giving no clue as to which side of the mouth they belong. After the two halves have been cast, the next step, after removing it from the slab, will be to cut away the surplus plaster, and do a portion of the trimming before separating. If the rule of casting the lower half of the model



first has been followed, as soon as the distal portion of the model has been trimmed sufficiently to show upon which half the grooves were cut, it can be told at a glance which is the upper and which is the lower half. (Fig. 167). This enables the operator to tell very nearly where the abutments are located, and knowing this, the

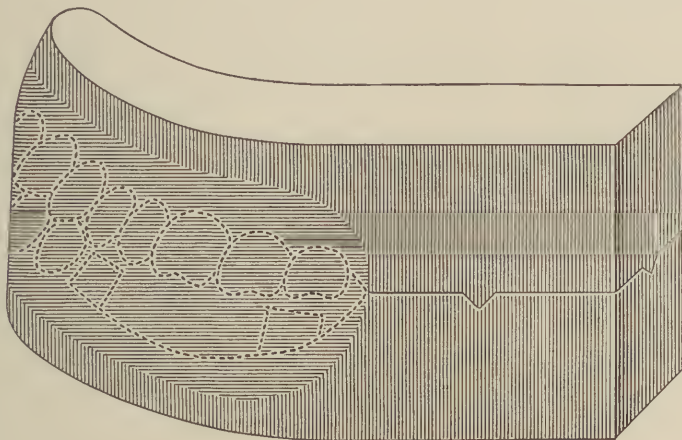


FIG. 167

impression can be cut away more quickly and certainly than if the models were made in a haphazard way. In the latter case, the operator would have to work much more cautiously, carefully cutting into the impression until a part of the model was exposed, before determining which was the upper and which was the lower, thus losing many minutes of valuable time.

### CASTING OF PLASTER MODELS.

The models should always be well made and neatly prepared, and should also be of a size corresponding to that of the work which is to be done upon them.

A piece of work should never be undertaken on an irregular and ungainly mass of plaster, called a model. The models should be carved and finished neatly. It is an old saying that a good workman can do good work with poor tools and instruments, but there is no question but that he could do much better work if he had better tools and instruments with which to do it, and so can a man do

much better work on a model which is well and neatly prepared than it is possible to do on one which is poorly made.

As previously stated, the model plaster should set very hard and is coarser than the impression plaster. The difference between the two can be readily distinguished by simply rubbing it between the fingers, the impression plaster being fine and smooth like flour,

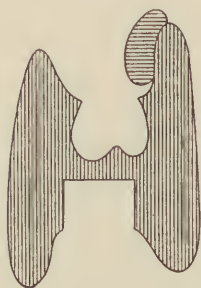


FIG. 168

while the model plaster will feel coarse and rough in comparison. In mixing the plaster, cold water is used and nothing should be added to hasten the setting as this will tend to make a softer model. The water is first put in the bowl and then the plaster carefully sifted from the knife or spatula around the edges of the bowl, allowing it to work toward the center. The plaster is slowly added until all the moisture is taken up so that it will be a fairly stiff mass. The plaster should never be so soft that it can be poured into the

impressions. It is well to remember that the stiffer the plaster is mixed, the harder will be the model. It should be stirred just enough to thoroughly incorporate the plaster and follow this by cutting through the mass, with the blade of the spatula edgewise, to work out any air bubbles which may be there.

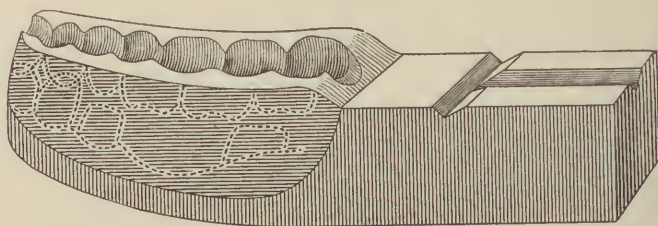


FIG. 169

The impression previously coated with a separating solution and dusted with talcum powder, is dipped in water and the water lightly shaken out, leaving very little in the deeper parts. A small portion of the plaster is then placed on the sides of the impression and worked down into the deeper parts by jarring it with the hand (Fig. 168), adding a little at a time, and working it down gradually, so that no air bubbles are enclosed in the mass. This is continued

until the impression is filled. The excess of plaster is then placed on a glass slab and the impression inverted and pressed into it. The excess plaster should extend about one to one and a half inches back of the impression (Fig. 169). This can then be smoothed off and grooves cut into it to the depth of a little less than one-eighth of an inch, say about three-thirty-seconds, one groove being cut at right angles to the mass, and the other parallel with the sides and in the center of the extension (Fig. 169.)

A simpler and quicker method is to use the little articulating plates designed by the writer, and which can be purchased at any of the dental depots (Fig. 170). They were carefully designed and much study was given to the depth of the grooves which they would make in the plaster. The grooves are made so that with the lateral movement, the model will be raised and lowered to about the same degree as the cusps would give to the same movement in the mouth. If the grooves are made too deep, in moving the model in any direction, the articulator would be opened too wide, and if they are too shallow the movement would not be sufficient.

These articulating plates are used as follows: The excess of plaster is extended backward from the impression about one to one and a half inches. The lower side of the plate is moistened and covered with soft plaster and is then pressed into the surplus extend-

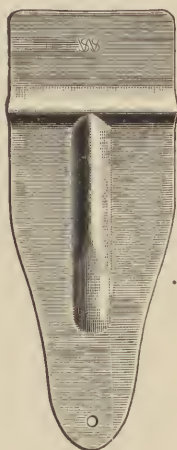


FIG. 170

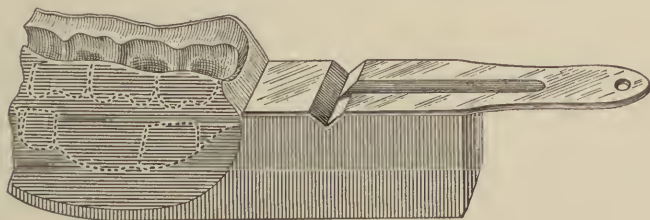


FIG. 171

ing back of the impression, so as to come even with the occlusal surfaces of the teeth (Fig. 171). The excess of plaster is trimmed away from the impression and flush with the edges of the plate and the model left until the plate will come away by simply touching

it lightly on the under side of the extending handle. This will generally be in from five to eight minutes after the model has been cast. It is not well to undertake to remove the plate forcibly before the plaster has hardened, as, if this is done, the plaster will adhere to it and will roughen or destroy the articulating surface.

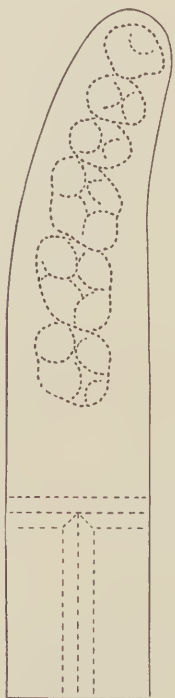


FIG. 172

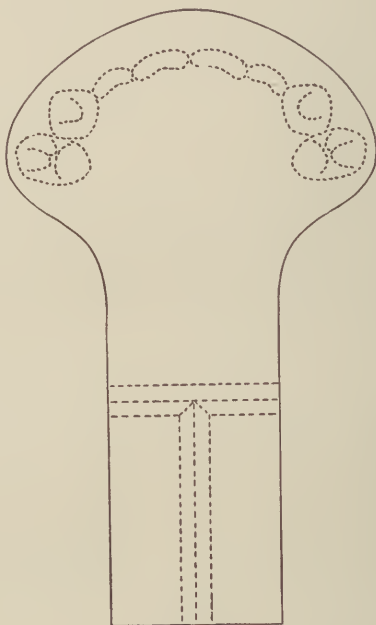


FIG. 173

After the plate has been removed, the grooves will be in the right position and of proper depth. The model is loosened from the slab by holding the slab over the Bunsen flame for an instant. It is then trimmed, the sides smoothed and the articulating surface varnished with the colored sandarac.

The second or upper half is now cast in exactly the same way, wetting it and then jarring the plaster in, a little at a time, until the impression is filled and the plaster carried back to about the same depth over the articulating surface.

The excess plaster is then put on the slab as before and the piece inverted and pressed into it, keeping both sides parallel. After

it has become sufficiently hard to remove it from the slab, it can be trimmed and smoothed, preparatory to separating (Fig. 167).

In making the articulation, the model should be made to articulate so that the movements will be exactly the same as in the mouth. If the crown or bridge is on the side of the mouth, the articulation should be carried directly back from the molars following the line of the arch (Fig. 172). If it is in the anterior part of the mouth, it should be directly back of and in line with the median line and the center of the palate (Fig. 173).

### SEPARATING THE IMPRESSION FROM THE MODEL.

When the plaster for the impression has been tinted, the impression and model are easily distinguished by the difference in coloring. It can readily be seen, from having run the lower half first, on which half of the model the bridge is to be made, and knowing that the occlusal surfaces of teeth are on a line with the articulating surfaces of the model, it is possible to determine very nearly where the abutments are located. The impression is rapidly cut away over these abutments until they are exposed, and they will serve as a guide for removing the remainder of the impression. This should be done very carefully and after it has been removed, the separation of the balance can very easily be completed by working them slightly from side to side or introducing the point of the knife between the forward end of the articulating surface and twisting it a little. The model is then trimmed and carved as may be desired.

**Preparing Working Models.**—In making a bridge for the back of the mouth, where the abutments are to be shell or telescope crowns, if the teeth are properly prepared, the entire work of making the bands and completing the bridge can be done on the model. There will be no necessity for seeing the patient after we have taken the impression and bite, and we can be sure that the bridge, when completed, will go in place as it should.

When the work is to be done entirely on the model, the teeth must be carefully and accurately trimmed, and not only should the abutments be parallel, but there must be no ledges below the gum line which will interfere with the placing of the bands in position.

Extreme accuracy in the preparation of the abutments, so that the sides will be only slightly larger beneath the gum line and practically free from ledges, will come only with practice, and by using great care in the work. The knowledge that if this perfect



preparation is accomplished, all of the work can be performed out of the mouth, will serve as an incentive for the operator to put forth his best efforts.

It is always advisable to do as much of the work as possible on the model and only such as may be necessary in the mouth, as the moral effect on the patient is something to be desired. It does not make any difference how skilful the operator may be, his best efforts will, at times, seem clumsy to the patient. They do not always realize the care and accuracy which is absolutely essential in fitting the band. The constant taking off, trimming and replacing the bands on the teeth is necessarily painful, and may at times suggest to them that if the operator was as skilful as they had supposed, he should be able to do the work more quickly, and with less pain. On the other hand, if, after the impression has been taken, they are not required to call again until the bridge is completed, it will seem to them marvelous that such beautiful work could be produced from an impression that appeared to them to be but a few worthless bits of broken plaster, and they will immediately be inspired with a much higher opinion of the skill and abilities of their dentist.

After the models have been separated and carved, they should be thoroughly dried with a gentle heat. If they are dried rapidly, the plaster will become baked, with the result that it will be soft and chalky, easily crumbled between the fingers, and worthless as a working model. In cold weather, by placing the models in front of a register or over a radiator, the proper amount of heat to dry them slowly and render the models hard will be obtained.

After the models are thoroughly dried out, they should be carefully trimmed. This is best done with a fairly broad hoe-shaped excavator (Fig. 174), with the edges of the inner sides of the instrument slightly rounded so that it will not scrape the sides of the abutments. The plaster is carefully cut away to about one-sixteenth of an inch beneath the gum line, using great care to cut to the same depth all around, and also, not to scrape the sides of the stumps so as to change their size and shape, otherwise bands which are fitted to the model will not fit the teeth in the mouth (Fig. 175).

After the stumps have been carefully trimmed, the models should be thoroughly saturated with dilute sandarac varnish. This can be done by using a brush and painting them repeatedly with the solution, giving them one coating after another as long as the



varnish will soak into the plaster, or until it begins to glaze. If the models are not too large, they may be placed in a large jar of the varnish, with just the working parts immersed, and left in it until they have taken up all that they will. The varnish should be thin so that it will soak well into the plaster. The sandarac varnish as procured at the dental depots, diluted from one-half to three-quarters with alcohol, will be of about the right consistency.



FIG. 174

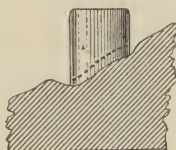


FIG. 175

The models are now again dried out thoroughly with a gentle heat, and it will be found that the surfaces are extremely hard. By using care, a number of pieces might be made on the same model, with but little or no abrasion of the stumps.

There are other ways of hardening models. A favorite one is, after they have been carefully prepared and thoroughly dried, to boil them in sterine or paraffin. This makes a beautiful model, but one not as good to work on as those which have been treated with sandarac varnish. The varnish makes them much harder and gives them a better wearing surface.

## CHAPTER VIII.

### BUILDING UP BROKEN-DOWN ROOTS WITH AMALGAM PREPARATORY TO CROWNING

THE building up of roots with amalgam, preparatory to crowning is a very questionable proceeding. Every dentist knows, or should know, that gold and mercury have a great affinity for each other. It is this known affinity of the metals which is taken advantage of in the treatment of gold by the amalgamation process. If the mercury could be entirely expelled from the amalgam of course there would be no objection to its use, but this cannot be done and if it could, it would no longer be an amalgam.

The gold crown, coming in contact with the amalgam, is attacked by the mercury and disintegrated. Many times, even where gold bands come in contact with old amalgam fillings which have been in the mouth for years, the effect has been the same. The writer has seen many instances of this kind, where a tooth having amalgam filling has been covered with a gold crown, the band coming in contact with the filling, with the result that within a year or two the entire side of the crown has been disintegrated and broken away. Of course, if the band be made of crown metal, or of platinum, the effect would not be so marked, but the platinum caps, in connection with the bridge, are undesirable and unsightly.

Another objection to this method, ignoring entirely the remarkable affinity which gold and mercury have for each other, is that from a practical standpoint, in the majority of cases, in a root so built up with amalgam, the amalgam stump is in reality an element of weakness rather than of strength.

We will take, for example, a molar which is broken or decayed well below the gum line. The general practice, in building up these roots, is to put pins in the canals and then build the stump above the gum, trimming the amalgam flush with the sides of the stump (Fig. 176). The band is fitted to the amalgam stump, the crown made and the bridge connected to it (Fig. 177).

In masticating, the lateral strain on this stump is very great and the tendency is for the amalgam to pull away from the face of

the root labially and lingually, allowing moisture to work in, with the result that the tooth or stump will decay, eventually resulting in its entire destruction. We say that there is a tendency for this to happen, but there is more than a tendency. There is almost an absolute certainty that this will occur sooner or later. There is also a great liability of the root becoming fractured from the extra strain which is thus placed upon it.



FIG. 176



FIG. 177

### CROWNING BROKEN-DOWN ROOTS.

When a tooth is broken or decayed below the gum line, the band should always be carried below the line of fracture or decay in order that the root may be perfectly protected.

In a majority of cases of this kind, it is practically impossible to fit the band in the mouth or indeed, even to get a correct measurement of the root. Even if it were possible to do so, it could be done only at the expense of excruciating pain to the patient. In all cases of this class, the band should be made and fitted to a carefully prepared model.


**Taking Impressions and Preparing Models of Broken-down Teeth or Roots.**—We will consider first a very common example of this class. An upper first or second bicuspid. The roots of these teeth are often found decayed far below the gum line. Sometimes, on the mesial and distal sides, below the process, while on the buccal and lingual sides they may be decayed beneath the gum, but not to the same depth as mesially and distally (Fig. 178). It can be readily seen that a root in this condition, cannot be treated in the same manner as one which is standing out of the gum, and the only method which can possibly be followed with accuracy and a minimum amount of pain to the patient is to first secure an accurate impression of the face of the root and then prepare a model on which to fit the band.

Usually the gum tissue will have grown over the stump. This

must be removed first, either by cutting it away with gum scissors or a lancet, or by using trichloracetic acid or some other powerful escharotic. After this has been done, it is better, in order to still further free the root-end from the gum tissue, to pack it tightly with gutta percha or cotton, and let it remain for a day or two, so that when the work is commenced, the face of the root may be perfectly free from all intruding tissue.

It is rarely that there is much trimming to be done on such roots, as the decay has generally passed beyond the line of enamel to a point where the sides of the root are nearly parallel. The little trimming that may be necessary should be carefully done, and with very sharp instruments.

In such a case it is plainly impossible to get an accurate impression with plaster. A material must be used which will force the

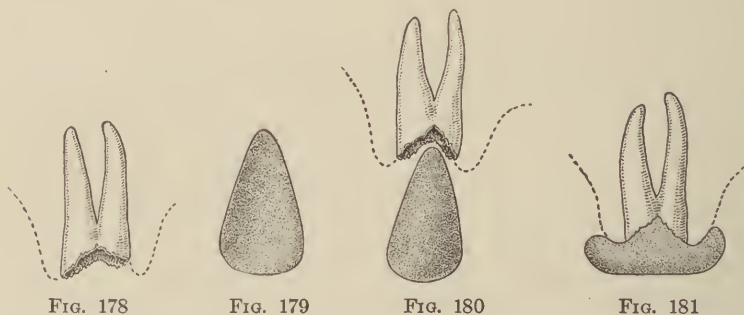

soft tissues away from around its margins, and at the same time give a clear outline of the root. A fairly hard and tough wax is indicated. The writer has for many years used pink paraffin and wax for this purpose. This wax is moulded in the form of a cone, of about the size and shape shown in Fig. 179.

Plaster-of-Paris moulds may readily be made, in which to cast these cones, and it is well to prepare a number, and keep them on hand for use as needed. The cones are used nearly full hard, being warmed slightly by holding in the hand for a moment before using. The point of the cone is then placed in the center of the root (Fig. 180), holding it in place with the thumb. Pressure is gradually applied and as the cone softens slightly from the heat of the mouth, the wax is spread out over the stump, and the tissues are forced away from around the margin of the root (Fig. 181). This is necessarily somewhat painful, but it does not last long, and the

patient never objects. After it has been pressed up as far as is necessary, it is removed. By this means a clear sharp impression of the outline of the root can be obtained, even though it be decayed far below the alveolar border (Fig. 182). The model is now made from this impression.

**Preparing the Models.**—The model can be made of oxyphosphate of zinc if so desired, but one made of hard plaster will answer every purpose. The plaster is mixed very thick, the impression is moistened, a little of the plaster placed on it and jarred carefully in place. This must be done carefully, so as to make sure that the fine lines will be reproduced. After the plaster has well hardened, the impression is separated from it and the model is thoroughly dried out. It is then trimmed, great care being used not to break the thin edges, representing the thin edges of the root, while following the outline, and cutting parallel with the sides of the root to about one-sixteenth of an inch below the line of decay (Fig. 183).



FIG. 182

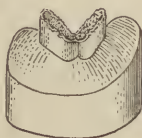


FIG. 183



FIG. 184



FIG. 185



FIG. 186

It is then soaked in thin sandarac varnish and again thoroughly dried. The decay having eaten deeply into the center of the tooth, the edges of the stump are very frail (Fig. 184). To lessen the liability of their breaking while fitting the band, the cavity may be filled with hard wax flush with the edges of the stump.

The measurement can now be taken and the band made, fitting it in closely at the constriction between the two roots, and trimming it so that it will exactly follow the outline of the cavity (Fig. 185). The edges are then beveled from the outside, leaving a keen knife-edge on the inside of the band, and it is ready for the mouth (Figs. 185 and 186).

The gum around the stump is then cocainized, and the band driven into place, the sharp edges being forced between the root and the process, thus gripping the root firmly.

After the band is in position on the root, the canals can be opened and treated, the band, being firmly fixed, will keep away the soft



tissues, blood and moisture. When the band is removed, the stumps should be tightly covered with hard gutta percha to keep the gum from crowding over the face of the root. An ordinary large-headed tack is good for this purpose, covering the post well with the gutta percha and forcing it into the canal, the excess gutta percha being forced over the face of the root by the head of the tack. The head can then be covered lightly with gutta percha and it will keep in position for any desired length of time.

It is more than twenty-five years since the writer first employed this method of crowning such like roots. It was at first feared that forcing the band between the root and the process might cause resorption, but he considered the experiment was well worth trying and he has never yet regretted it. Since that time, this has always been his method of procedure in these cases, and so far as is known there has not been a single failure. This method can be employed in nearly all cases where the tooth has been broken or decayed below the gum line.

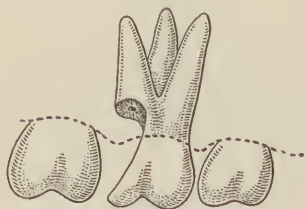


FIG. 187



FIG. 188

Another class of cases, which are frequently encountered, is where a large cavity in a molar extends far up on the root beyond the gum margin, as in Fig. 187. The gum should be first cleared from the cavity. This can be done by lancing, or if there is not very much soft tissue in the cavity, trichloroacetic acid may be used. Frequently, the impaction of food has kept the cavity partially clear of soft tissues, and it may be possible to force out any remaining tissue by packing gutta percha or cotton tightly into the cavity, and leaving it there until a subsequent sitting.

The decay is first entirely removed, and the cavity prepared so that it is non-retentive in shape (Fig. 188). If there are any undercuts, they may be temporarily filled with gutta percha. The remaining sides of the tooth are trimmed so that they are nearly parallel, the same as though preparing the entire tooth for a crown.



The cavity is then filled with a slow-setting cement, and this is carefully trimmed, following closely the sides of the root, making sure that the cement does not project in the least, beyond the margins of the cavity, and making the filling nearly parallel with that part of the tooth which remains standing. It should be notched or grooved slightly at the occlusal end (Fig. 189).

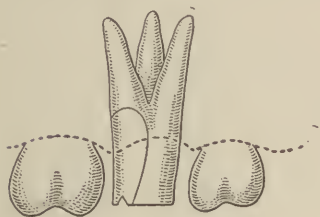


FIG. 189



FIG. 190



FIG. 191

An impression of the stump is now taken with the cement filling in place. After the impression has hardened, it is removed from the mouth (Fig. 190), and the cement filling (Fig. 191) removed from the tooth, placed in position in the impression, and waxed lightly, as in Fig. 192. The tooth cavity should be packed with gutta percha so as to keep it open and the margins clear.

The impression is now varnished and a model of hard plaster made from it in the usual manner (Fig. 193). After drying out thoroughly, the model is trimmed to about one-sixteenth of an inch below the gum line, cutting the plaster away from around the

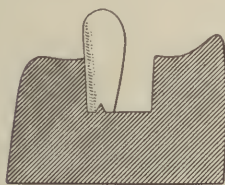


FIG. 192



FIG. 193

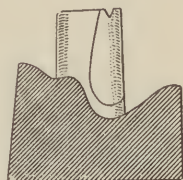


FIG. 194

cement filling to about the same depth, thus exposing it and showing the exact outline of the cavity (Fig. 194).

The measurement of the stump should be taken just below the the gum line. The band is made, and the gingival end trimmed carefully, so that it follows the outline of the cavity and covers well the line of decay (Fig. 195). The edges are then beveled, it is tried

in the mouth, fitted over the stump, and driven into place, after which the impression and articulation is taken, the model prepared and the crown completed (Fig. 196), and after completion is cemented in the mouth. It will be found to cover the cavity margin and fit the root more perfectly than would have been possible to have made it in any other way (Fig. 197).




FIG. 195



FIG. 196

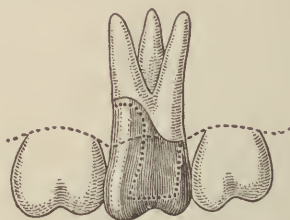


FIG. 197

Anterior teeth, such as the centrals or laterals, are frequently found, which have been broken off, as from a blow, the fracture on the lingual side extending far above the gum line (Fig. 198). They should be treated in practically the same way as the molars in the preceding case. The stump standing out of the gum is trimmed very carefully so that the sides are parallel. In this case, much greater care should be exercised to have these sides parallel than where the whole stump is standing and the root has simply to be crowned. The canal is enlarged and a post fitted into it, extending well out of the stump.

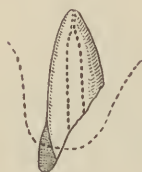


FIG. 198

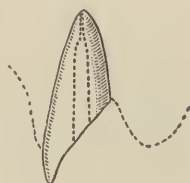


FIG. 199

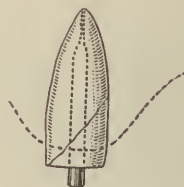


FIG. 200

It is understood that the tissues should be first pressed away (Fig. 199). The fractured part is then restored with cement, building it up around the post to about the same height as the part of the stump left standing out of the gum, care being taken to trim close to the margin of the root and make the sides of the cement filling parallel to the standing stump (Fig. 200).

If we have the part of the root which has been broken off, it can be put back in position, after removing any other enamel which may adhere to it, instead of replacing it with cement. The impression is taken with this in place, the same as with the molar. The broken piece of the root or the cement is then removed together with the post, and placed in the impression, and a model made in the manner already described in treating of the molar. The model is then trimmed carefully, well below the gum margin labially, and below the line of fracture lingually (Fig. 201). The cement and post are now removed and the labial side of the stump cut off enough so that the band will be hidden by the gum (Fig. 202). On this model the band is fitted, festooning it carefully so that it will come below the line of fracture lingually, and well under the gum on the labial side (Fig. 203).

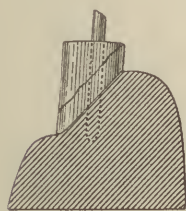


FIG. 201

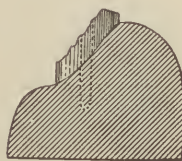


FIG. 202

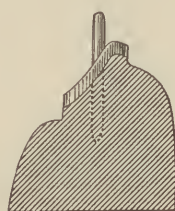


FIG. 203

If, for this case, a Richmond crown, with a facing and a gold back, or an all porcelain crown with a soldered or a cast base, is to be made, the upper edge of the band may be cut flush with the edges of the stump lingually, and well under the gum labially and a floor soldered or sweated to it. The post is next fitted and waxed in position and soldered to the floor of the cap (Fig. 203). This completed cap is then placed on the root in the mouth, an impression and articulation taken, the model prepared and the crown made and finished in the usual manner, carrying the solder down to the edge of the band on the lingual side (Fig. 204).

Where an all porcelain crown is to be used, it is ground to fit the floor of the cap on the labial side, but should clear it well on the lingual or palatal side, and the mesial, distal and palatal sides are beveled slightly. A pin of platinized gold is placed in the hole in the base of the crown, which has previously been lubricated with a little oil or cacao butter, or if it is desired to cast the pin with the base, wax is forced into the hole and the crown held in place and hot

wax flowed in between the crown and the cap and over the beveled edges of the cap. It is then carved, the sprue former attached to the lingual side, the crown removed and the base flaked and cast to the cap.

If desired, after the crown has been ground to the cap and beveled, a base of pure gold can be carefully burnished and fitted to it, a platinized gold pin passed through it into the hole in the crown, waxed, removed, invested and the pin soldered to the base with a little coin gold. After cleansing, the base is readjusted to the crown, and then put in position on the cap and waxed firmly to it.

The crown is then removed and the cap invested, soldered and finished as described in Chapter on Crowns.



FIG. 204

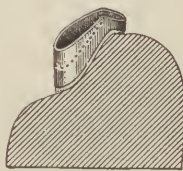


FIG. 205



FIG. 206

Where it is intended to use a facing, building up the lingual side with porcelain, the band and floor are made of iridio-platinum. The band on the lingual side should extend at least one-thirty-second of an inch above the line of fracture (Fig. 205). On this side a floor should be fitted to the inside of the band over the broken face of the root, allowing the band to extend above it, but on the labial side it can be brought over the top of the band and well under the gum. The band extending above the floor of the cap on the lingual side forms a protected seat in which the porcelain is baked so that there will be no thin margins of porcelain which would be liable to crack and flake off (Fig. 206).

### PORCELAIN BRIDGES.

The porcelain bridge as advocated by many dentists some years ago has become nearly obsolete. Porcelain is a fragile material, it cannot be made sufficiently strong to withstand the force of mastication without great depth and bulk of porcelain, as the strength of porcelain is only in proportion to its bulk.

Where the posterior teeth have been lost it is, in the majority

of cases, necessary to open the bite. By doing this the masticatory force is greatly increased, and there is no porcelain made which will withstand the strain, unless, as before stated, the bridge is made with great depth and bulk of porcelain, or the patient is wearing a plate in the opposite jaw.

Taken purely from an esthetic point of view, porcelain is the ideal material to use, but from a practical standpoint, it is not so ideal. A porcelain bridge would stand better if it were a fixed bridge than it would if it were removable, as the springing which occurs in removing and replacing the appliance will, in nearly every case, sooner or later, cause a checking of the body, necessitating constant repairs.

### RELATION OF PROSTHODONTIA AND ORTHODONTIA.

Quite frequently when the services of an orthodontist has been employed the coöperation of the prothodontist is necessary to complete and render his work permanent. Where the teeth have been regulated in mouths where some of the teeth have been lost, it is necessary to restore these lost organs by some rigid fixture, otherwise the teeth which have been put in proper occlusion will quickly return to their former condition. Where such conditions exist, there is no appliance so far suggested as satisfactory and efficient as a properly constructed bridge.

In a large number of these cases the patient is too young to have any permanent appliance made. Where this is so a temporary bridge can be made, the abutment teeth being trimmed only just enough to allow of the passing of the band between them and the adjoining teeth, but not cutting through the enamel.

The bridge can then be made and cemented into position, and should be carefully watched until the patient is old enough to have a permanent fixture made. Generally this is not advisable until the patient has reached the age of at least eighteen years.

There are many cases where slight irregularities of the teeth brought about by the loss or decay of others can be, previous to crowning, easily and quickly corrected without employing the services of an orthodontist.<sup>1</sup>

An example of this would be where a tooth or a root, say a lateral

<sup>1</sup> The writer is not posing as an orthodontist and does not intend to give any advice as to the regulating of teeth except in cases where the irregularities are so slight that they may be corrected in a few days.



incisor may be standing a little distance inside of the arch (Fig. 207). Of course it is understood that the tooth is so far gone that it is necessary to crown it. It has been the custom with some to cut off such a tooth, making a cap for it and letting the floor extend over the ridge to a point in line with the labial face of the adjoining teeth. The facing is then ground in position, backed and soldered, with the backing carried lingually, and over the root cap, so as to bring the facing into proper position, as in Fig. 208. This is not good practice if it can possibly be avoided, as it makes a weak and uncleanly appliance.

It is better that this root or tooth should be brought out in line with the other teeth before attempting to crown it. This can often be done in a few days with some little simple mechanical appliance.

One of the simplest appliances for this purpose would be a piece of spring wire attached to the adjoining cuspid and extending over a few of the teeth adjoining. To this the lateral can be attached



FIG. 207



FIG. 208

with a ligature and by tightening it frequently the tooth can be brought in line very quickly. If the crown is lost a staple or hook can be placed in the root and the ligature attached to that.

Another appliance, which can be quickly and easily constructed and which gives a more positive pressure than does the spring wire, is made in two parts. The first consists of a platinized gold bar, heavy enough to resist the strain and long enough so that the ends will rest on the adjoining teeth. A hole is drilled through at a point opposite the lateral which is to be moved. The second part is a small round rod of the same metal, one end of which is shaped so as to form a hook and the other end having a thread cut on it to which a nut has been fitted.

The rod is hooked to the staple or other fixture in the lateral, the other end passed through the hole in the bar and the nut screwed on. By tightening this nut frequently, the tooth or root is quickly and easily brought in line (Fig. 209).



In cases where the space for a lateral or a central incisor is nearly closed, and it is necessary to move a number of the teeth in order to make room, it probably would be advisable to employ the services of an orthodontist.

Another class of cases of slight irregularities which is very frequently encountered is where the crown or crowns of certain teeth are lost and the adjoining teeth have moved together, so as to partially close the space and there is not enough room to insert a crown of normal size. In fact, quite often the space may be narrower than the width of the broken-down root. This is frequently seen where the crown of a first or second bicuspid is lost, and the adjoining bicuspid and molar has moved forward so as to partially close the space as in Fig. 210.



FIG. 209

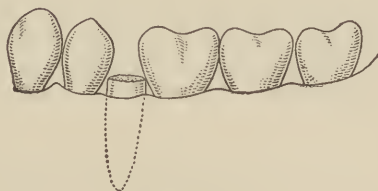


FIG. 210

In the majority of such cases it would be bad practice to place a crown on a root, where these conditions exist, without first forcing them apart so as to get room enough in which to place a crown of normal size. This can be done easily and quickly, in the majority of cases, even when none of the molars are missing, without making any mechanical appliance at all, but simply by wedging.

If the three molars are standing, and the second bicuspid missing, the first step would be to put a block or wedge tightly between the molar and the first bicuspid, so that the molars could not move forward. Then begin by making a separation between the second and third molars, starting at first with as large a piece of separating-rubber as can be placed between these teeth. After they have been forced apart somewhat, the work of separating may be completed with orangewood wedges. The space between is dried out and a piece of well compressed orangewood is driven in between the teeth as tightly as possible. As the wood becomes moistened, it expands and forces the teeth still further apart. This is repeated until the amount of separation between the second and third molars, added to that of the space of the first molar and first bicuspid will give sufficient space for a crown of normal size.

The next step is to start wedging between the first and second molars, at the same time easing up, as progress is made, the separation between the second and third molars, wedging with the orangewood until the second molar has been forced back against the third.

There now remains only the one tooth to be moved to its normal position, the first molar. This is moved in the same manner as the others, by increasing the size of the wedges between the first bicuspid and first molar, and decreasing those between the first and second molars, and keeping this up until a little more space than is necessary for a normal sized crown has been secured, (Fig. 211). The space should be carefully preserved with wedges until the root is prepared and the crown made, and in place, otherwise the molars would quickly resume their former positions. It may be that the articulation may need touching here and there as the work progresses, and this is done as indicated.

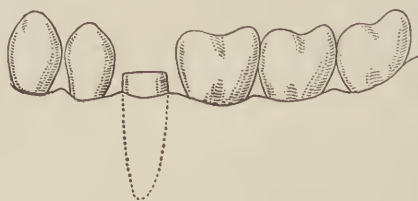


FIG. 211

It has been claimed that the third molars cannot be forced back but with this the writer cannot agree, as it has been done many times, in the manner stated.

There are many cases where the work of securing a separation can be done entirely by the patient, especially if the third molar or second and third have been lost. The first step is to cut an orangewood stick of such length that it will wedge in tightly between the bicuspid and the molar, concaving it a little at each end so that it cannot be forced out buccally or lingually. A number of these orangewood plugs are prepared, each one a little longer than the others, the last one being slightly longer than the space which is needed for the crown (Fig. 212).° They are numbered 1, 2, 3, etc., beginning with the shortest which is numbered 1. The No. 1 plug is now forced into position between the bicuspid and the molar (Fig. 213). The others are placed in an envelope on which instructions are written, and given to the patient, the instructions stating

that as soon as the wedge which is in the mouth has become loosened somewhat, so that it can be moved easily, the No. 2 is put in position and bitten into place. This is repeated as soon as the No. 2 is loose, the No. 3 is forced in place and so on until the last one is in. The patient is instructed to return after the last plug has been in place for three or four days.

It will be found that in the majority of cases the teeth can be moved for a considerable distance in ten days or two weeks with practically no pain to the patient. As the teeth are forced apart they are held perfectly rigid, so that there is no movement which will keep up an irritation.

The same method of gaining space may be adopted in the anterior part of the mouth. Many times, where the crown of a tooth has been broken away, say that of a central incisor, or where the central root is missing, the remaining central and lateral will come together so that perhaps the space between them is less than half the width of the remaining central (Fig. 214).



FIG. 212

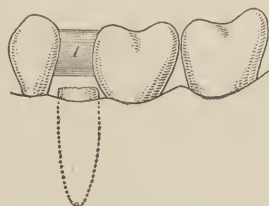


FIG. 213

In such a case a crown on the root or a bridge restoring the missing tooth should not be placed unless the tooth can be made of a size corresponding very nearly to that of the remaining central. If a narrower crown is placed, one not nearly as large as its mate, it is unsightly, and these teeth should always be separated so as to make room for a tooth of normal size.

This can usually be done in exactly the same manner as has already been described in speaking of the bicuspid. Sometimes in forcing the teeth apart in this manner there will be a tendency for them to overlap and pass each other. This difficulty can generally be overcome by ligating.

It not infrequently happens that it will be found that one of these teeth has been loosened, perhaps from a blow, which has destroyed the bony attachment and is holding only by the gum and is laying over the labial side of the adjoining teeth. The remaining

central and lateral will have closed in behind it. For esthetic reasons the patient may not wish to have the injured tooth removed without having something which can be used temporarily while the permanent fixture is being made restoring a central of a size corresponding to the one remaining.

As an illustration the following description of a case of this kind which came under the care of the writer will serve.

The patient, a lady over fifty years of age, several years previous had received a blow in the mouth which had loosened the left central incisor. The condition had become worse, until it had only a slight gum attachment and the tooth was practically held in position only by the lip (Fig. 215). An impression of the parts was taken, a model carefully prepared, and thoroughly dried and hardened. A saw cut was then made across the bottom of cast in which a strip of heavy brass was fitted (Fig. 216). The cast of the loose tooth was then cut from the model (Fig. 217) and the model separated by

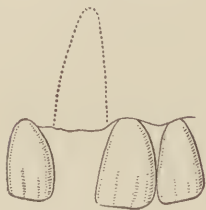


FIG. 214



FIG. 215

sawing through between the remaining central and the lateral. The halves of the model were then moved slightly apart and a piece of cardboard placed between, the strip of brass in the groove in the base keeping the halves in proper relation. A facing matching the other central in shade, was ground to fit in this space and the medial and distal edges beveled a little from the lingual side. A thin backing of pure gold was then fitted to the lingual side of the facing extending beyond it mesially and distally and this extension burnished over the lingual sides of the adjoining central and lateral (Fig. 218). This was then waxed and invested and covered over with solder. The model was then separated a little farther and another and larger facing ground in place and backed and prepared in the same manner. A third and fourth facing were prepared the same as the others, the last of which was as wide or a little wider than the space required. The teeth with the backings were made in such a way that they would wedge between the central and lateral but could not be forced either labially or lingually (Fig. 219, *a* and *b*).

The patient was then sent for, the loose tooth removed and the smaller of the backed facings was forced in between the central and lateral. The patient was then given some narrow linen tape and was instructed that as soon as the appliance had loosened a little to put a thickness of the tape between the sides of the appliance and the adjoining teeth, and to keep this up until there were two or three thicknesses in place, and then wear it until the piece became slightly loose again.

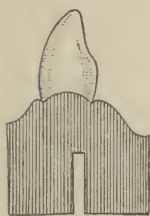


FIG. 216

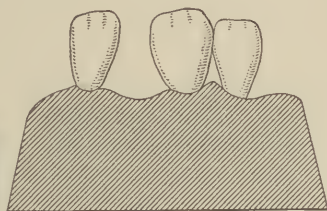


FIG. 217

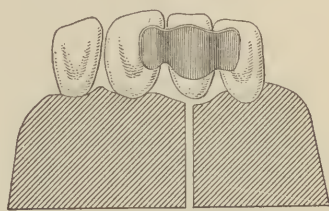


FIG. 218

In the meantime, the work of devitalizing the adjoining central and preparing for the bridge had been progressing. As soon as the smaller appliance had forced the teeth apart, so that it was loose when worn with the several thicknesses of tape, the second appliance was put in and the same directions given regarding the tape. After that had served its purpose the third and then the final appliance was put in position and worn until the permanent fixture was ready to be placed in the mouth.



FIG. 219

A tube and inlay attachment was used in the central and an inlay and spur in the lateral, and the bridge made to fill the space, the temporary appliances being worn in the meantime, and discarded only when the bridge was ready for the mouth. This made an easy and certain way of getting the needed separation, and during which time the patient was spared the disfigurement which would have been caused by an ordinary separation, and only those intimately acquainted with her knew that there was a tooth missing.



## CHAPTER IX.

### PROSTHESIS.

#### AUTOGENOUS SOLDERING, OR THE "SWEATING PROCESS," AND SOLDERING.

THERE are two methods that can be used, when constructing crown and bridge-work, for the making of caps and bands, or uniting pieces of gold of the same carat and composition. First, that of melting or welding the parts together without the use of solder and which is known as the "sweating process," or to use a more scientific term, "autogenous soldering." And second, soldering, by the use of alloys, fusing at a lower temperature than the metals to be united, fused between and over the surfaces to be joined, uniting them firmly together. These alloys, termed solders, may be of various grades of fineness, or be of the same grade and yet vary a great deal in point of fusibility. These variations depend upon the kind and quantity of alloy used. As a rule, the higher the carat, or the nearer the degree of fusibility of the solder approaches that of the plate, the stronger will be the union. Generally, the higher the fusing point of the solder the less alloy it contains, or the alloy used is, in character, more like that of the plate.

Autogenous soldering, or sweating, at its best, makes by far the strongest union. Its chief merit in crown and bridge-work is that it is not re-fused in subsequent solderings. It is not difficult to learn and with a little practice, the art of autogenous soldering is easily acquired, and the union is most satisfactory. It requires, however, a steady hand, a good blowpipe or a Bunsen flame well managed, and a fair degree of "knowing how," that can be acquired by practice only, to so heat two pieces of metal that the surfaces in contact are fused while the body is near to but not actually at its fusing point. Under these conditions there seems to be a molecular attraction between the fused surfaces and they flow together and unite. A little less heat, and the operation is a failure, a little too much, and the appliance is ruined. The real secret of success is in knowing how far to go, and when to stop. When once the "knack" is acquired, it is surprising how seldom "just right" is missed, and how

quickly and with certainty, as one advances in experience, complicated pieces are united by the sweating method. In fact it is more quickly and easily done and with less liability of burning than where solder is used.

When a band has been joined by this method, there has been a recrystallization of the metal where it has been so united which renders it somewhat of the nature of cast gold. It has not the same tenacity and strength at that point unless it has been well overlapped. In order to overcome this weakness and bring about a rearrangement of the molecules, the band is placed over the beekhorn of an anvil with the seam uppermost, and the seam is hammered until it is of the same thickness as the rest of the band, and has become entirely obliterated. This forging condenses the gold and restores its tenacity, and makes the band practically seamless, and as strong where it has been joined as at any other point.

Flattening the seam or stretching a band may be done as well by compressing it between the beaks of a powerful pair of pliers which were designed by the author for this purpose and are known as "stretching and contouring pliers" (Fig. 220).

Another advantage of the sweating process is that the seam or joint will not discolor after the appliance has been worn in the mouth for some time, as does a seam or joint made with solder.

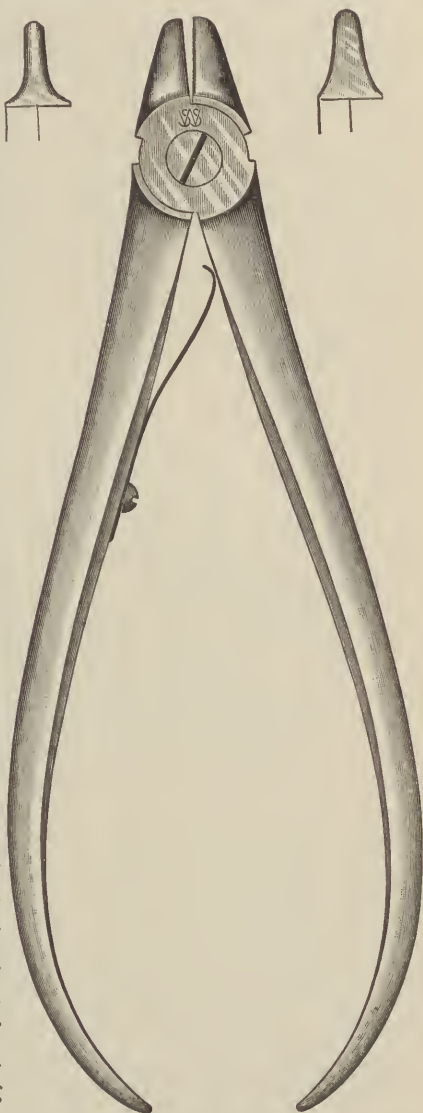


FIG. 220

Another point in favor of the sweating process is that a cap or a crown built up by soldering and used as an abutment for a bridge, is much more easily burned in any subsequent soldering operations to which it may be subjected than is a sweated crown. The reason for this is very simple and should be understood by every one doing metal work.

In using solder, the surface of the gold to which the solder is applied becomes alloyed, the depth to which this alloy extends depending upon the carat, the character, the amount of solder used and also the amount of heat to which the mass has been subjected



FIG. 221



FIG. 222

in melting the solder. The carat of the gold has thus been lowered, sometimes, where it has been excessively heated, to the entire depth of the thickness of the band. The result is, that in such a band, we have already a much lower carat at the point of union than we had at the beginning, with the consequent danger of burning the band, and far greater care must be exercised in any subsequent solderings.



FIG. 223



FIG. 224

If solder is used for uniting the bands and caps, it should be used in small quantities, and of as high a carat as the gold will stand. This can easily be of the same carat as the band, or even higher, as solder will fuse at a lower temperature than the plate of the same carat. Thus, 22-carat solder can be used in soldering 22-carat plate.<sup>1</sup>

When preparing a band for soldering, it is optional whether to unite the ends by an abutted joint, or by lapping them one over the other. An abutted joint, however, is not as strong as one lapped.

<sup>1</sup> The carat of gold depends upon the quantity of alloy only. The fusing point not only upon the quantity, but on the character of the alloy as well. Any carat may be high fusing or low fusing.

It is also more difficult to bring the abutted ends into perfect contact and hold them so while uniting them than it is to adjust and hold in contact the ends of a band with a lapped joint. However close an abutted joint may be, the parts are not in actual contact, and after it has been sweated together, it will be really a little thinner at that point, than the band was originally (Fig. 221) thus weakening it somewhat.

In making a lapped joint there is no necessity for beveling more than one end of the band. The beveled end is brought around and under the end which has not been beveled, sufficiently far to well overlap it, as shown in Fig. 222. Then, the overlapping end is brought back a little, and pressed downward under the other (Fig. 223) so that when it is again restored to its proper position the elasticity of the metal will hold the two ends in close overlapping contact.

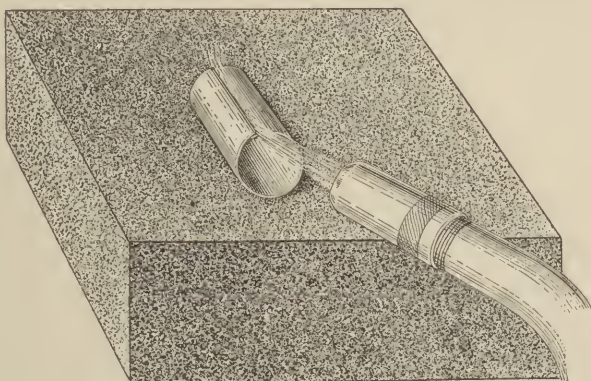


FIG. 225

The joint is then sweated together, melting the overlapping edge well down (Fig. 224). The joint is next hammered on the anvil beak, or flattened with the stretching pliers until the seam on the inside has been entirely obliterated.

Several different flames may be used in the sweating process, usually, however, after one has mastered the principles involved, the details become a personal matter, and are modified to suit the operation.

In using the blowpipe, after the ends of the band have been brought into contact and fluxed, it is placed with the lapped edge uppermost on a piece of charcoal. An asbestos block may be used, but it is not as good as the charcoal. Charcoal is cleaner, and

reflects the heat, which materially aids in the operation. The blow-pipe is employed, using a small brush flame until the band is brought to a red heat, almost to the point of fusing. As it begins to glisten, showing that the surface is nearly ready to fuse, the flame is shortened to about from an inch to an inch and a quarter in length and passed slowly along the joint, using the inner point of the blue flame, until it is perfectly united along its whole length (Fig. 225).

Another method is to sweat the parts together entirely with the brush flame. The band is placed in the same position on the charcoal as in the previous method, and the large brush flame is applied, holding it on the band until it begins to fuse. As soon as the parts are united, the flame is quickly removed.

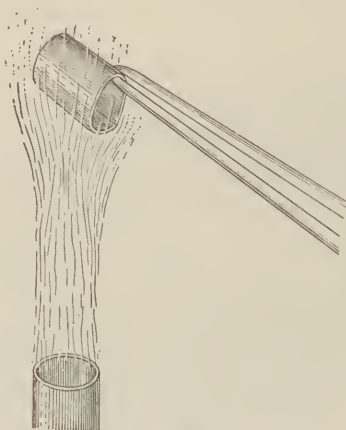


FIG. 226

Still another method is to invert the band, having the seam downward. It is then fluxed, caught lightly with a pair of soldering pliers and held in the Bunsen flame and watched carefully until the gold is seen to melt when it is quickly withdrawn (Fig. 226). The joint is then hammered on the beckhorn of the anvil, obliterating the seam. This latter method is perhaps easier than are the others and will probably be favored by the majority of those doing this work.

#### CLEANSING GOLD AFTER ANNEALING OR SOLDERING.

A 50 per cent solution of sulphuric acid, technically termed "pickle," is used for deoxidizing and cleansing the surface of gold



after annealing and for removing the fused flux after soldering. This acts without heat if given sufficient time; it is usual, however, to keep the pickle in a porcelain evaporating dish mounted so that it can be boiled, to hasten the operation. There is always more or less unpleasant fumes given off by the acid, especially when it is boiled. Where much work is done it is best to provide a hood or small closet with a door which can be tightly closed, and with a vent to the outside of the building to carry off the fumes, in which to keep the acid. Small pieces can be boiled in a test tube more conveniently than in the dish, they are, however, very fragile, the work must be allowed to slide in gently, if dropped in the tube will in all probability be broken.

Dilute hydrochloric or muriatic acid is also used for cleansing the gold. It does the work equally well, but should never be used except in a tightly closed closet as the fumes are most corrosive and if left exposed will quickly ruin all the steel instruments in a laboratory.

It is desirable to have at hand a solution of bicarbonate of soda in which to rinse work taken from the pickle, especially if it is to be immediately fitted in the mouth. It promptly neutralizes the unpleasant acidity of the pickle.

When annealing small pieces of gold, or cleansing bands or shell crowns preparatory to soldering, they may be brought to a red heat and then plunged into the cold pickle, but where porcelain is present it is necessary to boil the work.

A saturated solution of alum, used boiling, is quite satisfactory for pickling, and very much more pleasant to use, although not quite so convenient, as it must always be boiled. It may be kept in a narrow lipped pitcher, and when required for use sufficient to well cover the work poured into a porcelain or copper dish in which it may be boiled. When the work is clean, the alum solution is poured back into the pitcher and the work rinsed with water while still in the dish. The alum solution is not corrosive, as is the acid, and is not destructive to clothing, etc., if spilled.

### **GOLD ALLOYS USED FOR MAKING BANDS AND CROWNS.**

The gold alloy used for making bands and crowns should be sufficiently pliable to permit of its accurate adaptation to the stump or root, and at the same time should be hard enough, and possessed of sufficient tensile strength so that there will be no liability of its

stretching out of shape, and so defeating the object for which the band was designed. It should also be of a sufficiently high carat to withstand the oral secretions.

An alloy of gold and silver is more easily adapted than is a harder alloy, but is too soft to give the best results, especially for crowns used as anchorages for bridge-work. A tight fitting band of this alloy driven over a stump is likely to become buckled and distorted. A gold alloy possessing the properties of American gold coin as regards strength, rigidity and elasticity, is more suitable for this purpose than is the ordinary 22-carat gold of the dental depots.

Although coin gold is somewhat more difficult to manipulate than is the other, it will make a far stronger and more lasting band or crown, and is much to be preferred if the band or crown is used as an abutment for a bridge, especially for removable work.

The copper in coin gold gives it a deeper color than does the same carat with a large proportion of silver in the alloy. Some object to it for this reason, but the writer prefers the deep rich reddish color of the coin rather than the light lemon color of the 22-carat gold plate of the dental depots. There is very little difference in the carat of the two alloys, the coin being 21.6 carat, or 900 fine, and the other 22 carat, or 916 fine.

#### **RELATIVE MERITS OF SWAGED SEAMLESS CROWNS AND BUILT-UP CROWNS WITH SOLID GOLD CUSPS.**

There have been a number of outfits placed on the market for making of seamless gold shell crowns. Some are more elaborate than others, but there seems to be very little difference in the quality of the work done by these different devices.

The seamless shell crown does not meet the writer's approval. It must be made of a soft metal, and therefore it possesses very little strength, and should be used only as a temporary appliance.

In making these crowns, the metal, at every part except at the gingival edge, is stretched during the operation of contouring and forming the cusps, so that the metal necessarily becomes very much thinner than it originally was, and this is especially true of the metal on the occlusal surface of which the cusps are formed.

Many of these crowns are cemented in position without any reinforcement of the occlusal surfaces, with the result that within

a very short time they are worn through, the cement is disintegrated, and the appliance soon becomes a wreck. It should be a general custom, when these crowns are used, before cementing them in place, to flow solder into the caps, filling the cusps well so as to stiffen them and enable them to withstand the strain and wear of mastication.

It not infrequently happens that in contouring and in forming the cusps, that the gold is over-strained, and there will be minute cracks in the fissures, which extend entirely through the gold, but are so minute as not to be noticed. In flowing the solder into the cusps, it is rarely that it will overflow the fissures which are the highest points in the inverted cusps, but it will always drop into the cusps which are the deepest part of the crown (Fig. 227).



FIG. 227

When cemented in place, the crown may protect the tooth for a time, but the moisture and fluids of the mouth will be carried through these cracks in the fissures, disintegrating the cement, causing decay the same as when the cusps have been ground through, and many times the tooth is entirely ruined before the patient is aware that there is anything the matter with it.

This very often happens where a crown of this type is used for an attachment for a bridge, another abutment perhaps holding the bridge in place so that the patient is not conscious of any change which may have taken place until it is too late to save the tooth.

Another objection to this crown as an attachment, aside from the possible defects already mentioned, is that a crown of this type is not of sufficient strength to give support to a bridge. Being made of such thin and soft material, if there is much stress on the bridge, the side of the crown is frequently torn out at the point where the dummies are united to it, and the whole piece is rendered useless.

Again, if the crown is made to fit the stump, accurately contoured as it should be contoured, and carefully articulated, it will take a much longer time to make it with any of the seamless crown appliances that are on the market than it would to make an accurately contoured and solid cusp built-up crown, while there can be no comparison as to the strength and lasting qualities of the two crowns.

As before stated, these crowns may be used for a temporary protection of the natural crown of the tooth, but should not be considered in permanent work.

### HOW TO USE THE SHEARS IN FESTOONING A BAND.

In cutting down or festooning a band, the flat side of the scissors or the inside of the blade should always be placed next to the band. If cutting to an outside mark, the edge which is being trimmed should be to the left, the flat of the scissors placed against the edge and the cutting be done from the top of the band, as in Fig. 228.



FIG. 228

If cutting to an inside mark, as where the inside of the band has been scribed around the top of the stump, this edge of the band should be turned to the right, placing the flat of the scissors on the lower side and following the marks (Fig. 229).

If the outside of the blade is placed against the metal, it will be impossible to festoon it without distorting the band.

Fig. 230 shows curved crown shears.

Fig 231 shows straight crown shears.



FIG. 229

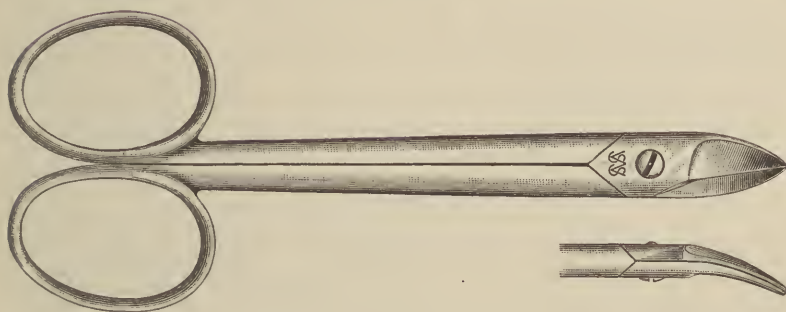


FIG. 230

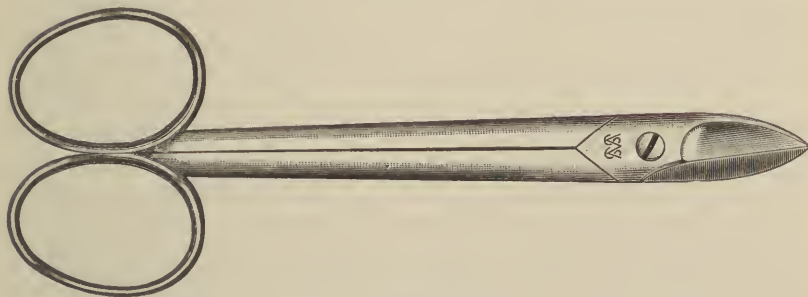


FIG. 231



## CHARACTERISTICS OF THE CUSPS OF UPPER AND LOWER BICUSPID AND MOLAR TEETH.

In making a selection of cusp buttons or moulds to serve as models from which to make the occlusal face of bicuspid and molar crowns or in carving the cusps or in the carving of porcelain crowns, it is important to have a good working knowledge of the characteristic or typical form of the cusps of the natural bicuspid and molar teeth. Although there may be slight variations, each normal tooth has certain characteristic markings, or cusp forms, which indicate at a glance the position it should occupy in the mouth. These will now be considered; they should be borne in mind when selecting the model for or carving the cusps of bicuspid and molar crowns.

**Upper First Molars.**—Looking at the first upper molar from the occlusal surface, it will be seen that it is diamond-shaped, the greatest diameter being from the anterior buccal to the posterior palatal corner (Fig. 232), and also in the outline drawing of Fig. 235, the outside line showing the outline of the first molar. These teeth



FIG. 232



FIG. 233

have four cusps, the buccal and lingual being very different in shape from each other. The lingual aspect of the buccal cusps slope inward to the fissure on nearly a straight line, the mesio-buccal and disto-buccal cusps being nearly of the same size and with a prominent ridge near the center of each cusp; the buccal occlusal points being fairly sharp (Fig. 233, *a*).

The *lingual cusps*, on the contrary, are large and well rounded (Fig. 233, *b*), the disto-palatal being entirely separated from the other cusps by a deep fissure extending from the middle of the distal aspect to midway on the palatal side of the tooth (Fig. 232). This cusp is distinctly different in shape from the others and will always indicate on which side of the mouth the tooth belongs.

**The Upper Second Molar.**—In studying the upper second molar closely (Fig. 234), it will be found, on looking at the occlusal surfaces, that they are very nearly of the same shape as are the first molars, with the exception that the diameter of the tooth from the

anterior buccal to the posterior palatal corner is slightly less proportionately than it is in the first molar, as will be seen in the lines in the drawing (Fig. 235), the middle line in the posterior palatal corner representing the outline of the second molar. It is also to be noticed that the disto-palatal cusp is smaller and not so well defined as it is in the first molar.



FIG. 234



FIG. 235

**The Third Molars.**—With the third molar where there is the normal number of roots, will be found the same general shape prevailing as in the other molars (Fig. 236), but in the third molar the diameter of the tooth from the anterior buccal to the posterior palatal is still further decreased, and in many cases will be found to be less than the disto-buccal to the anterior palatal (Fig. 235), the inner line at the posterior palatal corner showing the outline of the third molar. The disto-palatal corner also is still further rounded so that the occlusal end of the tooth frequently presents a triangular or rounded appearance rather than the typical diamond-shape. Often, too, the disto-palatal cups will have almost entirely disappeared,



FIG. 236



FIG. 237



FIG. 238

but still in nearly every case, there is to be found some trace of it, and the cusps may appear simply in rudimentary form on the disto-palatal corner of the tooth, below the line of the other cusps, as in Fig. 237. It is very rarely that all traces of it are absent.

Where a number of upper molar cusp buttons, both for the right and the left side have been mixed together, they can readily be distinguished and separated by placing them on the table, cusps up, and with the buccal side toward the viewer. Take note of the disto-palatal cusp, and which ever way that points, whether to the right or the left, the cusp is for that side of the mouth (Fig. 238). A knowledge of this fact facilitates very much, not only the separation of the cusp buttons of the right side from those of the left, but

the character of the palatal cusp, together with the general outline of the crown, will indicate whether it be right or left, or the first, second or third molar.

**Lower Molars.**—In the lower molars, the shape of the crown of the tooth is very different from that of the uppers. Viewed from the occlusal surface, the first molar is somewhat in the form of a parallelogram, the mesio-distal diameter being much greater than



FIG. 239



FIG. 240

the bucco-lingual. It is also frequently slightly broader at the mesial end than at the distal (Fig. 239).

**Lower First Molar.**—The lower first molar has five cusps and in this instance we have the reverse of the upper molar, the sharper cusps being the lingual (Fig. 240, *a*) and the broad and rounded cusps being the buccal (Fig. 240, *b*). This must of necessity be the case in order that there may be a perfect occlusion, as in Fig. 241. On the buccal side there are three cusps, the mesial cusp and the middle




FIG. 241



FIG. 242



FIG. 243

cusp being the larger. The fissure between these two is a little anterior to the center, while the distal cusp is the smallest of the three, the fissure extending generally from about one-sixteenth of an inch from the disto-buccal side of the tooth diagonally toward and beyond the center (Fig. 242).

The anterior sulci will be found fairly close to the mesial face of the tooth, being broad and extending buccally and lingually across about one-third to one-half of the width of the tooth. Distally the

fissure is forked, one branch separating the middle and distal buccal cusps and the other reaching in an opposite direction toward the lingual side of the tooth. The shape of the cusps and the character of the fissure are the distinguishing marks of these teeth.

**Lower Second Molars.**—In the second molar, there are but four cusps, the two sharper cusps lingually, the two buccal cusps being broad and rounded and of nearly equal size. This also has the broadened fissure in the anterior part of the cusp, the same as the first molar and also the fissure is forked distally, the structure between the fork forming a rudimentary fifth cusp in the middle of the distal end of the crown (Fig. 243).

**Lower Third Molars.**—With the third molars or wisdom teeth, the crown is generally smaller and narrower than are the other two molars. The cusp may be similar in character to the second molar, but this tooth is subject to a much greater variation than are the other two, and in fact at times the character and arrangement of the cusps may be entirely different not only from any other tooth in the mouth, but from any other human tooth.

The difference between the rights and lefts in the molars of the lower jaw is not so marked as it is in the case of the upper, and occasionally it is so slight that they may be used interchangeably. This is especially true if it is desirable to cross the bite so that the lower molars will bite outside the upper rather than on the inside. In this case, the cusp of a right lower molar may be used on the left side or that of a left may be used on the right, so as to bring the broad buccal cusp on the lingual side, thus giving a broader occlusal surface.

Again, the cusp might be reversed end for end so as to secure a better occlusion, and then, after a little carving, it can be made to represent the tooth which is being reproduced.

This interchangeability will very rarely work in the case of an upper molar. It should be remembered in this connection, that the one thing for which the operator is working is to restore the mouth to as nearly a normal condition as possible, and in order to do this, it is absolutely essential to secure the most perfect occlusion it is possible to obtain.

**The Upper Bicuspids.**—In the upper bicuspids, as the name implies, there are but two cusps, the buccal cusp being sharp, as in the case of the buccal cusps of the upper molars, and very similar in character, while the lingual cusps are more rounded, although not to the same extent as are those in the molars. The first bicuspids is the

larger of the two, but the character of the cusps of the two are nearly identical.

**The Lower Bicuspids.**—The first bicuspid has a long sharp buccal cusp, but there is very little in the way of a lingual cusp. In fact, this tooth often presents the appearance of a cuspid with simply a rudimentary cusp on the lingual aspect of the tooth just above the basilar ridge and is of no assistance in mastication.

With the second bicuspid, which is larger than the first, the buccal cusp is not so high nor so sharp as that of the first. The lingual cusp is broader and flatter than that of the first, and is often divided so as to form what might be called a tricuspid.

Both the cusps of the upper and lower bicuspids may often be used interchangeably for either side of the mouth, in order to secure better results, and the character of the cusps of the opposite sides is so similar that it is very rarely that the change would be detected.

### CONSTRUCTING A BUILT-UP CONTOURED GOLD CROWN WITH SOLID GOLD CUSPS.

**Taking the Measurement of the Root.**—The measurement of the stump or root should be taken straight across and as nearly at a right angle with the sides as possible. It is very rarely that this measurement should actually follow the gum line. Where there has been a recession of the gum on one or more sides of the tooth, if the wire with which the measurement is taken is carried down to these points all around, it will be found that the band, when it is made, will be too large to fit the stump.

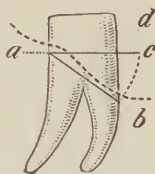


FIG. 244

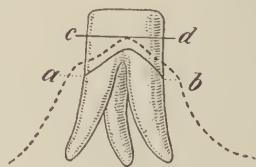


FIG. 245

As will be seen in the illustration of a lower molar where the tissues are high at the back, but show a considerable recession on the mesial side of the tooth (Fig. 244), if the measurement is taken following the line of the gum from *a* to *b*, when it is brought up so that it extends straight across following the line *a* to *c*, it will be



much larger than it should be. The wire should be forced as far under the gum distally as possible and then brought straight across to the point *d*. Then, too, in Fig. 245, showing the cast of an upper molar with considerable recession of the tissues both buccally and lingually, it can readily be seen if the measurement follows the gum line from *a* to *b* that when it was straightened out it would extend from *c* to *d*, with the result that a band made to this measurement would be much too large.



FIG. 246



FIG. 247

**Built-up Shell Crowns with Solid Cusps.**—A built-up crown, with solid cusps, is the best and most enduring crown that can be made, whether used as a single crown or as an abutment for a bridge (Fig. 246).



FIG. 248



FIG. 249



FIG. 250

Where it is necessary to restore very much contour (Fig. 247), the band should be cut on a bevel, measuring from the gingival edge and flaring it outward toward the occlusal, the amount of the flare depending on the amount of the contour which is to be given to the crown (Fig. 248). Where the adjoining teeth have



FIG. 251



FIG. 252



FIG. 253

closed in on the stump, and there is very little or no contour to be restored, as in Fig. 249, the ends of the band may be cut parallel with each other (Fig. 250). If in this case, the band were cut on a bevel and made larger at the occlusal end, when forced onto

the stump it would be squeezed together mesially and distally and forced out buccally and lingually beyond the line of the adjoining teeth as in Fig. 251.



FIG. 254

One end of the band is beveled to a knife edge and the ends are brought together and sweated or soldered in the manner previously described. The band should now be given the approximate shape of the tooth which is to be crowned (Figs. 252 and 253) and is next roughly festooned so as to follow the gum line approximately (Fig. 254).

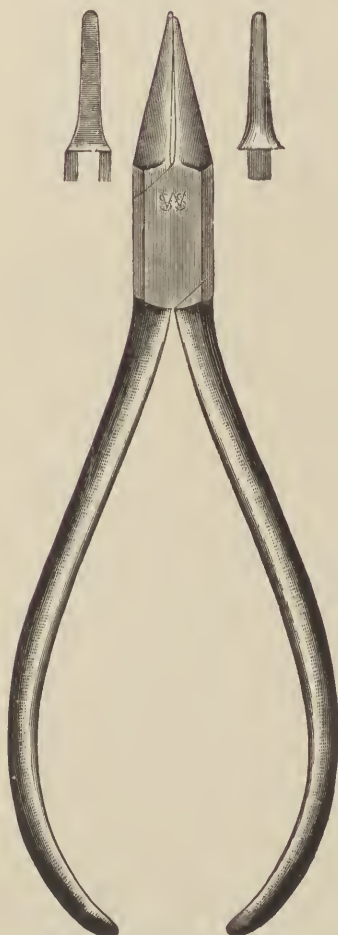


FIG. 255.—Peeso pliers.

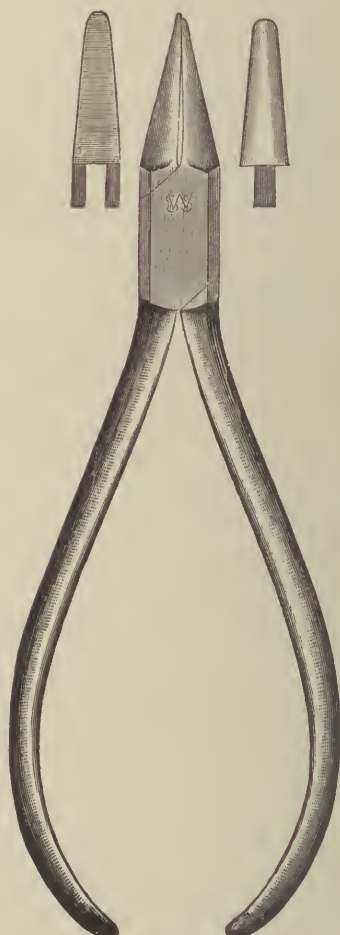


FIG. 256.—Robinson pliers.

The shaping of the bands is best done with the collar pliers shown in Figs. 255 and 256. The beaks of Fig. 255 are very narrow, one having a flat face, the other being rounded and slightly shorter than the other. Fig. 256 is made on the same plan, having one flat and one rounded, but the beaks are much broader than Fig. 255. Fig. 255 is used in shaping lower incisors and other small bands, and Fig. 256 for molar, central incisor and cuspid bands.



FIG. 257.—In using the file, the band should be held gingival edge up and filed from the inside outward so as to throw the feather edge to the outside, leaving the band smooth on the inside. The feather edge is afterward removed by beveling the edge of the band on the outside.

The band is placed on a stump and scribed around on the outside with a sharp instrument, following the gum line carefully (Fig. 254), after which it is removed and trimmed to the line and the outer edge bevelled so that it will pass under the gum without irritating it. It is then replaced on the stump and forced well down over it.

It is again marked, and removed and with a fine file accurately shaped to the gum line, so that it will pass, evenly, about one-sixteenth of an inch beneath the gum all around (Fig. 257). After it is accurately in position the impression and articulation is taken.

After removing the impression from the mouth, it is left on a blotting pad for a few minutes and is then assembled, the band waxed in place in the impression and the model is cast and articulated and prepared as already described when treating of making models. When the model and articulation have been separated, the band is removed by warming it slightly or by grasping it with a pair of warm pliers which softens the wax and allows it to come away from the model. The remaining wax should be burned away and the band cleansed in dilute sulphuric acid. The wax should also be removed from around the stump on the model.

**Contouring the Band.**—The stretching of the band for contouring may be done on the beckhorn of the anvil or with the stretching and contouring pliers (Fig. 220) as previously described. In stretching the band, whether with the pliers or on the anvil, it is started at a point slightly above the gingival edge, working around the band from this point and gradually increasing the pressure as the occlusal end is approached, giving the band something of a bell-shape, until it is flared somewhat more than enough to give the required contour (Fig. 258).



FIG. 258



FIG. 259

In using the pliers, one beak of which has a broad flat face, while the other is narrow and has a round face, the smaller beak is placed inside the band and the larger flat-faced beak on the outside; the stretching is done by closing the handles lightly and working around the band, gradually increasing the pressure as the work progresses from the gingival to the occlusal end.

The band is then annealed, and with a pair of Robinson pliers (Fig. 256) the occlusal end is straightened so as to give the desired broad point of contact with the adjoining teeth. The edge should not be tipped inward in the least, but the sides should be brought so that they are parallel with each other for approximately about one-third the length of the band, as in Fig. 259.

If the band is simply stretched and not straightened up toward the occlusal end, it will be seen by the illustration, that if the cusp was soldered on and the crown completed, the point of contact would be very slight and the crown would not in the least resemble the crown of a natural tooth (Fig. 260).

If the shaping of the band is done with a pair of contouring pliers and the edge turned in too much at the occlusal end, when the cusp is in place, the point of contact will be below where it is united to the band, leaving a groove extending around the whole crown at the point of union of the cusp, giving the crown something of a door-knob effect (Fig. 261).



FIG. 260



FIG. 261

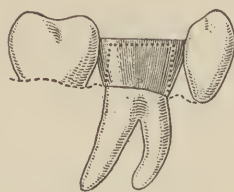


FIG. 262

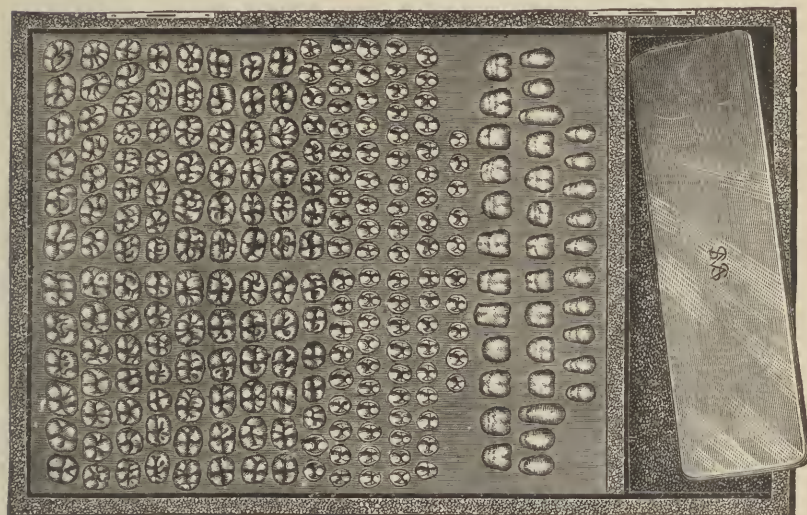


FIG. 263

After the occlusal end of the band has been straightened as described above, it is shaped so as to bring out the normal contour of the tooth and to bring it in close contact with the adjoining teeth



(Fig. 262). The occlusal end is filed perfectly flat and it is then ready for the cusp.

**The Making of the Cusp.**—There are many different methods of making the cusp, any one of which may be indicated in certain cases. One method is to carve the cusp in wax, modeling composition, or plaster. A fusible metal die and counter-die is then made and a matrix of very thin pure gold, about three one-thousandths of an inch in thickness, is swaged from this and filled with coin gold or the trimmings from the band.

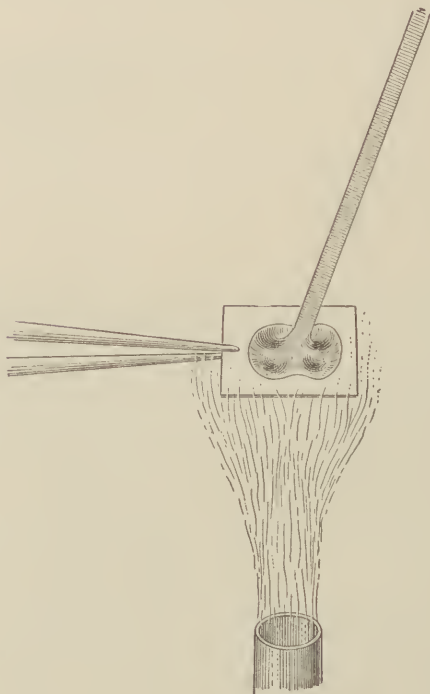


FIG. 264

Another method is to have a supply of cusp buttons, similar to those used in the Hollingsworth system (Fig. 263). These buttons consist of a thin copper matrix filled in with soft solder. There are many good cusp buttons supplied with the Hollingsworth system, but they can be added to very easily by the dentist himself, as it is impossible to have too many of these buttons.

In making cusp buttons an impression is taken, and a model

prepared of any cusp which it is desired to reproduce, and a die and counter-die made of fusible metal. The matrix is made of very thin brush copper, about No. 36-gauge, which can generally be obtained at an electrical supply house. This is well annealed and swaged between the die and counter-die, carefully burnishing out any wrinkles which may appear.



FIG. 265

In very deep cusps it may be necessary to anneal the copper two or three times during the operation. After a perfect matrix has been obtained, it is thoroughly cleansed. This may be done by heating and dipping it in a 50 per cent solution of alcohol and water. It is then dried off, fluxed with zinc chloride and filled in with tinner's half and half soft solder. This is very easily done by using the solder in the form of wire. The margin of the cusp matrix should be left until after it has been filled and the excess solder filed away.

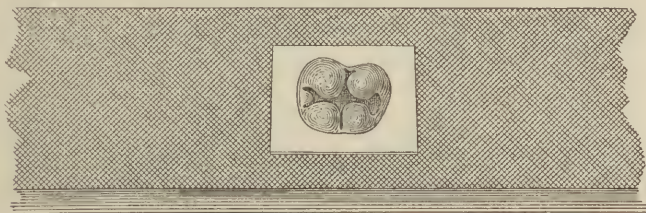


FIG. 266

The cusp matrix is first fluxed with zinc chloride and then grasped with a pair of pliers and held over the flame of a Bunsen burner, and the wire solder fed in (Fig. 264), using enough so as to leave the surface slightly convex (Fig. 265), after which it is thoroughly cleansed with water to wash away the zinc chloride, and dried. Then the cusp button is laid on a very coarse flat file, grasped in the fingers, and rubbed back and forth, the extending surplus of the copper matrix protecting the fingers (Fig. 266), and the surplus solder is filed away until the under surface is perfectly flat.



FIG. 267

After it is filed perfectly smooth and flat, the cusp button is completed by trimming and smoothing the edges (Fig. 267).

By having a large selection of these cusp buttons, one can generally be found which will so nearly fit the case in hand as to require but slight changes. It should be slightly larger than the band.

If there are any points which need raising they can be built up with hard wax or modeling composition and suitably carved.

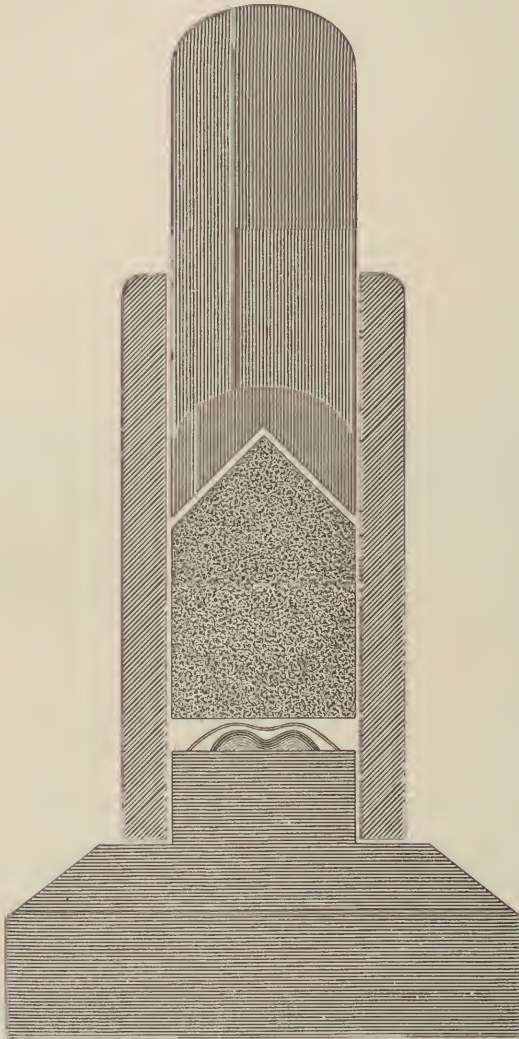


FIG. 268

A pure gold matrix for a gold cusp is made by using one of the swaging devices to be procured at any dental depot. They consist of a base with a raised anvil, a heavy steel tube passing over the

anvil with a soft rubber plunger which fits into the tube and over this a steel plunger (Fig. 268). The pure gold used for the matrix is about three one-thousandths of an inch in thickness. This, when the gold is doubled; will fit into No. 34 Brown and Sharpe gauge.

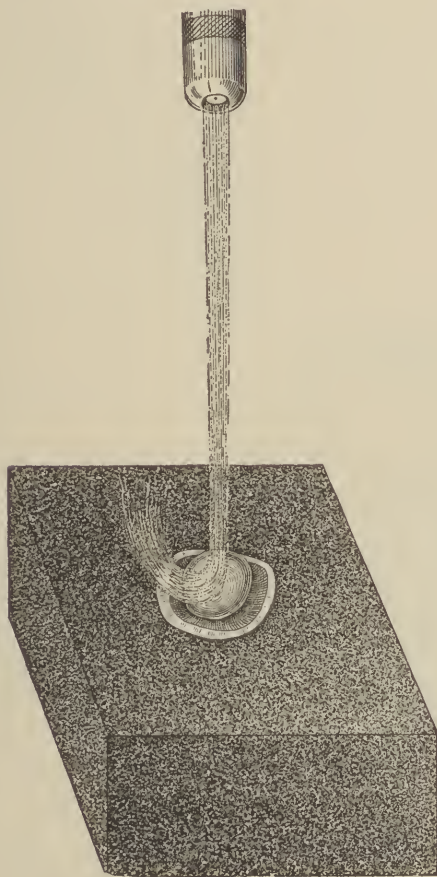


FIG. 269

A piece of this pure gold, a little larger than the button, is annealed and pressed over the button as it lays on the anvil (Fig. 268). The metal cylinder is then put in place and the rubber dropped into it on top of the pure gold, and over this the steel plunger. The swager is then placed on a large anvil and the plunger is struck a

sharp blow with a heavy hammer.<sup>1</sup> The matrix will be a perfect reproduction of the button which has been used. This matrix is now filled with coin gold.

**Filling the Cusp Matrix.**—The trimmings of the band and other scraps of coin gold are fused into a button sufficiently large to fill the matrix. The matrix is placed on the charcoal block, cusp side down, and the heated ball of gold is placed in it and fused with the blow-pipe. This can be done by using a brush-flame, care being taken not to use more air than is necessary to keep the flame steady,

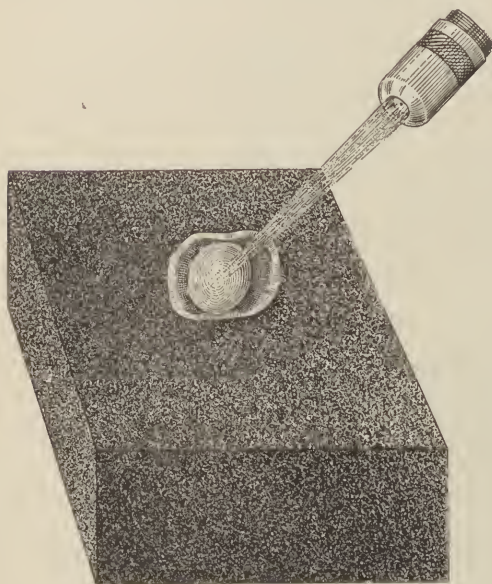


FIG. 270



FIG. 271

holding the blow-pipe about two and a half to three inches above the button of gold, using a steady pressure of air, just enough to carry the flame to the button and curl a little at the end, as in Fig. 269. The flame is flashed off for an instant, if the matrix becomes over-heated, and then back again, repeating this as may be necessary until the gold is melted and fills the matrix. This slow soft flame will give sufficient heat to melt the coin gold, but not the pure gold matrix, which has a higher fusing point, unless it is held in one place for too long a time.

<sup>1</sup> A rawhide hammer, or a hammer having a fiber face is best, as it will not mar the plunger as does a steel hammer.



To successfully fill a thin, pure gold matrix with coin gold requires care, but a little careful practice with the blow-pipe will enable one to accomplish it with very little danger of burning. If too much air is used, it will give a hotter flame, and perhaps burn the matrix. The pure gold, being of a higher carat, with a slightly higher fusing point, will withstand a greater heat and allow the coin gold to melt and fill the matrix, provided the heat is concentrated upon the coin gold.

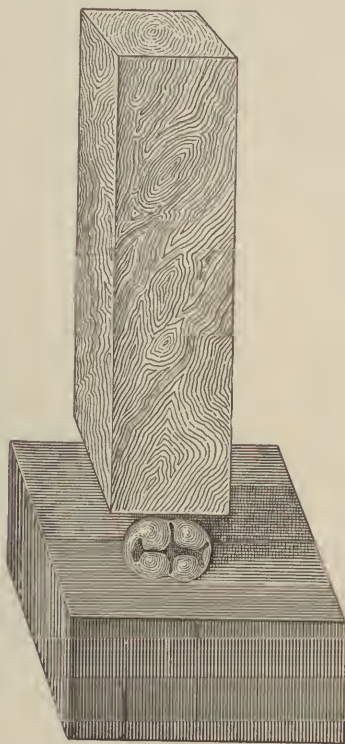


FIG. 272

The cusp matrix can also be filled by keeping a small hot blue flame on the button of coin gold until it melts and fills the cusp (Fig. 270), but care must be exercised to keep it on the coin gold all the time, because if it should be moved a little to one side, so that the flame strikes the pure gold, it will be promptly burned as it is so very thin, and the flame so very hot. After it has been

properly filled, it is cleansed and the under surface of the cusp is filed perfectly flat (Fig. 271).

In order to file this surface easily, the cusp should be held firmly. This can best be done by setting it in the end of a soft pine stick. The cusp is laid, flat side down, on an anvil, the end of the soft pine stick resting upon it, and the stick struck a sharp blow, with a mallet or hammer, thus driving the cusp into the wood (Fig. 272).

Another method is to heat the cusp red hot and place it on an end of the stick, cusp down and let it burn its way into the wood until it is nearly flush. Either method will hold the cusp firmly, so that it can be easily filed.



FIG. 273

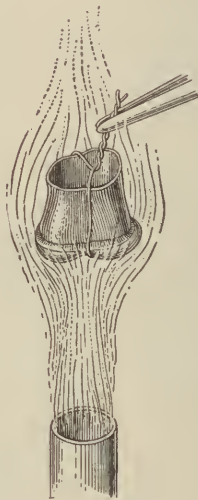


FIG. 274

**Uniting the Cusp to the Band.**—After filing, the cusp is fastened with iron binding wire to the band in its proper position, the wire being brought over the cusp and across the gingival end of the band, and twisted in the center so as to draw and hold the cusp in contact with the edge of the band. Then the line of contact between the band and the cusp is well fluxed.

The twisted ends of the wire are grasped in a pair of pliers and

the crown held over the tip of a Bunsen flame (Fig. 273). As the cusp becomes thoroughly heated and the gold almost reaches the fusing point, the crown is lowered slowly toward the center of the flame (Fig. 274). By watching it carefully a dark line, appearing like flowing solder, will seem to flash around the cusp where it joins the band. This is the metal melting, and indicates that the cusp and the band are perfectly united.

As before stated, the crown should be held over the tip of the flame until the cusp has become thoroughly heated. If it is at once lowered into the flame, the cusp, being so thick and heavy, becomes heated very slowly, and the flame passing up around its sides would melt and ruin the lighter band before the cusp was hot enough to be sweated to it.

It should be remembered, that in sweating, the parts to be united should be brought to nearly the same degree of heat, otherwise one part will melt before the other, and there will be no union.

## CHAPTER X.

### THE MAKING OF THE CROWNS.

#### RICHMOND OR PORCELAIN-FACED CROWNS.

IN making a banded crown for any of the teeth in the anterior part of the mouth, the stump should be left standing from one-thirty-second to one-sixteenth of an inch out of the gum, until after the root has been trimmed and the band fitted.

After trimming, the measurement of the root is taken with a wire, straight across, at right angles to the long axis of the root (Fig. 275). It should not follow the festoon of the gum line, as that would carry the measuring wire lower on the buccal and lingual sides than on the mesial and distal, bringing it on a curve so that when the wire was straightened out it would be larger than the circumference of the root.



FIG. 275

The gold strip is cut, to measurement, with the ends parallel with each other so that when the band is made the sides will be parallel. One end is beveled and the lap made, and the band is sweated together and afterwards shaped and fitted to the stump, as in the case of the molar crowns already described.



FIG. 276.—Kirk's dentimeter, suitable for taking the measurement of roots.

It should be carried well under the gum especially on the labial sides, being festooned carefully to follow the gum line (Fig. 277). After the band has been fitted it is removed and the root faced off, cutting well beneath the gum on the labial side so that the band will be entirely hidden. This ordinarily would be carried about one-thirty-second of an inch below and at times even to a greater depth if the conditions are such to allow of its being done.

This work is accomplished with the root facers in the manner

already described, after which the band is replaced on the stump and forced up as far as it will go. It is then scribed around on the inside, flush with the face of the stump, with a sharp instrument. The band is now removed and trimmed and filed to this line with



FIG. 277

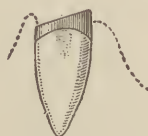


FIG. 278

a very fine flat file. The cutting and filing must be done very carefully, as the band, being narrow and frail, is easily bent out of shape. After filing, it is again tried on the root, so as to be sure that it has not become distorted, before sweating on the floor (Fig. 278).

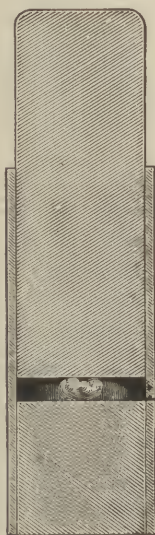


FIG. 279

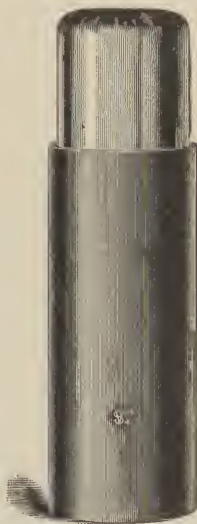


FIG. 280

It is not necessary that the band be wide on the labial side. In fact it is rarely that it should be much more than one-thirty-second of an inch in width at this point. It is only necessary that it extend over far enough to get a good grip on the root, but great depth is



not essential, as the greatest strength of the band is at the point nearest the floor.

The band being properly filed, a piece of coin gold, No. 30 gauge, is prepared about one-sixteenth of an inch larger than the band. This is made perfectly flat. A little swaging device is used for this purpose, consisting of a steel anvil with a flat, smooth face, inserted in one end of a brass tube and having a steel plunger with a perfectly flat polished face which fits into the tube (Figs. 279 and 280).

The metal for the floor is annealed and then placed on the center of the anvil at the bottom of the tube. The steel plunger is then inserted into the tube over the gold and tapped with a hammer until the metal is perfectly flat.

The gold is then cleansed in acid. The band is now placed on this piece of gold so that it extends about an even distance from the

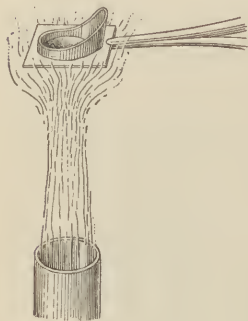


FIG. 281

edges all around. It is fluxed, one corner of the floor grasped in a pair of pliers and held in the Bunsen flame until it is sweated. The band and floor being of about the same thickness, it should be held near the middle of the flame, so that the flame will spread and come up around and over the cap, heating both the band and the floor equally (Fig. 281).

As the piece is held in the flame, the edges of the floor will usually begin to melt and curl up slightly, just as the floor and band reach the fusing point. When this is seen it is removed from the flame. It will generally be found that at the corner where the floor was grasped by the pliers, the band and floor have not been united, owing to the pliers drawing the heat from the gold at this point. The floor is again caught by the opposite corner and held in the flame until the two parts are thoroughly united all around. The surplus metal of the floor is now trimmed leaving it from one-sixty-fourth to one-thirty-second of an inch larger than the band all around (Fig. 282). It is then ready for the pin.

**Where to Drill the Hole in the Floor of the Cap for the Pin.**—There are several ways of locating the point at which to drill the hole for the pin in the floor of the cap. Some operators use wax on the under side of the cap and press the cap on the root, the position of the hole opening being marked on the wax. Others, place in the

root a short post with a sharpened end projecting just above the face of the root, so that when the cap is forced in place it will make a mark over the opening. But such methods are not necessary and take up valuable time.

In the six anterior teeth the canals are exactly in the center of the root. In enlarging the canal for a post for a Richmond crown in any of the incisors, after having followed the canal, the reamer is partly withdrawn and the canal given a lingual slope, cutting it in that direction about the width of the pin lingually from the original line of the enlarged canal (Fig. 283). In making the hole in the floor of the cap, first locate the center of the floor and then drill, or punch the hole in the floor just the width of the post lingually (Fig. 284), and then by giving the post a slight bend, to follow the canal, it will pass through the floor, far enough from the buccal side to allow of plenty of room for the facing (Fig. 290). This will apply to the four incisor roots. The cuspids are generally broad enough bucco-lingually so that the post can be placed directly in the center of the root, but occasionally it may be necessary to slope the canal slightly lingually. When making a porcelain crown, the hole is drilled exactly in the center of the floor and we know of a certainty that the post will be in its proper position.



FIG. 282



FIG. 283



FIG. 284



FIG. 285



FIG. 286

The pin for a first bicuspid crown, should always be placed in the lingual root. Unless the stump has been broken or decayed far below the gum so as to make the two roots very short, there is no necessity for using more than a single pin. The force exerted on these teeth is always upward and outward, there being practically no stress at all in the lingual direction (Fig. 285). If a single pin were placed in the buccal canal, the force being outward and upward, it would tend to bend the pin and loosen the crown from the lingual

side, perhaps enough so that the edge of the band would clear the root at this point, with the result that the crown would be forced outward, and would almost certainly fracture the buccal side of the root (Fig. 286).

If the post be placed in the lingual root, the cap is bound down tightly at that side, and there is practically no possibility of its being forced outward, or being loosened from the buccal side, as the force of mastication will keep it pressed tightly against that face of the root (Fig. 287).



FIG. 287



FIG. 288



FIG. 289



FIG. 290

In order to locate the opening in which to place the pin in these roots, follow out the lingual curve to a complete circle on the floor of the cap, and drill the hole exactly in the center of this circle. The pin will then enter the canal freely (Fig. 288).

Normally, the second bicuspid, has but a single root, but this is broad and flat, and there is more leeway than in the first bicuspid. In this case drill the hole a little lingually from the center, having enlarged the canal along this same line. It will also give more room in which to place the pin, as the root is somewhat constricted in the center (Fig. 289).

It frequently happens that the second bicuspid will have two roots, and where this occurs, it should be treated the same as the first bicuspid.

In grinding the facings for the Richmond crowns, it is better that the labial side of the floor of the cap be filed perfectly flat and the facings ground flat to fit the floor (Fig. 290), especially in the six anterior teeth where there is a likelihood of the gold being seen from the front if the facings are beveled so as to just come in contact with the floor only at the labial side (Fig. 291). With the bicuspids there is not the same likelihood of the gold being visible between

necks of the teeth, so there is no objection to beveling the lower part of the facing, if it is desired.

The hole in the floor having been located and drilled, the cap is placed on the root and the pin put in position, carrying it as far down the canal as possible, waxed in place, removed, invested and soldered (Fig. 292). These pins are preferably made of round platinumized gold clasp wire, and should be of about No. 14 to 16 gauge, the size of the pin depending on the tooth which is to be crowned.



FIG. 291



FIG. 292



FIG. 293

**Backing and Soldering.**—The backings for these teeth are made of pure gold about 36 gauge, or of soft platinum about three- or four-one-thousandths of an inch in thickness. Crown metal plate which has one surface of gold and the other of platinum may also be used. If it is desired to lighten the shade of the tooth, the gold side is placed next to the facing. The backings should fit the facing closely and extend from the lower edge of the lingual side of the facing to about one-sixteenth of an inch beyond the incisal edge, as in Fig. 293. The pins are flattened and then bent upward toward the incisal edge and against the backing, thus holding it close to the facing. The pin roughing and bending pliers are useful for this purpose and are shown in Fig. 294.

Fig. 295 shows a small wax spatula especially adapted for light work of this kind.

The facing is waxed in position on the cap with sticky wax. After it has chilled, it will be found that the contraction of the wax on cooling has tilted the facing slightly so that it rides on the cap on the lingual side of the ground portion of the facing raising its labial side clear from the floor of the cap (Fig. 296). If it were soldered without remedying this defect, the facing would be still further drawn from the floor on the labial side, due to the contraction of the solder, leaving a V-shaped space between the facing and the floor of the cap.



FIG. 294



To overcome this difficulty, after the facing has been waxed, it should be pressed outward at the incisal edge until the labial side presses on the floor of the cap, and the lingual side is just clear of it, so that if it is held up to the light, it can be seen that it is not



FIG. 295

in actual contact at that point (Fig. 297) If this has been done, when the crown is soldered, the contraction of the metal will draw the facing close to the floor on the lingual side, without disturbing its contact on the labial side, thus making a perfect joint



FIG. 296



FIG. 297

The investment should be only large enough to hold the parts in position (Fig. 298) A small amount of the investment is placed on the slab and smoothed, as in soldering a porcelain crown The inside of the cap is filled with investment and laid face down on the investment which has been placed on the slab, and settled into

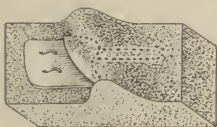


FIG. 298




FIG. 299

it until the lingual side of the facing is exactly flush with it. The pin is covered with investment and the extending backing on the incisal edge is also covered, bringing it flush with the lingual side of the facing, as in Fig. 299.

After the investment has hardened, it is warmed slightly and the

wax removed, after which it is heated thoroughly, and soldered. No more solder should be used than is necessary to restore the normal contour of the tooth, but the incisal edge should be covered thickly. After it has cooled, it is removed from the investment, cleansed in acid and finished.

The gold at the incisal edge should be left as thick as the bite will permit, in order to protect the facing, and it should be ground so as to leave it a little higher on the lingual side, but not enough so that it can be seen (Fig. 300).



FIG. 300



FIG. 301



FIG. 302

The normal shape of the tooth should be restored as nearly as possible. The lingual surface of the incisors should be made concave from the incisal edge for about half the length of the crown (Fig. 301), and not convex as is so frequently done (Fig. 302).

The Richmond or pin crowns, and shell crowns are the principal attachments used in fixed bridge-work.

### PORCELAIN CROWNS (DOWNEY CROWNS).

In making a so-called Downey crown for any of the six anterior teeth, where a facing is used, and the lingual side built up with porcelain, the root is given a double slope in the manner already



FIG. 303



FIG. 304



FIG. 305

described, on pages 122 to 129, giving reasons for this formation and shown in Figs. 139 to 142, cutting well beneath the gum labially and carrying it just about to the gum on the palatal side (Fig. 303).

The cap is made of iridio-platinum plate, No. 30 or 31 gauge, and in the same manner as the cap of a Richmond crown, with the exception of its being soldered with pure gold and having a double slope (Fig. 304).

The top of the pin is made flat and the corners rounded. It should never be left sharp, as it is after having been cut off with the cutting pliers, as this would have a tendency to act as a wedge in the porcelain and split the crown.

The pin is placed exactly in the center of the cap, and the facing ground so that the gingival end touches the floor lightly at the labial side only (Fig. 305). This will allow of the porcelain body being worked under the facing more readily than if the facing had a broad contact with the floor. The facing may be grooved out between the pins to permit of the post setting well into the facing (Fig. 306), allowing plenty of room on the palatal side for the porcelain body. The two pins may be notched slightly with the edge of a small half-round file on the upper side close to the facing (Fig. 397), to allow of their being bent flat against the facing, and brought into contact with the sides of the post (Fig. 305). They should not be bent out and around the post, in any of the incisors, as this would frequently carry them so far lingually as to show through the porcelain, and consequently weakening the crowns.



FIG. 306



FIG. 307

After the pins are bent in contact with the sides of the post they are waxed firmly with hard sticky wax. A small amount of wax should be flowed around the labial edge of the band between it and the facing to prevent any of the investment material from working in between the facing of the cap.

In investing this, for soldering the pins to the post, a small amount of investment is placed on the slab and smoothed off perfectly flat, leaving it from about three-eighths to one-half an inch in thickness. The crown is then laid face down on the investment and pressed lightly until it is imbedded even, or flush, with the lingual side of the facing. A little of the investment is then placed over the end of the pin to hold in its position (Fig. 308).

No investment should be placed inside of the cap. This should be kept perfectly clear, the bulk of the pin and the cap being exposed to the flame. If the cap is filled with investment material, and the post and cap thoroughly covered, as in the illustration (Fig. 309), it will require a greater length of time, and much more heat to unite the pins to the post, as there would then be such a large mass of investment to heat up. The investment taking the heat from the post, would make it very difficult to get it hot enough to solder the pins of the facing to it with pure gold. On the other hand, if the cap and the larger part of the post is left exposed, as soon as the investment is heated up to a red heat, by throwing the flame on the metal parts, the pure gold will quickly flow in between the pins and the post.



FIG. 308



FIG. 309

The flame of the blowpipe should never be thrown on the metal parts until after the investment and facing are thoroughly heated to a bright red heat, otherwise the facing will be broken, owing to the sudden expansion of the platinum pins. After it has been soldered, it is cleansed in acid and is ready for the application of the porcelain body.

### **PORCELAIN CROWNS WITH SOLDERED BASES FOR TEETH ANTERIOR TO THE MOLARS.**

In restoring any of the teeth anterior to the molars with all porcelain crowns with a soldered base, the method pursued in each case is exactly the same. Where the bite is somewhat close, it is well to give the face of the root a double slope so as to get a greater depth on the lingual side.

The band is made, the floor sweated to it and trimmed so that it is a little larger than the band all around to allow for restoring the enamel contour as in Fig. 282. On the labial side especially, care should be used so that the crown will be in perfect alignment with the adjoining teeth. A hole is then made in the floor a little larger than the pin to be used, the canal is enlarged and the cap and pin put in position on the root and waxed together. They are then

removed, invested and the pin soldered to the floor of the cap with 21-carat solder (Fig. 310). The cap is now replaced in the mouth and the impression and articulation taken and the model made and articulated in the usual way. The pin extending above the cap is ground away nearly flush with the floor of the cap.

The crown having been selected, is built up, if necessary, and ground and shaped to correspond with its mate on the opposite side of the mouth. It is always better when making a crown for a tooth, cuspid, bicuspid or one of the anteriors to take a careful impression of the same teeth on the opposite side of the mouth and make an accurate model of them. This will serve as a guide and the natural teeth can be matched perfectly. The crown having been ground to the desired shape, is glazed and then ground to fit the labial third of the floor of the cap (Fig. 311), but should clear it on the lingual side enough to allow for soldering. It is then fastened in place with wax and a little wall of plaster or or modeling composition



FIG. 310



FIG. 311



FIG. 312

built up on the labial side. The mesial, distal and lingual sides are now beveled, deepening the bevel a little opposite the pin or a little labially from it (Fig. 312). A base of 36 gauge pure gold is then made, burnishing and working it carefully into place and annealing it frequently until it fits perfectly. It should extend a little beyond the upper edge of the bevel all around as in Fig. 385. A hole is then made in the underside of the pure gold base and a platinized gold pin passed through it to the bottom of the hole in the base of the crown and waxed fast. It is then removed, invested bottom side up (Fig. 388) and soldered with a little piece of coin gold. After it has been cleansed in acid it is replaced on the crown, put in a strong napkin, base down, and the napkin twisted tightly around it, at the same time pressing it with the fingers of the left hand to get the gold in close contact with the crown at every part.

The lingual side of the base is tacked lightly to the crown at a couple of points (Fig. 618, *a* and *b*), and the crown replaced on the cap (Fig. 385), held in place against the labial wall and the base



waxed well to the cap. The two bits of wax holding the crown to the base are chipped away, the crown is removed and the cap and base invested as shown in Fig. 313, leaving the floor of the cap and the beveled sides, and floor of the base well exposed. After drying out and heating up, it is fluxed and soldered with 20-carat solder, filling the space between the base and floor, making it a little flush to allow for finishing. The investment is now broken away from around the sides of the cap and the band covered with solder, flushing it well from the lower edge to the extending edge of the floor.



Fig. 313

After cooling, it is cleansed in acid and finished. The surplus pure gold above the bevel is trimmed away, the reinforced band is shaped and finished so as to restore the enamel contour at the gingiva. The crown is now carefully fitted in the base and then cemented, being held under pressure until the cement begins to set. After the cement has well hardened, the crown is finished using fine wheels and grinding from the gold toward the porcelain and making it smooth and even at all points. The rubber and pumice wheels in the engine hand piece are used, and it is finished with felt wheels and a little pumice and rouge on the lathe.

### FIXED PORCELAIN CROWNS WITH SOLDERED BASES FOR MOLARS.

Where a molar crown is badly broken down, the sides of the stump are trimmed so that a band will pass over and hug the root tightly. A measurement is then taken and an impression, a model prepared, and the band made and carefully festooned to it. At the next visit of the patient, the band is fitted to the stump, after which it is removed and the stump ground down about flush with the gum. The band is now replaced on the root and scribed around the inside with a sharp instrument. It is removed, cut and filed to this line and put back in the mouth. Two or three of the canals are then enlarged and made as nearly parallel as possible to the depth of about one-eighth of an inch or a little more. Pieces of wire about 14 gauge and about one-quarter or five-sixteenths of an inch long are then put in these enlarged canals, held in place and parallel, with a little soft wax.

An impression is now taken and the pins will probably come away with it, but not the band. This is removed from the root, put in

the impression and waxed around the outside heavily with sticky wax, and on the inside lightly with pink paraffine and wax, just enough so that it will draw from the model easily and to obliterate any undercuts which might be caused by pressing the edge of the band in at the buccal, or buccal and lingual sides at the constriction where the roots begin to bifurcate. The pins are waxed lightly on the sides, the impression is varnished and the model run. After it has been separated from the impression, the band and pins are removed. A floor of 30-gauge coin gold is fitted and sweated to the band.

The floor is now trimmed, leaving it, as in the anterior cap, extend beyond the sides of the band. The next step is to locate the points at which to make the holes in the floor for the pins.

This is easily done by first laying a little straight-edge or the edge of a card across the center of the holes in the model and making pencil mark across, extending beyond the stump in different directions as shown in Fig. 314. The cap is now replaced and with a straight-edge the markings are carried across the floor of the cap, and at the intersection of these lines, are the points at which to drill the holes. The holes can be first made with a plate punch and then enlarged to the desired size. They should be somewhat larger than the pins used. The pins of platinized gold are made a little smaller than the ones used in taking the impression. The top of the stump and the holes are oiled so that the wax will not stick to the plaster, the cap put on, the wires inserted, held in the center of the holes and waxed. It is then removed, invested and the pins soldered to the floor with 21-carat solder. The pins extending above the cap are cut off quite close to the floor and smoothed over a little with a fine stone. The cap is now placed in the mouth, the impression and bite taken and the model prepared as described.



FIG. 314



FIG. 315

From this on, the crown is made in practically the same manner as was the anterior crown. The crown is built up if necessary, properly shaped and glazed.

It is ground fairly close to the floor of the cap on the labial side, but left farther away on the lingual and is roughly articulated, but left a little high. The lower edge is beveled all around (Fig. 315). A little plaster wall is now built over the top of the crown, taking in one or two of the adjoining teeth. After the plaster has hardened, it is removed

and the pure gold base is made, extending entirely across the crown as in Fig. 390.

Where the bite is close, a pin-hole in the center of the crown can not always be made deep enough for retention and where this is the case, it is best to have two pins. These should be placed far apart and where the crown is deepest. It is best to make the holes, say, one under the anterior buccal cusp and the other under the posterior lingual in the lower, and in the upper, under the palatal and one of the buccal cusps where the porcelain is thickest.

The holes are made and slightly countersunk at the entrance. The pure gold base is now put on and the position of the holes in the crown located by pressing the gold into the opening with a pencil rubber or a stick. It is then removed, the holes made in the base, replaced on the crown, and the platinized gold pins inserted and waxed. The base is invested the underside up as in Fig. 388 and the pins soldered with small pieces of coin gold. After cleansing it is put back on the crown and twisted tightly in a napkin to insure perfect contact, and the upper edge of the gold waxed lightly to the crown at a point on the buccal and lingual sides (Fig. 657). It is then put in the plaster wall, tacked to it lightly with wax on both sides, replaced on the model and held tightly while being waxed to the cap.

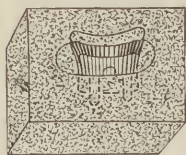


FIG. 316

The crown is then removed and the cap is invested, the investment not being made very deep, so as to expose both the buccal and lingual sides of the cap and base. After the investment has hardened, it is trimmed out well buccally and lingually, uncovering the beveled portion of the base and the edge of the floor of the cap all the way across and quite through on the mesial and distal sides, clearing the beveled edge of the base and edge of the floor by about one-sixteenth of an inch (Fig. 316). The wax is then washed out with a thin stream of boiling water and it is dried out and heated up for soldering.

The solder used is 20 carat and it is started from the lingual side heating the piece up well and feeding it in in strip form and not too fast. As the first is applied the flame should be held on it until it has drawn through to the other side and then fed in as it melts until the lingual side is full and slightly rounded. The buccal side is then turned up and any needed solder is added. The investment is now broken away from the mesial and distal sides and from around

the band which is built up with solder flush with the overhanging edge of the floor and over the base if necessary. When the investment has cooled, it is opened and the piece cleaned, the crown carefully articulated, carved, and the fissures stained. It is then cemented and finished in exactly the same way as the anterior.

### HALF CAPS OR WINDOW CROWNS.

The half cap, or window crown, was at one time used quite extensively as an anchorage for bridges. It was very unsightly and a very poor attachment to say the least, and while at the present time there are a few who still use it, it is becoming obsolete, so that it would be a waste of time to go into a description of its construction.

### JACKET CROWNS AS SUPPORTS FOR BRIDGE-WORK

It sometimes happens that a small bridge is indicated when the radiograph shows a condition of the roots which would render it difficult or impracticable to devitalize and fill the canals perfectly. In a case of this kind a properly made jacket crown may be used as an anchorage. These are indicated where it is necessary to use peg-shaped laterals or underdeveloped teeth of a similar character where the crowns are very small or where the crowns of the teeth are much decayed and the pulps have receded.

The method of making these crowns varies according to conditions to be met.

### JACKET CROWNS FOR ANTERIOR ABUTMENTS.

Where the crown is needed for an anterior tooth, the labial face is ground away as much as possible without endangering the life of the pulp, cutting well beneath the gum line, as in Fig. 317. The enamel is also removed from the sides and palatal portion so that the band will hug the root tightly under the gum. A measurement is taken and a model of stone or hard plaster is made of this stump and after it has hardened, the plaster is carefully trimmed from around the neck to a depth of about one-sixteenth of an inch below the gum line. The band is then made and fitted to the stump and cut out on the labial side flush with the tooth (Fig. 318). The palatal side of the band is pressed in close to the stump and the

mesial and distal sides spread out nearly to the width of the facing which is to be used, and a floor of coin gold sweated or soldered to it (Fig. 319). The cap is now adjusted to the stump in the mouth and the impression and articulation taken. An articulated model is then carefully prepared and the balance of the work



FIG. 317



FIG. 318



FIG. 319

is done on this. The jacket crown is first completed. A thin facing is ground so as to leave a little space between it and the cap, touching the latter only at the gingival end (Fig. 320). The facing is now backed with pure gold or thin platinum, which is allowed to extend about one-sixteenth of an inch beyond the incisal edge (Fig.



FIG. 320



FIG. 321

321). It is then waxed to the cap, invested and soldered with 21-carat solder, flowing the solder between the facing and the cap and over the palatal portion of the band (Fig. 320).

After it has been finished the body of the bridge is constructed and attached to this crown.

Another method of making the jacket crown is to carry the band to the full height of the tooth, contour it, and cut it out on the face to the depth of the facing. It is then placed on the stump in the mouth; the impression taken and models prepared as before. The facing is then ground to fit the edge of the cap so formed and a backing of coin gold fitted carefully



FIG. 322



FIG. 323



FIG. 324

to it (Fig. 321). This backing with the facing in position, is then adjusted to the cap, waxed, the facing removed and the backing sweated, or soldered to the cap with 22-carat solder (Fig. 322). The facing is then put in place, the pins waxed on the inside of the cap, and the crown invested. The crown is invested face down and



covered but lightly, leaving the opening fully exposed, as in Fig. 323. It is thoroughly dried out and flux placed on and around the pins. A piece of 20-carat solder is then placed over the pins, the whole brought to a bright-red heat, and with the fine blue point of the blow-pipe flame thrown on the inside, the solder is melted, uniting the facing to the cap. Fig. 324 shows the completed crown.

### JACKET CROWNS FOR BISCUSPID ABUTMENTS.

In making a porcelain-faced crown for a bicuspid having a vital pulp, the tooth is prepared in the same way as for an anterior tooth, cutting it well out on the buccal side, and grinding away the inner cusp (Fig. 325). The band is then made as for a full gold crown, and cut even with the cusp at the top and enough on the buccal side to allow for the facing (Fig. 326). The facing is then ground to fit the edges of the cap (Fig. 327), and a backing of coin gold fitted to it. The backing being fitted to the facing, it is placed in position on the cap and waxed and sweated or soldered with 22-carat solder. The backing is then cut off even with the rest of the band and filed flat (Fig. 328). The tip of the facing is then ground on a bevel at an angle of about 45°, the lower edge of the bevel being on a line with the top of the cap (Fig. 329).

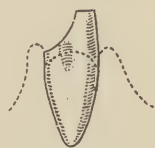


FIG. 325



FIG. 326



FIG. 327



FIG. 328



FIG. 329



FIG. 330

A cusp is then selected, the under surface filed flat and the buccal side beveled to meet the bevel of the facing (Fig. 330). The cusp is then wired to the cap and sweated or soldered with 22-carat solder, the facing having first been removed. The cap is then cleansed in acid and the facing replaced in position and waxed. It is then invested and soldered from the inside as already described in Fig. 323. The jacket crowns described can be used as abutments in fixed bridge work.

## THE CASTING PROCESS AND ITS AVAILABILITY IN CROWN WORK.

The introduction of the casting process opened up a somewhat larger field in this branch of prosthesis, but it must be employed with a full recognition of its limitations. Cast gold is not as strong as rolled gold, and a bridge of cast gold is not as strong as one built up and soldered. The shrinkage of the metal in cooling must also be taken into account or failure on that score is sure to result.

The metal used for this work should be of a high carat, and of as great tensile strength and rigidity as possible. It should not be overheated. The Weinstein's alloys of casting golds are best adapted for this purpose as they possess the qualities above mentioned and make clear sharp castings. Coin gold also gives good results.

**All Porcelain Crown with Cast Base.**—This, being one of the simplest and easiest crowns to make, will be first considered. The root for a crown of this character requires little preparation, as compared with one for a Richmond or other banded crown. The face of the root may be irregular from decay or fracture, or it may have been ground down to meet the requirements of the case. In any event, it should be cut well beneath the gum line on the labial side, and on the lingual side enough to suit the requirements of occlusion. The lingual side should, if it is possible, be beveled so that the base will overlap, thus giving additional support to the crown, and at the same time, serving to strengthen the root and overcome the liability of fracture (Fig. 331).

The crowns used for this purpose may be any of the numerous varieties which are made by the different manufacturers, even to the diatoric teeth which are made for vulcanite work. The crown selected is ground to conform to the size and shape of the root, and to clear the root slightly or to touch it but lightly at the labial side, leaving plenty of room between the balance of the face of the root and the crown lingually to allow of a heavy base, as in Fig. 332.

The post, or pin, which is preferably made of platinized gold wire, is then adjusted, and should be of sufficient length to go nearly or quite to the bottom of the hole in the base of the crown and into the root to a depth at least equal to the length of the crown (Fig. 332). It is well to first flow a little sticky wax around the post, between the base of the crown and the face of the root, at point *a* in Fig. 332, as the wax, of which the base is to be made, will adhere to the post better if this is done than it would otherwise.

The base of the crown should be moist or be lightly oiled or coated very thinly with cacao-butter to prevent the wax from adhering to it, and the base wax, which should be a little softer and tougher than the ordinary inlay wax, is softened and pressed around the pin at the base of the crown, which is forced on the root and carefully adjusted in position. After the wax has been chilled, the surplus is carefully trimmed away, until it is per-



FIG. 331



FIG. 332

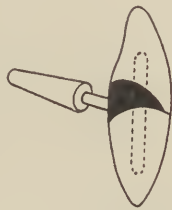


FIG. 333

fectly smooth and flush with the sides of the crown and root (Fig. 333). The crown, together with the pin, is then removed from the root and the sprue wire attached, as in Fig. 333, or it may be attached in the mouth by heating it just sufficient to imbed it slightly in the wax. It may be more firmly fixed by flowing a very small amount of wax around it at the point of entrance, after the crown has been removed.

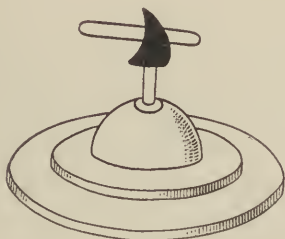


FIG. 334

The base is now washed off with alcohol so as to cleanse the surface of the cacao-butter or oil, using a small camel's hair brush for the purpose.

The sprue wire is now placed in the base of the flask (Fig. 334) and the crown base is invested in the same manner as an inlay, painting the investment on very carefully so that there may be no air bubbles, which would be reproduced in the gold in the casting and interfere with the fit of the base. After casting, it is cleansed

and polished and adjusted to the crown and root. The base is first cemented to the crown and after the cement has thoroughly hardened, it is cemented in the mouth.

This makes a satisfactory crown when used singly, but it is not suitable for a bridge, as all bridge abutments should be banded.

**Banded Crowns.**—The caps for these crowns can be made in the same manner as for a Richmond crown, being carried well beneath the gum labially. The impression is taken and the model prepared in the usual way.

The crown is ground in the manner already described in treating of a crown with a soldered base, being beveled lingually and on the mesial and distal sides about one-half or two-thirds of the way to the labial face (Fig. 335). This allows a sort of a socket for the crown to set in, and, at the same time, insures the correct position of the crown on the base.



FIG. 335

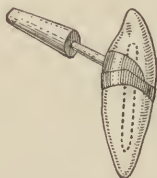


FIG. 336



FIG. 337

The base of the crown is lubricated, so that the wax will not stick to it, and the wax flowed in between the crown and the cap, until it is well filled, after which it is carved flush with the crown and the band and the sprue wire attached, as in Fig. 336. The crown is now removed, leaving a wax base attached, as in Fig. 337. It is then set in the flask base and invested and cast in the usual manner. After it has been cleaned, if necessary solder can be flowed over it to restore any needed contour. The base should be polished with the crown in position, after which the crown is cemented to the base and kept under pressure until the cement has hardened. It will then be ready for the mouth.

This method of procedure may be followed in making any crown of this type from incisors to molars.

**Casting Base for Crown with Porcelain Facings.**—In crowns of the Richmond type, where a porcelain facing is used, the cap and pin are made and fitted to the root, the impression taken and the model

prepared. The facing is ground to place, sloping it slightly more than the floor, so as to allow the wax to flow under the facing (Fig. 338). If there has been much recession of the gum, so that the band has to be sloped greatly labially (Fig. 339), it is well to grind a step in the bottom of the facing, in order that there may be a good base for it to rest on, thereby effectually overcoming any liability of its being forced down the incline and fractured (Figs. 339 and 340). The facing should then be lubricated on the lingual side, and held in place with a little sticky wax on the labial side, or a light wall of plaster or modeling composition. The lingual side should be built up with hard inlay wax and carefully carved and smoothed (Fig. 341). It should be remembered that the more carefully the crown is finished in the wax, the easier it will be to finish the completed crown.



FIG. 338



FIG. 339



FIG. 340



FIG. 341



FIG. 342

The sprue wire is attached, as shown in Fig. 341 the facing carefully removed and small pins of graphite inserted in the holes left by the tooth-pins, leaving them long so as to be gripped in the investment (Fig. 342).



FIG. 343



FIG. 344



FIG. 345

Another method is to enlarge the pin-holes in the wax after removing the facings and dovetail then on the inside, as in Figs. 343



and 344. This can be readily done with a small coarse bur. It is then invested, care being taken to fill with the investment if the pin-holes have been enlarged. If graphite pins have been used after the casting has been made, they are removed, the sides of the holes roughened, and the piece cleansed and polished. The tooth-pins are then lightly threaded or roughened and the facing cemented in place. If the holes were enlarged and dovetailed, the pins may be flattened a little and then bent at right angles, as shown in Fig. 345, and cemented in place.

**Casting Directly on the Facings.**—In making a single crown or a small bridge, where it is intended to cast directly against the facings, great care should be taken that the wax does not overlap the porcelain at any point. This is of the utmost importance, for should the wax be extended so as to grip the facings when the casting is made, the contraction of the metal on cooling will be certain to crush them. The wax should be carefully trimmed to the edges of the porcelain, and it is a good plan to clean them well by rubbing the edges with a piece of tape or cloth before investing.

**Drying-out and Heating-up the Flask.**—The flask should be dried out carefully and then brought to a very high heat throughout so that the facing will be red hot when the gold comes in contact with it. If the facing is cold, or but slightly heated, when the casting takes place, the rapid expansion of the platinum pins, taking the heat so much more quickly than does the porcelain, will fracture the facing. After casting, the flask should be allowed to become cold before opening, after which the piece is cleansed and is ready for finishing.

The crown, or the bridge, which has been made in this way will be satisfactory, providing there is little or no strain on the facings, but otherwise the method is decidedly objectionable.

In a pin facing which is reheated, in soldering or otherwise, the strength of the porcelain is diminished, and especially is this the case if a mass of gold is forced upon it in a molten state. The piece may come out with the facings seemingly intact, but they have been weakened and in the majority of cases, if examined under a microscope, will show innumerable fine checks running all through them. If it is possible to avoid it, it is far better not to subject the facings to this refiring, as they are thereby rendered much less serviceable than they otherwise would be.

**QUICKLY MADE TEMPORARY CROWNS.**

Where a temporary crown is needed quickly there are several ways of providing them. It sometimes happens that a patient has met with an accident and broken off the crown of one of the anterior teeth. If the pulp had been vital, it must first be cared for and the canal enlarged. If the patient has been fortunate enough to find the broken crown and it has not been splintered, the pulp chamber can be enlarged and a post cemented in it. It is tried on the root and adjusted before the cement has fully hardened and afterward set with gutta percha and used while the permanent crown is being constructed. If the natural crown has been lost or destroyed, if a porcelain crown anything near the size and shade is available, it can be shaped and fitted to the root and the post cemented in as above in a few minutes.

If neither of these are to be had, a pin and plate crown can be made. A piece of pure gold plate, 36 gauge, is fitted over the face of the root, a hole having first been made through it, and a post passed through this into the canal.

A facing is then fitted to this in the mouth. It is then backed, waxed to the pin and plate, removed, invested and soldered. Any of these can be made in a hurry and a patient appreciates being able to leave the office without the disfiguring gap left by the missing crown.

Where the crown of a tooth has been cut off in order to utilize the root as an anchorage for a bridge, it can be restored in the same way.

## CHAPTER XI.

### BRIDGE-WORK.

A DENTAL bridge consists of a continuous masticating surface, or of a succession of crowns or dummies having incisal edges. As its name implies, it is a bridge proper, depending for its retention and support upon the natural teeth or roots in the mouth, which serve as abutments. The success and the permanence of the device, in this, as in the case of any other form of a bridge, depends entirely upon the number, position and condition of the abutments.

The primary object of bridge-work has been, and is, to do away with the inconveniences associated with a plate, and to give patients an appliance which through its firmness and immobility will enable them to perform the masticatory function more perfectly than can possibly be done with a plate.

The natural teeth or roots supporting a bridge are called the abutments, and the intervening portion is known as the body of the bridge. The body of the bridge is made up of one or more pieces representing the different teeth and these are known as dummies.

The idea of bridge-work is not new. We find many traces, even among the ancients, of attempts to restore lost teeth. These early efforts were confined almost exclusively to fastening together with wire the crowns of natural teeth, and these in turn were bound to the remaining teeth in the mouth with wires. These restorations were entirely for esthetic purposes, and were of no practical value to the wearer for mastication.

Modern bridge-work is of comparatively recent date, and it is only within the past thirty-five or forty years that it has been put to really practical use, but today it is recognized as being an important specialty of the dental profession. There is no form of denture made which so nearly approaches nature in the restoration of the normal function of the lost organs.

### CLASSIFICATION OF BRIDGES.

Dental bridges are divided into two primary classes, fixed and removable.

Fixed bridges are those which are attached to the abutments so that it is impossible for the patient to remove them, or even the dentist, without more or less mutilation of the abutment crowns.

Removable bridges are those which can be removed from the mouth by the patient for cleansing or other purposes, without interfering with or disturbing the stability or integrity of the appliance.

The insertion of any form of dental bridge-work necessitates the mutilation of the teeth, which are to serve as abutments, to a greater or less extent, and in a great many instances it may be necessary that the pulp be sacrificed. This latter fact has proved to be the stumbling block in the way of a great many dentists when it came to the question of inserting bridge-work. They were afraid to devitalize a tooth for fear that it might eventually become abscessed and lost, with the resultant loss of the bridge.

Previous to the introduction of the roentgen-ray, this fear was perhaps well grounded, for of all the teeth which were devitalized and filled, there were very few in which the canals were filled to the end, and sad to say, this same condition exists to a great extent even at the present time, but these conditions are improving and it is to be hoped that eventually troubles of this nature will be eliminated or at least diminished to a very great extent. Under proper conditions the sacrifice of the pulp is indicated and perfectly justified and if the work is carried through thoroughly and aseptically and the canals are perfectly filled, it is good practice, the patient is greatly benefited by it, the dentist is enabled to put in lasting bridge-work and there will be no trouble from the fact that the tooth is pulpless.

As stated before, it is not so much the question of *what is done*, as it is of *how it is done*.

The value of bridge-work is unquestionable. This value depends entirely upon the manner in which the work is done, and where it is used and not abused, there is nothing that can take its place.

Bridge-work is not universal in its application, and is not intended to do away with other forms of denture, but it is unquestionable that in a large number of cases where partial plates are being placed in the mouth, that they are in reality an injury, rather than a benefit of the patient, and bridge-work is positively indicated and would render far greater service than is possible with the dentures, which are given them.

### REQUISITES OF A DENTAL BRIDGE.

The first requisite of a dental bridge is that it shall restore as nearly as possible the functions and appearance of the teeth which have been lost. Esthetic conditions are too frequently lost sight of in this work, but they are as important in this as in any prosthetic operation, and as much attention should be paid to esthetic effect as can be safely done without sacrificing the utility of the piece.

The crowns or facings which are to be used should be carefully selected, with due regard to their proper sizes, shapes, texture and shades. The occlusal surfaces should be made so that they shall effectively perform the work of mastication, and at the same time with no undue strain on the abutments.

In fixed work, every portion of the bridge should be made with the idea of accessibility to the bristles of the toothbrush in cleansing, so that it may be kept as free as possible from foodstuffs and other debris. Spaces between the facings or crowns themselves, or between the dummies and the abutments in bridges restoring teeth in the posterior part of the mouth should be partially filled with gold and polished so as to offer as little lodgment for foreign substances as possible, and also to render it easier to remove any such substances which do find lodgment. Unnecessary exposure of gold is always to be avoided, and only in cases of extreme necessity in any bridge, placed anterior to the bicuspid, should gold be shown, and very rarely anterior to the molars.

### THE PREPARATION OF ABUTMENTS.

The first and most important consideration in preparing for the insertion of a bridge is the condition of the abutments. The directions given in Chapters IV-VI on the treatment and the preparation of the roots and the perfect adaptation of the bands to the stump or roots will apply with far greater force when these roots are to serve as abutments for a bridge.

**Paralleling the Abutments.**—Regarding the mutual relation of the individual abutments, they must be made parallel, or very nearly so, especially where there are more than two. As previously stated, there is a slight natural movement to the roots of which advantage can be taken to help hold the bridge firmly in position, and the abutments may be very slightly converging or diverging, so that



there will necessarily be a slight spring to them in placing the bridge in the mouth; but this movement must be very slight, otherwise it would result in the loosening of the teeth.

In paralleling a series of abutments, the start should always be made with the smallest and the others paralleled to that one, especially if this small abutment is an anterior root in which a pin or tube is to be used. The object of doing this can readily be seen by studying the illustrations. If one of the abutments is a lateral incisor and another a cuspid, or one a bicuspid and the other a

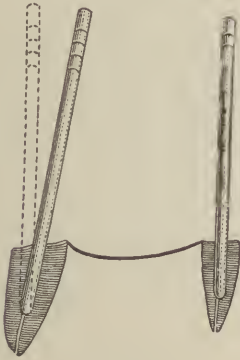


FIG. 346

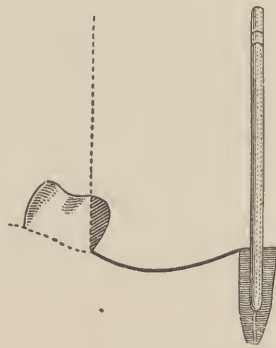


FIG. 347

molar on which a shell or a telescope crown is to be placed, the lateral or bicuspid being small roots allow very little leaway in placing the post or tube, as the canal must necessarily be enlarged on its original line. In the case of a lateral and cuspid as anchorages, the cuspid root is of sufficient size so that the canal can easily be sloped in any direction to make it parallel with the lateral abutment, as shown in Fig. 346. Where a bicuspid and a molar are used as abutments, and the latter is to carry a shell or a telescope crown, the stump can readily be ground on one side or another to make it parallel with the bicuspid abutment (Fig. 347).

### OCCLUSION.

The question of the proper occlusion of the bridges which are placed in the mouth is one of the most vital importance which we have to consider in connection with this work and also one to which there is, in a very large percentage of cases, very little, or no attention at all given,

The teeth are made so that they "hit where they touch" and that is about all that can be said of them. There is no thought given as to the amount of stress which the bridge will have to withstand. If the occluding teeth are irregular and uneven, there is no attempt made to correct this condition, but the bridge is made to touch these teeth when the mouth is closed. For the purpose of mastication, it is of practically little or no value.

Where these conditions exist, the teeth should be ground and evened off and the normal plane of occlusion restored as nearly as possible. The occlusal surfaces should be carefully carved and fissured to represent the natural cusps and fissures of a normal tooth as nearly as can be done before getting the articulation for the bridge.

When the models have been made and the bridge is being constructed, the teeth are ground in and articulated, touching the occluding plaster teeth wherever it may be necessary in order to secure a perfect occlusion. This must be done with extreme care, grinding in one tooth at a time and articulating it so that it will accommodate itself to every movement of the mandible without any undue pressure at any point. Wherever it is necessary to cut any of the opposing teeth in securing the proper occlusion, they are marked with a pencil and this will show where to grind the occluding teeth when the finished bridge is placed in the mouth.

The preliminary steps in this work, the treatment and preparation of abutments, fitting of bands, caps, etc., having been properly and thoroughly done, the success of bridge-work depends entirely upon its being properly articulated. A bridge, having a perfect occlusion, might last for a great many years, a life time in fact, which if the occlusion was faulty, would break down within a year.

A patient may object to having a vital tooth ground, but if it is necessary to do so in order to get a perfect occlusion, it is better to refuse to do the work rather than put in something which will result in injury not only to the abutments of the bridge, but to the occluding teeth as well, and perhaps eventually to all of the teeth in the mouth.

Faulty occlusion has been responsible for the breaking down of more bridge-work than has ever been caused by the presence of non-vital teeth.

A large percentage of the cases of bridge-work are for the posterior part of the mouth, the dentist being most frequently called upon to restore lost molars and bicuspid. Where these teeth in either jaw have been lost for any length of time, their antagonists in the

opposite jaw are sure to have elongated to a greater or less extent (Fig. 352), and if no measure is undertaken to prevent it, they will



FIG. 348.—Upper and lower teeth in occlusion. (From photograph of specimen in the Wistar Institute of Anatomy.)

eventually be entirely extruded. The normal line of occlusion must be restored in such cases, if a satisfactory denture is to be made to



FIG. 349.—Occlusion of the incisor teeth. (From photograph of specimen No. 4237, Wistar Institute of Anatomy.)

replace the lost teeth, whether it be a plate or a bridge. If a bridge is constructed without doing this, without taking into consideration



FIG. 350.—Occlusion of the molar and bicuspid teeth, external view. (From photograph of specimen in possession of the author.)



FIG. 351.—Occlusion of the molar and bicuspid teeth, internal view. (From photograph of specimen in possession of the author. Same specimen as Fig. 350.)

at all the probability of the abutments being lost through this mal-occlusion, it can never be anything like as serviceable to the patient as it would have been had the occlusion been made normal. The triturating motion, so necessary for the perfect performance of the masticatory function, is interfered with or altogether lost, the only movements possible being the opening and closing of the jaws, in which case the food may be pressed or crushed, but not ground. The moment the mandible is thrust the least bit forward, the jaws are thrown apart and the only point of contact is the distal cusp of the elongated upper molar, with the mesial cusp of the lower molar (Fig. 353).



FIG. 352

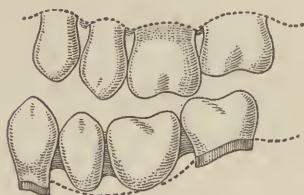


FIG. 353

Where this elongation of the teeth has taken place, they must be ground to the normal line of occlusion and the occlusal surface carved so as to reproduce, as nearly as possible, the original cusps. If they have become very much elongated, it may be necessary to devitalize and crown them, or to restore their masticating surfaces by building up with gold or porcelain.

### SELECTION OF FACINGS OR CROWNS.

In choosing facings or crowns for a crown or a bridge, or in fact for any form of denture, the greatest care should be exercised to select those of proper mould and shade. If it is impossible to get a facing or a crown to match exactly, it is better that it should be slightly darker in shade rather than lighter than that of the natural teeth. If a crown is the least particle too light in color it is conspicuous, and is the first tooth seen when the patient opens the mouth, while if it is but slightly darker, but blends well with the neighboring teeth it will never be noticed providing it has been carefully shaped and carved to match the other teeth.

In restoring the six anterior teeth, the crowns or facings should not be used in sets as put up by the manufacturers. In the human



mouth, these teeth are never all of the same shade. The central incisors have generally a yellowish cast. The laterals are of the same general shade but are clearer at the tip with a slight bluish tint, while the cuspids are the yellowest teeth in the mouth anterior to the molars. If the facings, restoring these teeth, are all of one color, they will not present a natural appearance, since their uniformity of color will at once advertise their artificial nature. They should be selected in pairs, the centrals, lateral and cuspids, each from a different set in accordance with the natural shading of these teeth, but the blending should be perfect.

As we go farther back in the mouth we find the bicuspids are more on the order of the lateral incisors, being clearer at the tips and of a slightly bluish tint, while the molars are usually of the same general character as the bicupids, but somewhat deeper in shade and often of a heavy yellowish cast near the neck. In selecting these teeth, the bicupids, especially the first, should be matched as



FIG. 354



FIG. 355



FIG. 356



FIG. 357

nearly as possible. With the molars there is not the same necessity for being so exact. They should be of the same general shade and blend well, but may be darker than the natural teeth, but in no case should they be lighter.

The shapes of the teeth also should be studied carefully, and the form of those lost should be reproduced as nearly as possible by their substitutes. The types of teeth vary greatly, some having a broad flat face, others being very much rounded (Figs. 354 and 355). Again, it will be found that some are nearly flat from the incisal edge to the gingiva while others are decidedly convex, as in Figs. 356 and 357. Where one of these types prevail a corresponding tooth to replace it or its mate should always be selected.

The lines on the face of the natural teeth should also be studied and reproduced.

The remaining natural teeth will serve as an index for the form of the selected crowns or facings.

**FIXED BRIDGES.**

Fixed bridge-work, in the opinion of the writer, should very rarely be used in the mouth except as a temporary appliance to tide the patient over until the mouth is in condition to have permanent removable work put in, or until it is convenient to have it done. In a great many cases where a number of teeth or roots have been extracted, it may be many months before the mouth will be in condition to have permanent bridge work inserted. Again a patient may be leaving for a long trip abroad and the mouth in such shape that it is impossible to masticate properly, but there is no time to make permanent bridge-work. In cases of this kind, it is necessary to give the patient something quickly, with which he can eat properly, or to hide the disfigurement due to the loss of teeth. This is a time where fixed bridge-work is indicated. It can be made quickly and be serviceable. The chief consideration here should be the utility of the work and the thought of the esthetic effect should give way to it.

The same careful attention should be given to the occlusion in a piece of this kind as would be given to the permanent fixture, as if it is faulty in this respect, not only may the abutments of the bridge be injured, but the occluding teeth as well, and if the putting in of the permanent work were delayed long enough, some of the teeth or roots might even be lost because of this defect.

In making one of these temporary restorations in the back of the mouth where molars or bicuspid are missing, a skeleton bridge, such as was commonly used a few years ago for permanent work, is quickly and easily constructed, and for the time being will prove as efficient and satisfactory as the permanent removable work, providing the work is carefully done and there is a good occlusion. A common type will be considered in illustrating the technic of making a bridge of this kind, one in which a second bicuspid and first molar are missing (Fig. 358).

If the stumps of the first bicuspid and second molar are in good condition, gold shell crowns can be used on both of these teeth. If the first bicuspid is broken down, a Richmond crown can be used on that root with a gold crown on the molar and the body of the bridge built in with the occlusal and lingual surfaces of gold and using porcelain veneers, or facings for esthetic effect.

The teeth or roots are properly prepared and the bands or caps

are made, fitted and adjusted in their respective positions in the mouth.

The impression and articulation are then taken, and the model is prepared in the manner already described. If both of the attachments are to be shell crowns, these are completed and articulated and the case is then ready for the facings.

In selecting facings for the bridge, it is desirable to choose them of such length that when they are ground into place, the necks will just clear, or touch the gum but very lightly, and the occlusal edges will be in contact with the antagonizing teeth (Fig. 359). They



FIG. 358

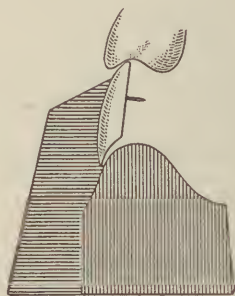


FIG. 359

are ground to follow the gum line and should set very close to each other, but should not be in actual contact (Fig. 360). After they have been ground into place, they are held there with wax and a wall of plaster is built-up on the buccal side of the model, nearly to the occlusal ends of the facings, to retain them in position (Fig. 359).



FIG. 360



FIG. 361

When the plaster has hardened, the facings are removed, and their occlusal ends ground off about one-thirty-second of an inch and at an angle of about forty-five degrees with the back of the facing (Fig. 361). The line of their occlusal ends should be continuous, that is, the bevel of one facing should not be higher than that of another.

The facings are then backed, and for this purpose, platinum,

crown metal or pure gold may be used. The gold will have a tendency to lighten the color of the facing and give it a slightly yellower cast, while the platinum will tend to darken it and confer a bluish tint. If the backing is of platinum, it can be very thin, about three-one-thousandths of an inch. If it be of pure gold, it should not be less than 36 gauge or five-one-thousandths of an inch in thickness, as it could be very easily burned in the final soldering if it was used as thin as the platinum. It should extend from the inner edge of the bevel at the occlusal end, to about one-sixteenth of an inch



FIG. 362



FIG. 363

beyond the lower edge where it has been ground to fit the gum (Fig. 362). The backing of each facing should touch or slightly overlap that of the one next adjoining and those of the end facings should be in contact with the abutment crowns (Fig. 363).

The pins are flattened with a pair of pin-roughing pliers, and are bent down over the backing, thus pressing and holding it close to the facing. The facings are then waxed together and to the abutment crowns with hard adhesive wax, a piece of oiled-paper being placed underneath on the surface of the cast to prevent the wax



FIG. 364



FIG. 365

from adhering to it. The wax should be built up high enough to support the cusps for the dummies (Fig. 364). Suitable solid cusps are then made, ground or filed to fit the bevel of the facings, and fastened in place with adhesive wax (Fig. 365). The flat end of the small wax spatula (Fig. 295) is next heated slightly and introduced between the wax and the inner side of the cusp, (Fig. 366, *a*), and the lingual side of the cusp raised very slightly so that while the extreme beveled edge of the cusp will be in contact with the beveled tip of the facing, it will just clear at the lingual side of the

bevel of the cusp and facing (Fig. 366). The shrinking of the solder on cooling will draw the beveled parts together at these points and will leave a perfect joint on the outside (Fig. 365). If there is perfect contact of the bevels all through when soldering, the contraction on cooling will draw down the lingual side of the cusp and open it up on the outside, resulting a bad joint which is very unsightly (Fig. 367, *a*), and offers a lodgment for food stuffs.



FIG. 366



FIG. 367

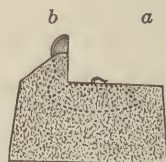


FIG. 368

The bridge is now ready for investing and soldering. It is taken from the model, and the inside of the abutment pieces filled with the investing material and the whole bridge partly imbedded in it with the facings down. The investment should come flush with

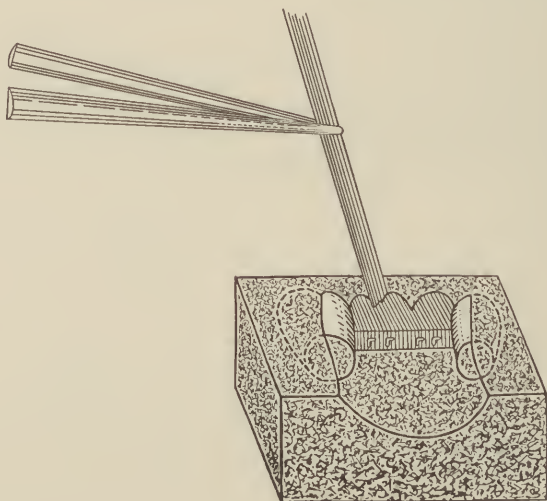


FIG. 369

the lingual side of the facings and over that part of the backings which extends beyond the lower angle of the facings, holding the backings in place and preventing their springing up under heat (Fig. 368, *a*), and nearly to the lingual edge of the cusp (Fig. 368, *b*)



and should be small, only large enough to hold the parts securely together. The abutment crowns are partly covered to protect them from the flame (Fig. 369).

The case can be warmed over a Bunsen flame and the bulk of the wax lifted out and the balance burned out, or it can be melted out with a stream of boiling water, after which it is placed over a small Bunsen heater and dried out slowly with a low flame and when it is dry the flame is increased until it is thoroughly heated up. In drying out the flame should not come in contact with the investment as the steam generated might blow the investment to pieces. A piece of tin can be placed directly over the flame and over this a piece of heavy wire screen, about one-quarter inch mesh, and the invested bridge placed on this. When the investment has thoroughly dried, the tin can be taken from under the screen, allowing the flame to come in direct contact with the investment, which is then brought to a red heat and is ready for soldering. This should be done with 20-carat solder.

The most convenient method of handling solder in nearly every case, is to use it in strips. The solder is made, cast into an ingot and rolled to a suitable thickness, about 27-gauge, it is then cut into strips about one-eighth of an inch wide. The exposed part of the bridge is then fluxed with a little powdered calcined borax sifted over it and the investment brought to a red heat. The end of the strip of solder is then dipped in liquid flux and placed on the lingual side of the cusp as in Fig. 369, and the flame of the blow-pipe is directed at that point. As the solder melts, it is drawn down between, and over the underside of the cusps, over the backings and against the sides of the abutment crowns. As the solder melts, it is fed into the flame, being occasionally dipped in the liquid flux, until the bridge is perfectly united and the solder filled in to the proper depth. The advantages of using solder in this manner are obvious. It is always under control and can be instantly placed at any desired point. Then too the soldering can be done much more easily and also more quickly, for as the solder melts, that which is to follow is already heated almost to the melting point, so that there is a steady flow of molten solder all of the time. The solder will also flow smoother and with less liability of there being pits of bubbles in it, unless it is forced in too fast.

Where the solder is used in the old way, time is lost in stopping to pick up the pieces with the pliers and placing them where they are wanted. The flame is thrown off the piece while doing this and

it cools somewhat and has to be reheated as the pieces are added with the result that there is a much greater liability of the solder being pitted when polished. In using the strips, the flame of the blow-pipe is constantly on the solder until the work is completed.

The amount of solder used should be carefully gauged, and only enough used to give the desired contour. If a great excess has been used, necessitating much grinding, not only is there a waste of valuable material, but a considerable loss of time in grinding it away again. Another important consideration, is that where a great amount of solder is ground away, there is more likelihood of the finished surface becoming pitted, but where only just enough has been used so that it is only necessary to smooth it with a fine stone, the chances are that it will finish with a smooth, fine surface.

In finishing a posterior bridge of this kind, the grinding and polishing should always be from the cusps toward the porcelain. This will tend to burnish the gold and protect the facing. If it is ground in the opposite direction, it will sliver the thin edge of the porcelain.



FIG. 370



FIG. 371



FIG. 372

In grinding in the facings of the dummies for any of the six anterior teeth, they should be made to set closely to the model, and after they are properly fitted a wall of plaster is made on the labial side, the same as is shown in Fig. 359. The facings are then backed, the bakings extending over the beveled portion at the neck and about one-sixteenth of an inch beyond the incisal edge and the pins flattened and bent toward this edge close to the backing (Fig. 370). In investing, the investment should cover the extending portions of the backing, both at the incisal and gingival ends, to hold it down and prevent its warping (Fig. 371).

After investing, a wire of coin gold should be fitted to, and laid over, the bakings at the gingival edge as shown in Fig. 372, so that in soldering, the lingual side may be more easily built up to approximate the normal contour of the tooth.

Bridges of three or four teeth may be soldered in one piece, but large cases should be soldered in sections, because the contraction of large masses of solder, when the piece is cooling, has the effect

of disturbing the relation of the abutment pieces, and in consequence the fit of the bridge is impaired. A full bridge of twelve or fourteen teeth should be soldered in three or four sections. If in three, the incisors may be soldered in one piece, and the sides, from the cuspids, back, separately. If in four sections, the central, lateral and cuspid of each side may be soldered separately, and also each side section.

The different sections are finished and polished except where they are to be united. They are then replaced on the model, waxed together with adhesive wax, and a strong iron or brass wire bent to conform to the lingual side of the bridge and thoroughly waxed to the different parts. This will hold them firmly in their relative positions, and prevent their springing while being removed from the model and invested. The bridge is then invested, the divisions between the several sections being freely exposed and the parts united with the same, or a slightly lower carat solder than has been used in the previous soldering. When the investment has cooled the bridge is removed, pickled in dilute sulphuric acid, and finished.



FIG. 373



FIG. 374

**Interchangeable Facings.**—In using interchangeable facings of the Steele type (Figs. 373 and 374), the facings are ground in as are the ordinary pin facings, and afterward a wall of plaster is built around them reaching nearly to the incisal edges. The backings are then fitted, touching the floors on the abutment caps, coming to the edge of the bevel at the gingival end of the dummies and extending a little beyond the incisal edge. They should be made so that they will come in contact with each other, after which they are waxed firmly together with hard, sticky wax, a heavy iron or brass wire being laid across the lingual side of the backings to prevent their becoming distorted in removing the facings and investing.

After the facings are removed, if using ordinary investments, it

is well to give the face of the backings a coating of anti-flux (whiting may be used for this purpose) before investing. This will tend to prevent any solder from flowing between and over the labial side of the backings. If using the Weinstein investments, no anti-flux is needed.

They are then invested, labial face down, and should lay nearly level. After the wax has been removed, a heavy gold wire, preferably square, should be fitted across the gingival edge of the backings, as in Fig. 375, extending from one abutment cap to the other, and the piece is heated up for soldering. Twenty or 21-carat solder should be used for soldering, and the solder built up so as to restore as nearly as possible the normal lingual surfaces of the teeth, leaving it thick at the incisal edge. It will be found that the wire across the base of the backings will very materially aid in giving form to the backs. The piece is then cleansed and finished.




FIG. 375

In finishing a bridge of this character, it is well to outline and contour the lingual surfaces of each tooth restored so that they will resemble the lingual surfaces of the natural teeth as nearly as possible and present a more artistic effect, and consequently a much more comfortable feeling to the tongue.

In finishing the incisal edges of the backings, the facings should first be replaced and then the backings ground, the labial side flush with the tips of the facings and extending a little upward on the lingual side, as in Fig. 376, so that the backing will be a little longer at this point and will protect the facings. The gold should be left as thick as the bite will allow at the incisal edge so as to protect the facings and lessen the liability of their being broken. Such facings are much weaker than are the ordinary pin-facings, and for this reason, it is always a good plan to prepare duplicates which may be used in case of an accident. In any event, the shades and mould of the crowns or facings used should be placed on record. In grinding in the duplicate facings, they should be made very exact so that if it were necessary to replace one, the duplicate could not be told from the original. Each facing should be ground separately, with all of the others in position.



FIG. 376

If duplicates are to be made of the six anterior teeth, they should be taken one at a time, removing the cuspid first and grinding in

the duplicate cuspid so that it exactly corresponds with the original. When this has been completed the original cuspid is replaced and the lateral removed and the duplicate lateral ground in, after which the original lateral is replaced, the central removed and the new one ground in place and so on until duplicates of the entire set have been made.

In this way as many duplicates as may be desired can be made with the knowledge that they are all absolutely interchangeable. This same order should be followed whether facings or crowns are being used.

### EXTENSION BRIDGES.

In a very large majority of the smaller extension bridges which are made, where the whole or a portion of the body of the bridge extends beyond the single abutment, as in Figs. 377 and 378, the entire principle is faulty and the whole piece a mechanical impossibility. Notwithstanding this, pieces of this description are placed in mouths to the detriment of the patients. Sooner or later the




FIG. 377



FIG. 378



FIG. 379

abutments to which these pieces are anchored are sure to be forced out of their normal position and are frequently lost. In the anterior part of the mouth, where an appliance, such as shown in Fig. 377 has been inserted, the rotation and consequent loosening of the root is almost inevitable.

In Fig. 378, where a dummy having an occlusal surface is attached to a single abutment there is not only a strong lateral strain which will give a constant twisting motion to the root, but there is also a direct vertical force which is being continually exerted, gradually tilting the abutment and forcing the gingival end of the dummy into the tissues (Fig. 379) with the resultant loss of occlusion and the eventual loss of the tooth to which the bridge is attached.

One inflexible rule applies in all of these cases and that is that *there must always be a support at each end of a bridge and never under any consideration should a single point of attachment be depended upon to carry a dummy.*



A small spur of platinized gold or iridio-platinum, attached to the lingual side of the dummy, and resting in a small gold filling or inlay on the lingual side of an adjoining tooth, as shown in Fig. 380, will entirely overcome the possibility of rotation, and will make the piece a permanent fixture rather than a temporary one.



FIG. 380



FIG. 381

A spur made to rest in a filling or an inlay in the lingual side of the cuspid or in the fissure of a molar or bicuspid (Fig. 381), will effectually prevent the tilting or rotating of an abutment as indicated in Fig. 379, and render a piece serviceable which would otherwise be worthless.

### TEMPORARY BRIDGES.

It very often happens that where teeth have been lost and partial plates have been worn, that the adjoining teeth have become so abraded and decayed that it is necessary to resort to bridge-work, the only alternative being to extract the roots and add teeth to the old plate or to make a new one. This latter would mean that at some future time the same thing would probably happen again with the loss of more roots. In cases of this kind, it would have been far better had properly constructed bridge-work been put in in the first place. When the teeth which are to serve as abutments are cut off, it is desirable, especially if the anterior teeth are missing, to make some temporary appliance which can be worn while the permanent bridge-work is being constructed and it should be quickly made. This should invariably be a bridge. It is not good policy to allow a patient to endure the disfigurement caused by the absence of teeth in the anterior part of the mouth, for any length of time. It is always bad practice to put in a temporary plate covering the roots even for a short time particularly so if the roots are to serve as abutments for a bridge. It is irritating to the gum tissue surrounding them and if worn long will cause the roots to loosen.

The bridge should be made so that it could be put in later the same day that the crowns are cut off, if possible, or not later than the day following.

To illustrate, we will take a case where the incisors are missing

and the cuspid roots are to serve as the anchorages. As soon as the crowns are cut off, the canals are enlarged and paralleled and the roots faced off close to the gum line.

A pure gold 36-gauge floor is fitted over the face of each root, a small hole punched in the center and pins of about 14-gauge wire with the lower ends slightly tapered or rounded at the end are pushed through to the bottom of the enlarged canals. They are then waxed to the floor, removed and soldered. A bite is now taken, after which the pins are put in the roots, the floors pressed close to the face of the roots and the impression taken. The model and articulation are made in the usual way.

The facings having been selected, are ground in, the incisors touching the gum lightly, and a plaster or modeling composition wall built up on the labial side nearly to the incisal end of the facings. The facings are backed with pure gold and the backings should extend a little above the incisal edges. A heavy wire is now fitted across the lower end of the facings, resting on the floors against the pins that are in the canals (Fig. 382). It is then waxed heavily with hard, sticky wax; removed, invested and soldered.



FIG. 382

After the investment has cooled, it is taken out, cleansed, finished and polished and is set in the mouth with gutta percha.

A bridge like this can be made in a very short time and the patient can go about his or her accustomed duties without being embarrassed every time he or she may meet an acquaintance or friend.

There are times when such a bridge can be made before the teeth are cut off.

The canals are enlarged and wires long enough to extend well below the crowns are inserted. The bite and impression having been taken, the pins are covered lightly with wax so that they can be easily removed from the model and the model prepared and articulated. The plaster crowns are cut from the model and the bridge is constructed as described.

The writer has many times made temporary bridges for the anterior teeth simply by taking the bite and impression and cutting the teeth off on the model and drilling holes in the plaster in the center of the stumps. There is more guesswork in doing it in this way and generally results in more or less adjusting of the pins when fitting

it in the mouth. The first method is the best and most accurate, as the pins and floors are fitted to the roots and not to the plaster stumps.

### **EXTENSION BRIDGES WITH SADDLES.**

Extension bridges, in which saddles, resting on the ridge, are employed as an additional support should never be used in fixed bridges, as it is impossible to properly cleanse an appliance of this kind. Irritation and inflammation are sure to ensue, and its use will almost certainly sooner or later result in the loss of the abutment teeth, if not in troubles of a more serious nature.

### **THE USE OF PORCELAIN CROWNS WITH SOLDERED BASE IN FIXED BRIDGE-WORK.**

Where porcelain crowns are used in fixed bridge-work, there must be a depth of bite great enough to permit of a sufficient mass of metal beneath the crowns to give strength and stability to the appliance, and at the same time allow of space enough on the lingual side between the base and the gum so that there will be no difficulty in properly cleansing the piece. In any of the six anterior teeth, if the lip is short or the gum shows, unless there has been a great resorption of tissue, the dummy crowns should be ground so that they will rest on the gum at the labial side, but be freely clear of the gum on the lingual, as in Fig. 383, *a*.

After the crowns have been properly ground and arranged on the model, they are tacked to it with wax on the lingual side and a wall of plaster built up on the labial side so as to retain them in position (Fig. 383, *b*). The abutment crowns are first soldered and finished. The crowns are ground to fit the caps on the labial side, but the lingual two-thirds should clear enough to allow for the base and sufficient solder to give the necessary strength. The mesial, distal and lingual sides are beveled and the bases fitted and waxed firmly to the caps (Figs 385 and 387). The crowns are removed from the bases and the caps with bases invested. The caps are placed in the investment labial side down. The crown base, up to the upper edge of the bevel, and the upper part of the cap is freely exposed so as to give free access to the flame of the blow-pipe from all sides (Fig. 386).

The wax is washed out with boiling water and the investment dried out and fluxed. It is then heated up and soldered with

21-carat solder, using the solder in strips, feeding it in, filling the space between the base and the floor of the cap and flushing all sides of the beveled base, restoring the contour fully. After it has been removed from the investment and cleansed, the surplus pure gold of the base is trimmed away and with a fine wheel it is ground just about to the upper edge of the bevel, grinding from the inside outward. The crown is now adjusted and held in place, while the gold base is being finished nearly flush with its sides, after which it is waxed to it. The abutment crowns and dummies are now replaced on the model, the plaster wall insuring their proper position, and the gingival end of the dummy crowns are evened up so that all will be an equal distance from the gum.

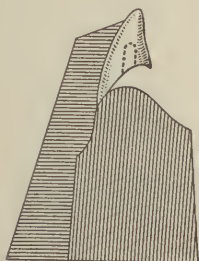


FIG. 383



FIG. 384



FIG. 385

The lingual side and on the mesial and distal about half or two-thirds the way to the labial should be beveled in order that the bases may come up over the edges of the crowns at these points and form sockets in which the crowns may rest (Fig. 384). At a point opposite to the post holes in the crowns or a little to the labial of it, the bevel should be deepened and lengthened a little as shown (Fig. 384). At times it is well to cut a step in the base of the crowns as shown in Figs. 339 and 340, where the bases of facings are so ground, thus forming a solid flat base on which the crown rests and taking a large part of the strain off the posts. This gives a positive seat for the crowns and greatly reduces the possibility of fracture. They should all be ground symmetrically and on a line one with another so that the base of one will not stand conspicuously above its mates.

The foregoing will also apply to the preparation of crowns for the posterior part of the mouth when the depth of the bite is not too great.

The bases for the crowns should be made of pure gold of about 36-gauge, or five-one-thousandths of an inch in thickness. These may be fitted by swaging or burnishing, the gold extending up beyond the beveled edges of the crowns.

Very frequently with the molars and bicusps and sometimes with the anteriors, where the crown bases are heavy and there are no thin edges of porcelain, the gold bases can be fitted by swaging them directly on the bases of the crowns with a rubber swager, but in the majority of crowns in the anterior part of the mouth, especially where they have been ground to follow the gum, it will be necessary to fit them by carefully burnishing the gold into place, as the margins are somewhat frail and would not stand swaging. The gold is worked very carefully, annealing frequently, and keeping it free from wrinkles. After it begins to assume its proper shape, the edges are trimmed so that they come a little above the bevel and the margins all around (Fig. 387). The burnishing is then continued until the base seems to fit the crown perfectly. It is then



FIG. 386



FIG. 387



FIG. 388

removed, re-annealed, replaced on the crown and placed in a strong napkin, base down, and the napkin twisted tightly around it, at the same time pressing the sides so as to ensure well fitting margins. An opening is then made in the floor of the base and through this opening a post of platinized gold wire is passed as far into the hole in the base of the crown as it will go and waxed well to the gold. It is then removed, invested bottom side up, and soldered with a small piece of coin gold (Fig. 388). After they have been removed from the investment and cleaned, they are replaced on the crowns which are properly assembled on the model, and the bases waxed firmly together and to the abutment caps. A piece of heavy brass or iron wire is next fitted across the bases and over the abutment caps and waxed firmly to each of them. This will prevent their changing position or becoming distorted while removing them from the model and investing. The whole is then well chilled, the crowns are removed from their bases, and the waxed bridge is taken from the model.



In investing the bridge, the crown side of the bases should be carefully filled with investment and the bridge placed in the investment with the underside uppermost, leaving this surface well exposed (Fig. 391). After the investment has hardened, the wax is melted out with boiling water and the piece is thoroughly dried out and fluxed.

It will assist very materially in the soldering, if a piece of coin gold wire long enough to reach from one abutment cap to the other, is placed across the lingual side of the dummy bases as in Fig. 391.

The wire should be just about as thick as it is desired that the solder should be to give sufficient strength and support to the bridge. The solder, 20 carat, is flowed over and around the bases and made flush or a little more than flush with the coin gold wire, and the united bases soldered firmly to the abutment caps. After cooling, the piece is removed from the investment, cleansed and finished. It must not be forgotten in finishing the bases for the crowns, that after trimming off the surplus pure gold, they are ground with a fine wheel close to the upper edge of the bevel and the grinding must be done from the inside outward, that is, the wheel must revolve in that direction, so that very little or no feather edge at all will be turned inward to interfere with the fit of the crowns in the bases. Should there be a slight feather edge it is carefully trimmed away with a small graver or other suitable instrument and the crowns are carefully fitted, making sure that each crown goes exactly in its proper position. The gold bases are then ground, with the crowns in place, almost but not quite flush with the bases of the crowns, leaving them the least bit full right at the neck for finishing after the crowns have been cemented. The balance of the bridge can now be given the final finish. After using the fine carborundum wheels, the Burlew cleaning and polishing wheels are most excellent for smoothing the work before using the lathe wheels. They are made of rubber with pumice incorporated. If these cannot be obtained, a substitute can be made by cutting disks from an ordinary ink eraser, which contains a fine grit, and mounting them on mandrels for the engine handpiece. It will be found that these are great time-savers. After this the bridge can be gone over lightly with lathe wheels and pumice and finally with rouge. After using the rouge, the bridge is well washed with warm water and soap, using a medium stiff brush, and every trace of rouge removed especially from the inside of the bases. The bridge is now placed on the model and made ready for cementing the crowns.

### CEMENTING THE CROWNS IN THEIR BASES.

The crowns are all put in place and carefully noted to see that every thing is exactly as it should be, including the articulation. It sometimes happens that the inclination of the posts in some of the crown bases is such that the crowns will have to be cemented in certain order and this also should be noted. As a general rule, it will be found safer to set one or two crowns at a time. If too many are attempted, after the cement has set it may be found that one or possibly more may not have gone exactly into place. This would necessitate the boiling of them all off in nitric acid and starting over again. (We are taking it for granted that the one doing this work wishes to have it as nearly perfect as it is possible to make it.)

The alternative would be to grind the crown away so that it would articulate, or so that the others would go in, with the result that the crowns would be improperly seated, there would be imperfect joints and regret on the part of the operator that greater care had not been used.

The cement should be a good crown and bridge cement and should be very thoroughly spatulated and mixed to just about the same consistency as would be used in setting a fair-sized bridge in the mouth, but not any stiffer. It is worked into the hole in the crown with a fine instrument, care being used to have it filled all the way to the bottom. The gold base is also filled and the crown put in position and worked down using a slight rotating motion to free the excess cement, using considerable force until it is all the way down and perfectly seated. It should be held tightly in place under pressure until the cement has begun to set. This can be told by sticking the excess cement which has been squeezed out with a fine instrument. It should be quite stiff under the instrument. The pressure can now be removed and the piece put in a warm place to harden.

A wire screen placed on a radiator, or a little wire basket hung above the radiator and close to it or over a steam or electric sterilizer is a good place to put it, and the heat will make the cement set and harden very quickly, after which, the excess cement is trimmed away and the other crowns are set in the same way. When the cementing is completed, the upper part of the bases are ground flush with the lingual side of the crowns with a very fine carborundum wheel, grinding from the gold toward the porcelain, and finished with rubber and pumice disks and fine cuttle-fish disks, and

followed with precipitated chalk on a felt wheel or a brush wheel on the lathe.

Bridges for the back of the mouth are made in the same way, but it is better here, unless the gum shows in the bicuspid region, that the gold bases should include the entire base both of the bicuspid and molar dummies. These should be ground so that they will stand high above the gum on the lingual side, and clear the ridge sufficiently to allow ample thickness of metal here to give the necessary support to the bridge and protection to the crowns as in Fig. 383.

The crowns are beveled on all sides (Fig. 389) so as to form a positive seat all around in which the crown will rest and be protected from any liability of fracture. The gold bases are swaged or bur-nished to fit the crowns the same as for the anterior bridge and a surplus extending above the upper edge of the bevel as in Fig. 390.



FIG. 389



FIG. 390

If the gums show plainly, the bicuspid crowns can be ground and beveled as are the anterior, the buccal side setting close to the gum and the bevel made a little deeper, and higher near the buccal side as in Fig. 384, *a*. This will prevent the showing of any gold. The gold bases are made, assembled, invested and soldered in the manner described in making the anterior bridge. After it has been cleaned and dried the bridge is finished except at the upper edge of the bevel where it is left a little full to finish finally at that point after the crowns have been cemented. After the crowns have been adjusted in their bases, the articulation is completed.

**Staining the Occlusal Surfaces.**—The occlusal surfaces are carefully carved and fissured to represent the natural teeth as perfectly as it is possible to make them. The fissures are deepened with very fine knife-edged carborundum wheels, of which the Miller stones are probably the best. A little brown stain is now painted over the ground surfaces and into the fissures. The stain should be very thin so that it will be hardly perceptible over the ground surfaces of the cusps but settling as it does in the fissures, the color will be deeper there. The amount of stain used will depend upon the patient and upon the other teeth in the mouth. Thus in the

mouths of non-smokers and where the teeth are light, the stain should be light, but in the mouths of smokers and where the teeth are stained the stain on the crowns should be correspondingly darker.

This staining of the teeth adds a great deal to the artistic effect desired. The plain ground surface of the porcelain has a dead, unnatural appearance, but if the stain is skillfully and artistically applied, the crowns can hardly be distinguished from the natural tooth on close examination.

The Ash stains are very good for this purpose and are easily applied. It is heated up in the furnace to a temperature of about  $2100^{\circ}$ , which renders it permanent.

If the bridge is fairly long, the abutment crowns are soldered and finished, and afterward the section of dummies is assembled and soldered separately.



FIG. 391



FIG. 392

After soldering, the piece is cleansed in acid, polished and finished except at points where it is to be united to the abutment caps (Fig. 392). The crowns are then put in place on their bases and carefully adjusted on the model, and the bases waxed carefully to the abutment caps. The piece is then chilled and the crowns removed and the abutment caps, together with the crown bases, are invested and united with 20-carat solder. After the piece has been cleansed and polished, it is ready for the cementing of the crowns, which is done in the manner just described. A dummy crown with base completed is shown in Fig. 387.

**Use of the Cast Base.**—If the bases are to be cast, posts of platinumized gold may be fitted into the post-holes in the crowns, or the posts may be made at the same time the base is cast, by forcing a small, pointed piece of inlay wax in the hole in the base of the crown and this being united with the wax base becomes a part of the casting. The use of the wire is recommended however, as, unless the holes in the crowns were quite large, the cast pins might not prove sufficiently strong if subjected to great stress. The bases of the crowns should be lubricated lightly with cacao butter or oil, and a piece of tin foil or oiled paper fitted over the ridge to protect the model from the wax and permit of their easy removal, and the

space between the crowns and the paper filled in with inlay wax after which it is removed and carved, cutting away enough of the wax on the under side lingually so that it will clear the gum sufficiently for cleansing purposes.

The crowns should be removed and replaced several times to make sure that they are perfectly free.

If there should be not more than two or three bases to be made they may be cast in one piece. If the four incisors are to be restored it is better to divide the base at the median line and cast the two halves separately, afterward uniting them with solder.

The sprue wire is firmly attached to the lingual side, and this should be done before finally removing the crowns, so that there is no likelihood of distorting the wax on the inside of the base and interfering with the fit of the crowns (Fig. 393).



FIG. 393



FIG. 394

In the posterior part of the mouth, where the gold is not likely to show, the bases may be carried through to the buccal side, and in such cases the base of the crowns are beveled slightly all around so that they may be firmly seated. They should be cut high on the lingual side, the same as the anterior crowns, for cleansing purposes (Fig. 394).

Where three, or at times only two bases are to be cast, it may be well to have two or even three sprues. These can be made of wax and attached to the sprue former at the center (Fig. 395).

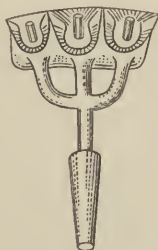


FIG. 395



## CHAPTER XII.

### REMOVABLE BRIDGE-WORK.

WITH the advent of removable appliances, the possibilities of bridge-work were greatly increased. The field of operations was extended so as to include, not only many cases where fixed bridges had been worn, but also a great many others where, up to that time, the only hope of the patient was a partial plate, more or less satisfactory.

The advantages of removable bridge-work over fixed bridges are many, and it is very questionable whether there is a single instance where fixed bridge-work answers the purpose better than would removable. It is undoubtedly true that in almost every case where fixed bridge-work has been placed, removable bridge-work could have been used to a much better advantage and would have given far greater satisfaction to the patient. Then again there are many cases where conditions are such that a removable bridge is indicated, where a fixed bridge could not be thought of.

From a hygienic point of view, there can be no question as to which is the best. A removable piece can be taken from the mouth and thoroughly cleansed and sterilized by boiling or any other method which the patient may desire. When the bridge has been removed, the abutment caps, being perfectly simple, smooth, and easily accessible, can be thoroughly cleansed at every point.

In the case of a bridge which is immovably fixed to its supports, there are spaces and crevices in which particles of foodstuff or other material may lodge, which at times can hardly be reached even by the dentist. It is impossible to thoroughly cleanse and sterilize such a bridge, as there is nothing which can be taken into the mouth that is of sufficient strength to perfectly cleanse and sterilize it without injury to the soft tissues.

Another advantage which a removable bridge possesses over a fixed bridge, is the facility with which it can be repaired in case of an accident. The bridge can be removed and the entire work of repairing can be done in the laboratory, without the slightest inconvenience to the patient. In the case of extensive damage

to a fixed bridge, it is frequently necessary to so cut and mutilate it, in order to remove it from the mouth, as to nearly destroy it, necessitating, in many instances, practically the making of the entire bridge over again.

This is especially true in a case where there are many abutments. In making extensive restorations, where there are a large number of anchorages, a fixed bridge should never be placed. It may at some time happen, that in cementing a fixed bridge of this character, from one cause or another, the cementing of one or more of the abutment caps has been faulty, and before this is discovered, these roots may have been entirely destroyed through leakage and decay. It would be impossible for this to happen in the case of removable work, for should one of the abutment caps become loosened, it will manifest itself at once by coming away with the bridge, in which case it can easily be recemented, rendering the piece as firm as ever. In placing bridge-work where there are many abutments, if fixed work must be used, if it is possible, it is much better to make several small bridges rather than one large one.

Another very decided advantage in a removable piece is the facility with which affected teeth adjacent to the bridge may be treated. Every dentist has probably had the experience of undertaking to place a gold filling in an approximal cavity in a tooth adjoining a fixed bridge.

If the bridge be removable, it can be taken from the mouth, leaving ample room for any operation which may be necessary. With the advent of cast gold inlays, these operations have been much simplified. The insertion of such an inlay is not nearly so difficult as was the putting in of a gold filling by the old method. But the fact remains that we can much better prepare for and place an inlay if, by the removal of the bridge, we have ample room in which to work.

The value of removable bridge-work depends entirely upon the attention given to the numerous details, and upon the accuracy with which the work is done. The fittings must be as nearly perfect as it is possible to make them, otherwise the work will not prove a success. The training which one gets in doing this class of work, tends not only to make him more proficient in bridge-work, but more proficient in every branch of the profession, as the care and skill required develops a delicacy of touch, and exactness in manipulation to a far greater degree than does the ordinary routine of the dental work-room.

### ATTACHMENTS FOR REMOVABLE BRIDGE-WORK.

**Retaining and Supporting Abutments.**—There are two classes of abutments in both fixed and removable bridge-work, and these are known respectively as retaining abutments, and supporting abutments.

By a retaining abutment is meant an abutment which not only gives support to the bridge, but also retains it in its proper position in the mouth, as in the case of a Richmond crown, shell crown, telescope crown and others of a similar character.

A supporting abutment is one which gives support to the bridge, but has nothing to do with its retention. An example of an abutment of this kind would be where a spur attached to one end of a bridge is resting in a gold filling or in an inlay in an adjoining tooth, and serving simply to prevent any lateral movement and to resist the force of occlusion.

### RETAINING ABUTMENTS.

There are many different styles of attachments for removable work, and the writer will describe those which he has found most useful, and which have the most variable application. In discussing these different attachments, we will first consider those which are most frequently indicated in the posterior part of the mouth for the molars and at times for the bicuspid. The first of these is the telescope crown.

The telescope crowns should not be confounded with the shell crowns, which are simply, as the name indicates, shell caps fitted to the stumps. The telescope crown is really a double crown in which one part telescopes the other with the ease and accuracy of the slides of a telescope.

**Telescope Crown.**—This crown is especially adapted to the molars, and where great strength is required, or where the gold can be hidden, as far forward as the second bicuspid, and at times even the first, but should never be carried beyond the first bicuspid, and rarely to that tooth. The telescopes may be used where there are two retaining abutments, providing the telescope can be made of sufficient length to give a permanent and firm grip.

**Alloys Suitable for Making Telescope Crowns.**—The alloy suitable for a telescope crown must possess great tensile strength and rigidity,

and also a certain amount of elasticity. The 22-carat gold alloyed with silver, which is most commonly sold at the dental depots, is altogether unsuitable for this work as it possesses no elasticity, the silver alloy rendering it soft, with the result that if this were used, the strain which is necessarily brought to bear on the bridge would cause the gold to stretch and so render the crown worthless within a comparatively short time.

The best results have been secured by using a copper alloy, and the writer has found the American coin gold, 21.6 carats fine, to be the most suitable for this purpose. It is tough, strong, rigid, and sufficiently elastic, and experience shows that it will wear better than any other high carat alloy.<sup>1</sup>

It is not necessary, and perhaps not always desirable, that the abutments for a removable bridge should be exactly parallel, but they must be very nearly so. The pericemental membrane acting as a cushion, permits of a slight natural spring to the teeth which can be taken advantage of to help hold the bridge firmly in position. If the natural inclination of the teeth is such that they diverge slightly, they can be trimmed and the bands so fitted to them that the bridge can be made to accommodate this inclination. The result will be that as the bridge is placed in position, the teeth are drawn together very slightly and then spread apart and resume their normal position as the bridge is forced home. If the teeth converge, when the bridge is put in position, they are forced apart the least bit, resuming their normal position when the bridge is in place.

This movement of the teeth, of course, must be very slight, for should it be greater than normal, it would have a tendency to loosen the teeth, but the slight natural spring will do no harm, and as before stated, will help to hold the bridge more firmly in its place.

In a telescope crown which has been carefully and accurately made, there will be practically no wear even after it has been in use for years, the fluids of the mouth forming a coating which lubricates and protects the metal so that there is in reality no actual contact between the outer and inner caps. On the other hand, if the fitting has not been accurate, and there is the slightest play between the outer and inner caps, there will be a very decided friction which will, in a very short time, render the piece worthless.

<sup>1</sup> Within the past few years Mr. L. J. Weinstein, of New York, has been making extensive experiments in dental alloys for this and other work, and has produced some which gives excellent results. A chapter by him in another part of this work will prove interesting and valuable reading, not only to the crown and bridge specialist, but to the general practitioner as well.

**The Technic of the Telescope Crown.**—The trimming of a tooth for a telescope crown is done in practically the same manner as for an ordinary shell crown, being ground so that the stump is a little tapering, and being slightly larger just below the gum line, the only difference being that the occlusal surface should be cut away a little more than for a shell crown, as there is a greater thickness of metal at the occlusal end in a telescope crown than in a shell crown.

The measurement of the stump is taken in the manner described, directly across, and as nearly at right angles with the sides as possible. The band should be cut to this measurement, the ends being nearly parallel, but not quite, flaring a little and being slightly longer at the gingival edge (Fig. 396). The length from the occlusal to the gingival edge of the band should be such that it will extend from well beneath the gum line to a little above the occlusal end of the stump, or nearly in contact with the occluding teeth.

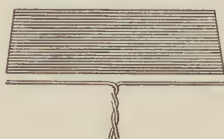


FIG. 396

The thickness of the gold of which the band is made should be number 30 Brown & Sharpe gauge, or .010 of an inch. One end is beveled to a knife edge and the other overlapped and the two parts swcated together. The band should then be shaped carefully to conform to the shape of the stump and festooned accurately to follow the gum line, being certain to have it nearly parallel with other abutments. In shaping it to the stump, care should be used not to wrinkle the band, but to keep it perfectly smooth. The gingival end should then be beveled slightly from the outside, any feather edge which may have been turned over by the scissors or the file being removed, so that it will pass freely under the gum without mutilating it or causing the patient unnecessary pain. The better way to prepare these bands is, after the stumps have been trimmed and the measurements taken, to take a careful plaster impression and make a good model of the parts. This is then dried and the bands are fitted, festooned to follow the gum line, and paralleled on this model. If the work has been done carefully and accurately,



there will be very little work in fitting them in the mouth and the patient will be saved much unnecessary pain and annoyance. It should be remembered that the occlusal end of the band should have exactly the same shape as the gingival end, or in other words the occlusal end of the band should follow parallel with the gingival, although it will be slightly smaller.

It is important that this be done accurately, for should the occlusal end not have the same outline as the gingival end, if it be pressed together too much mesially and distally, or buccally and lingually, it will be too conical from this direction (Fig. 397), but will be forced out at the occlusal end at the other sides, giving it a flaring top viewed from that way, which would render it impossible to perfectly fit the outer band (Fig. 398).



FIG. 397



FIG. 398

The band is then placed on the stump, forcing the gingival edge to nearly one-sixteenth of an inch below the gum line. An impression and articulation is now taken and a model prepared in the manner which has been already described. After the model has been separated from the impression and neatly trimmed, the band can be removed by grasping it with a pair of heated pliers and any wax adhering to the stump is cleaned away. The model should then be thoroughly dried, treated with several coats of thin sandarac varnish and again dried to harden it before proceeding with the work. This being done, the band is replaced on the stump, and enough of it cut from the occlusal end to allow for the placing of a thick, strong cusp. The extreme occlusal edge of the band is then turned inward slightly all around (Fig. 399), care being taken to keep the edge parallel with the gingival end of the band.

The object of turning the edge of the band in, is to give this end of the cap a slightly rounded form in order to facilitate the placing of the bridge over it in the mouth. If this were not done, and the top of the cap was left with a sharp, square edge all around, it can readily be seen by the illustration (Fig. 400), that if the abutments were in the least out of parallel, the edge of the outer cap would catch on this square edge and render the insertion of the bridge less easy. If the top edge of the cap is slightly rounded, the

outer cap will slip over it from almost any position, and the bridge can be dropped in place without the least difficulty.

The occlusal edge of the band having been turned in, this end is filed perfectly flat and the floor of No. 28-gauge coin gold is flattened in the swaging device and sweated to it in the same manner as already described in the making of the cap for a Richmond crown (Fig. 401). The extending edges of the floor are then trimmed flush with the band, the extreme edge slightly rounded, and the sides of the cap nicely smoothed with a file or a fine disk and polished. The floor of the cap is not polished at this time, the reason for which will be given later.



FIG. 399

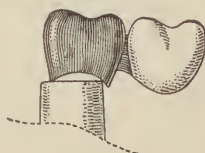


FIG. 400



FIG. 401

The inside of the cap is then given a very thin coating of wax. After the wax is applied, all the excess that can be removed is scraped away with the spatula. The cap is next grasped with pliers and passed quickly through the Bunsen flame so as to distribute the little remaining wax evenly, leaving only a very thin film. If there is too thick a coating of wax on the inside of the cap, it can easily be pulled away from the fusible metal stump, or it will be found that when the outer band is driven over, the wax will be squeezed out around the edges, allowing the inner band to buckle, with the result that the work will have to be done over again (Fig. 402).

The object of using the wax on the inside of the band is that when removing the fusible metal with boiling water, there will be less liability of its sticking to the gold. The same result can be obtained by using a very thin coating of rouge and alcohol.

A tube of paper is then made, or a piece of rubber tubing may be used, and the band pushed well down into it so that the gingival edge is an inch or more below the upper end of the tube. The paper tube should fit the cap tightly, and is held in place with a gum band or piece of wire (Fig. 403). The tube is now filled with fusible metal which is allowed to cool thoroughly before removing the paper or rubber tubing. Fig. 404 shows a ladle especially adapted for fusible metal, when used in small quantities. It has

a long, narrow lip, which allows of the metal being poured into a very small opening as the paper tubes in which the caps are placed. The ladle will also hold enough metal to pour a large-sized die for a saddle. The metal used for this purpose should have a very low



FIG. 402



FIG. 403

fusing point. Melotte's metal, or any of the alloys which fuse at a temperature higher than that of boiling water, are not suitable for this purpose. The alloy which the writer has found most suitable for thus reinforcing the caps is made from the following formula



FIG. 404

of Dr. C. M. Richmond, which was published many years ago in one of the dental journals.

Tin	20	parts.
Lead	19	"
Cadmium	13	"
Bismuth	48	"
	<hr/> 100	"

They are not melted in the order of their fusibility, but in the order in which they are given, as the metals seem to combine better

if melted in this manner. A new crucible, or one in which only this metal has been made before, should be used for the purpose. The tin is placed in the crucible and heated until it is entirely melted and as soon as this has taken place, the lead is dropped in. When this has also melted, the cadmium is added and when this too has melted, the crucible should be taken from the fire, or the fire should be turned out. The bismuth is then added in pieces and stirred in with a pine stick until it is entirely melted. It must not be forgotten to remove the crucible from the fire as soon as the cadmium has disappeared. If this is not done, when adding the bismuth, the fusing point of the mass is lowered so rapidly that the metal will burn and become worthless for the purpose for which it is intended.

This metal fuses at about 160° F. It is quite hard and does not shrink at all on cooling, and after using, it can readily be removed from the gold cap by placing it in hot water.

The metal-filled cap having become quite cold, the paper is removed and a perfectly solid and rigid stump results, over which it is possible to make a perfectly-fitting outer cap, and the surplus metal extending as it does over an inch or more beyond the cap, makes a convenient handle by which to hold it for further operations (Fig. 405).



FIG. 405

It is well to emphasize the fact that the band should be thoroughly polished before filling it with the fusible metal. Being reinforced as it is, and having the extending stump for a handle, it would be easier to polish and finish it after it has been filled with the metal, but there would be danger of future trouble should this be done. Should the band be polished at this time, it would be impossible to prevent the polishing wheels from coming in contact with the fusible metal and some of it would be sure to adhere to the wheels. The surface of the gold of the inner cap would thus become contaminated, so that in fitting the outer band it would in turn become contaminated from the film of the base metal which had been brushed over the inner cap, even though it could not be seen, and the band, at the first annealing, by alloying with the base metals would become so brittle as to be absolutely worthless. Then too, the polishing wheels, from their contact with the fusible metal, would contaminate any other metal on which they might be used.

It cannot be too strongly impressed upon the reader, the danger of the precious metals becoming contaminated even by touching base metals on the work bench. The greatest care should be used to keep them from unnecessary contact. Even the slightest trace of any of these base metals or alloys will, on the piece being heated, as in annealing or in soldering, entirely destroy the working qualities of the precious metals, so that they are good for nothing until they have been refined and remelted. All pieces swaged or fitted upon base metal dies should be given a bath in nitric acid before annealing or soldering.

The bench on which base metal has been used, and the instruments which may have been used around it, should be thoroughly cleansed before coming in touch with gold or platinum. It is a good plan when using base metals, to cover the bench with paper and after having finished with them, the paper can be thrown away or burned, thus obviating the possibility of trouble.

**Making the Outer Cap.**—The measurement of the inner cap is taken just below the point where the occlusal end has been rounded (Fig. 405, *a a*), and the outer band cut from No. 30-gauge coin gold on an angle of the same degree, or even slightly greater than was the inner band (Fig. 396). This is then beveled and sweated together in the same manner as was the inner band, and afterward the lapped joint is hammered over the beekhorn of an anvil or squeezed between the jaws of the stretching pliers until the seam on the inner side is entirely obliterated. It is now annealed and given approximately the shape of the stump, and the inner cap is driven into it by placing the occlusal end of the band on the anvil and tapping the end of the fusible metal stump with a small hammer. It is thus forced into the outer band which is stretched over it, as in Fig. 406. The hammer which is used for this purpose should never be used on gold, but should be kept for use on base metals and nothing else.

The outer band should not be allowed to come in contact with the fusible metal except in such cases as will be described later. The band will be found to fit the inner cap so tightly as to render it immovable. This may be remedied by using a heavy steel burnisher (Fig. 407) and burnishing the sides of the band as it fits over the inner cap. This burnishing will stretch it very slightly, but sufficient to allow of it being removed from the stump. It should not be burnished so as to make it loose, but just enough to permit of its being forced off with an instrument.



The band is then marked and carefully trimmed to a line parallel with the gingival edge of the inner band, and again driven on until

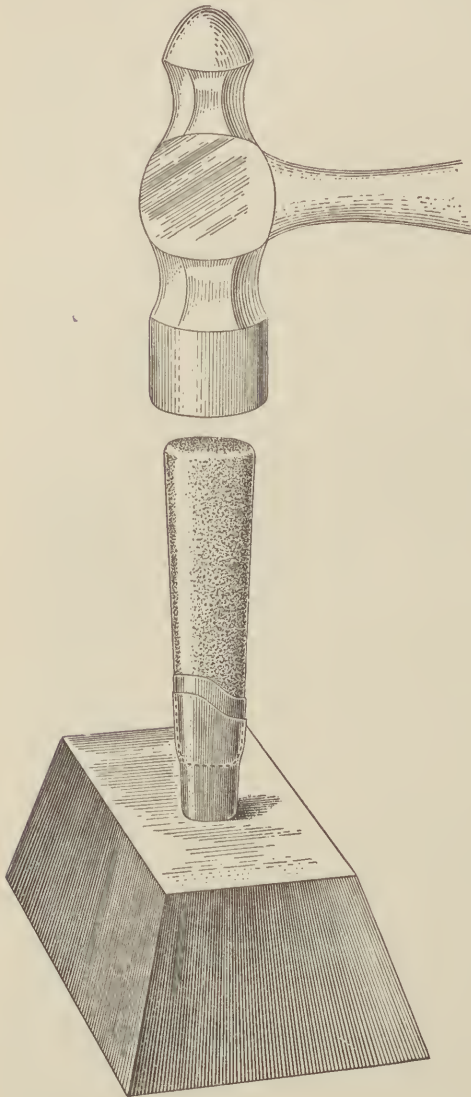


FIG. 406



FIG. 407

it comes to within a little less than one-sixteenth of an inch from the gingival edge of the inner cap (Fig. 408). The occlusal end is trimmed

very nearly to the floor of the inner cap and then pressed in, all around over the rounded edge of the inner cap so that it fits at this point closely (Fig. 408). This can be done with the face of a flat file by giving it a rolling motion, laying it flat on the side of the band and rolling over the occlusal end. It should not be done by burnishing as the burnishing would stretch the metal at this point and make it impossible to obtain an accurate fit.



FIG. 408



FIG. 409

The occlusal end is then filed flush with the floor of the inner cap. In doing this and in making it perfectly flat, it will be necessary to file away a very small portion of the floor of the inner cap and it was for this reason that the floor was made of No. 28 gold (Fig. 409). We now have an outer telescoping cap which fits the inner perfectly, and there is no method known to the writer that can be employed by which so perfect a fit can be obtained in these small telescoping bands, no two of which are ever of exactly the same size or shape. The outer band is then removed, the inside carefully wiped out so that no particle of the filings or dust remains clinging to the sides, and a floor of No. 30 coin gold is sweated to it. Up to this point, no solder has been used, so that in any subsequent soldering operations there is no possibility of any solder making its way to the inside of the cap through the seams, and thus destroying the fit.

The edges of the floor are then trimmed flush on the buccal and lingual sides of the cap, leaving it extend a little out from the cap centrally on the mesial and distal sides, as in Fig. 410, to assist in giving the crown a normal contour at these points.

It is essential that the contour of the cap or crown be restored

so that it will present a normal appearance. In long or medium length crowns, this is done by building it out mesially and distally with coin gold. Pieces of No. 28-gauge coin gold are used, being cut about one-half or three-quarters longer than the buccal and lingual diameter of the cap and shaped approximately as in the drawing (Fig. 411), the gingival edge following the festoon of the band and coming to within about one-thirty-second of an inch of this edge and extending about one-thirty-second to one-sixteenth of an inch above the occlusal end.



FIG. 410




FIG. 411

These pieces of gold are called the contour wings. One is placed in position on the cap about one-thirty-second of an inch above the gingival edge, the other side resting on the extended floor of the outer cap (Fig. 412). This allows only the lower edge to touch the band and it prevents the solder at this time from flowing farther up between the wing and the cap than is desirable. If the floor has been trimmed close to the band all around, the same result can be obtained by giving the wing a short bend close to the gingival edge as in Fig. 413. It is held in position with a pair of pliers and fluxed



FIG. 412



FIG. 413

with liquid-flux<sup>1</sup> between the wing and the cap and then held over the flame of a Bunsen burner, drying the flux and thus holding the wing temporarily in position.

The cap is then placed on a charcoal block, the side on which the wing is to be tacked being uppermost, and it should so rest that the wing is nearly level. A very minute piece of 21-carat solder, no larger than a quarter of the size of a pin head, is placed on the lower edge of the cap in contact with the wing, as in Fig. 414. The whole is now thoroughly heated-up until the solder melts and the wing is

<sup>1</sup> A solution of borax and boracic acid.

tacked to the band with this small piece of solder. The cap is then cleansed in acid and the wing on the opposite side is attached in the same manner. The cap is next placed on the stump and the wings are brought into shape with the pliers so as to give a normal contour to the crown, the ends being trimmed as may be necessary to give this result (Fig. 415). The fact of their being only just lightly tacked at the gingival edge permits them to be adjusted outward or inward or in any way desired to give the required contour. Fig. 416 represents an upper molar with the wings brought into proper position and Fig. 417 a lower molar, looking at them from the occlusal end.

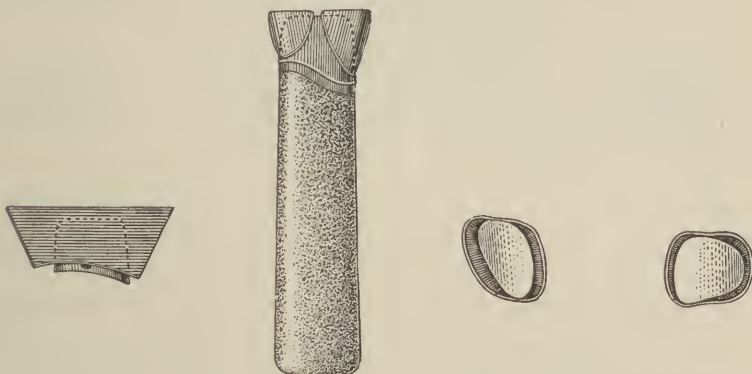


FIG. 414

FIG. 415

FIG. 416

FIG. 417

When the wings have been brought into shape, the spring of the metal will be such as to keep the edges from actual contact with the band. To overcome this, it is necessary to anneal them while they are being held in close contact, as follows: The edge of the contour wing is grasped with a pair of pliers, one beak being inside of the band, and the other resting on the edge of the contour wing, holding it in place. The flame of the blow-pipe is then thrown onto the wing, bringing it to a red heat, holding it in the pliers, as in Fig. 418, until it is cool. This will bring it in contact with the band, and overcome the spring of the metal. This is repeated at different places until all points of the wings are in contact with the band.

The cap is thoroughly cleansed in acid and after it is rinsed and dried, it is well fluxed between the wings and cap and also around the edges and buccally and lingually between the two wings. It is now placed on a charcoal block with either the buccal or lingual

sides uppermost and a large piece of 21-carat solder placed between the ends of the wings, as in Fig. 419.

The whole cap is then thoroughly heated up with the blow-pipe and the solder drawn in between the wings and the cap and along the edges, adding solder as needed and using sufficient to flush it well between the edges of the wings and cap, but not enough to more than partly fill in between the contour and the band, as in Fig. 420. If, in a long crown, where a considerable contour is needed, this space were entirely filled, it would make the crown unnecessarily and undesirably heavy, especially if it is for an upper tooth. Many times it would require an extra pennyweight or more of solder to entirely fill this opening.

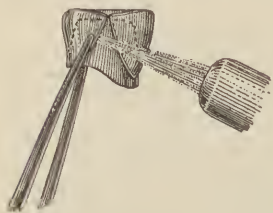


FIG. 418



FIG. 419



FIG. 420

The cap is then cleansed again and soldered on the opposite side in the same manner, bringing the solder flush between the ends of the wings, also along the lower edge between the wings and the band. It is then cleansed in acid and the extending wings cut and filed flush with the floor of the cap (Fig. 420). A suitable cusp button is selected, a pure gold matrix made, filled flush with coin gold and the under surface filed perfectly flat. This cusp may be selected after the band has been contoured, or it may be selected before and the contour brought out to correspond with the cusp.

The cusp should be a little large and should extend slightly beyond the contour. After it has been filed perfectly flat, the under surface is fluxed as well as the floor of the cap at the point of contact and held in the flame of the Bunsen with a pair of pliers, cusp down, until the flux has dried, thus tacking the cap and cusp together. The cusp and cap are then wired tightly and placed on the charcoal block, as in Fig. 421.

A large piece of 20-carat or 21-carat solder is placed on the buccal or lingual side of the cap, resting on the extending edge of the cusp. The flame of the blow-pipe is directed on the cusp which should



extend a little over a depression in the block so as to allow the cusp, which is very thick and heavy, to be thoroughly heated-up first, and the solder melted (Fig. 421), flowing it in between the floor of the

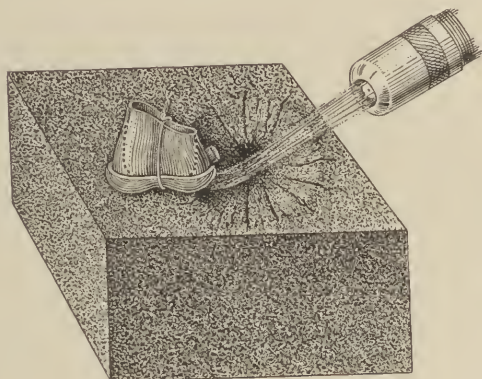


FIG. 421

cap and cusp. The cap can then be placed on its side, as in Fig. 422, and the cusp first heated thoroughly and as the solder begins to melt, the flame is passed slowly from the upper to the lower edge

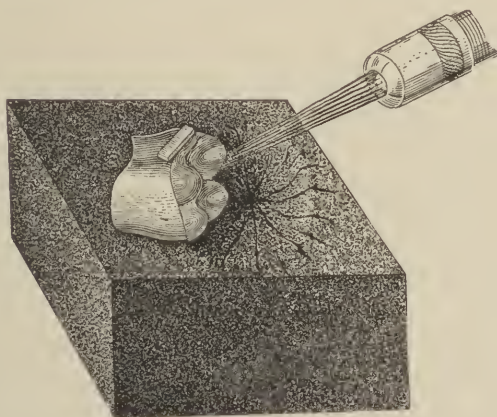


FIG. 422

Fresh solder is added and as it melts, it is drawn through from one side to the other, uniting the cusp to the floor of the cap firmly.

It is better that the solder should always be drawn from one point and enough of it used to be certain that it is drawn entirely through

and filled flush all around the edges of the contour, uniting the cusp thoroughly at all points. If the operator were to start at one point and unite it there and then turning the crown and uniting it at different points all around on the outside, he might afterward find that it was perfectly soldered on the outside, but the solder had not drawn entirely through from one side to the other, and that the entire floor of the cap was not united to the cusp. The possible result would be that in future operations, when the piece has been very highly heated, the floor of the cap at the point where it was not united with the cusp may have expanded and bulged inward as in the illustration (Fig. 423), leaving a large blister at



FIG. 423

this point. This is not simply an illustration of what might happen, but of what the author has seen happen many times. If it chances that this has taken place, the cap can be placed on a block and the bulged floor driven back into place with a stick. This can be accomplished so that very little or no harm will result, but the appearance of the cap on the inside is spoiled.

After the cusp has been soldered, the extending edges are ground off flush with the contour and the whole crown is finished and polished. The outward appearance of the crown is now the same as an ordinary contoured shell crown, but at the same time, it fits the inner cap perfectly. The inner cap, reinforced with the fusible metal, is now driven into the outer cap and if it binds too tightly, it can be tapped lightly on the edge of the cusp all around with a hammer handle until it eases up sufficiently to allow of its removal. They are then driven together again and this is repeated several times until they move just as they should.

After this adjustment has been completed, the inner cap is removed from the fusible metal stump by immersing it in boiling water. The cap is grasped in a pair of pliers and as the metal softens, the cap is lifted from the water and any metal remaining in it is shaken out while it is still hot.

The cap is then thoroughly dried and placed in chloroform to dissolve any wax which may remain on the inner surface of the crown after which it is put in nitric acid and left for a time, or else boiled in the acid in a test tube, so as to remove any traces of the fusible metal, as the slightest trace of this metal left in the cap would, should it be reheated, render it brittle and worthless.

**Use of the Casting Process in the Making of Telescope Crowns.**—Mr. Arthur N. Cross makes use of the casting process frequently in

restoring the normal contour to these telescoping crowns. His method is as follows:

The inner cap is made, polished and filled with fusible metal as already described. The outer cap is then made, the floor cut flush with the sides of the band all around and the cap made smooth, but it is not necessary to polish it. If it is a tube and split-pin combination, the pin is fitted and soldered into the cap. The inner cap is now removed from the fusible metal, thoroughly cleansed and the two are put together. The outer cap is lightly lubricated with oil, cacao-butter or vaseline and then wiped off until but the thinnest film remains. In fact it will be sufficient if the cap is just rubbed over with a cloth that is the least bit greasy. The wax is applied, building up the contour and occlusal surface fully and making it perfectly smooth on all sides, after which, it is placed on the model and carved, and very carefully articulated (Fig. 424). A hole about one-sixteenth of an inch or a little larger is now made through the center of the occlusal surface to the floor of the cap. The lower edge of the wax should come to within about one-thirty-second to one-sixteenth of an inch from the lower edge of the outer band and should be left fairly thick and not be brought to a knife-edge. If the crown is long or fairly so, if this contour were cast solid, it would make the crown undesirably heavy, so it is well to lighten it by cutting out some of the wax. It is first chilled and the waxed cusp and contour is lifted from the cap and the inside wiped out with alcohol, to remove the thin coating of grease, and dried out. With a bur or a hand instrument the contour is cut away from the inside as much as is desirable to lighten the weight so that only the under surface of the cusp and the lower edge of the contour will be in contact with the cap (Fig. 425). It is then carefully freed from the wax cuttings and tried on the cap. If everything is as it should be, the sprue former is attached to one of the cusps at an angle so that the pressure, in casting will be all downward (Fig. 426). It is then thoroughly chilled and removed from the cap, filled and covered with investment, flaked and cast with coin gold or some other hard, high-carat alloy that will make a smooth casting with a minimum amount of shrinkage.



FIG. 424

After it has been removed from the flask, it is washed thoroughly and immersed in hydrofluoric acid for a time to remove every trace of silica which may adhere to the casting. When it is removed from the acid, it is washed and dried and fitted to the outer cap of

the telescope. The lower inside edge of the contour can be ground wherever it may bind until it fits easily, as it is not necessary here that the fit should be perfectly accurate as it has to be soldered. The cap is filled with investment and dried out. The floor of the cap and the lower edge of the band is fluxed, as is the under side of the cusp and the lower inside edge of the contour where it comes in contact with the band. The contour cap is now put in place and held down with an instrument while it is being heated up so as to prevent the flux from raising the cusp from the floor. The cusp is now soldered to the floor, using the solder in a strip and feeding it through the hole, using enough to unite the cusp firmly to the cap and filling the hole flush. It is next turned on its side and the lower edge of the contour is soldered to, and finished flush with the lower edge of the band (Fig. 427). The crown is now pickled and cleaned, placed over the inner cap on the model and the articulation touched up and fissured where the solder has been filled in through the hole in the cusp, after which it is finished and polished.



FIG. 425



FIG. 426



FIG. 427

This makes a good crown and can probably be made by the beginner with less liability of burning the band than in building up the contour with wings as first described, but when one is used to the work, he will restore the contour much more quickly by building up than by the casting process.

The casting of the entire outer cap of the telescope has been tried and there are some who claim that it can be done successfully and is practicable, but as yet the writer has not seen one which could compare at all favorably with the built-up crown. The contraction is such that it necessitates grinding and trimming on the inside of the cap before it can be made to go over the inner cap, thus destroying the nice accuracy of fit which is necessary for the perfect working of these crowns. However, there is still a great deal that we do not know about the casting of gold and some experimenting along this line might develop something of value.



The success of this method will depend very largely upon the character of the investing material and the gold which is used for the casting. The investment will have to be of a kind that will make a perfectly smooth mould and have a tendency to expand slightly without cracking. The gold used, must be a hard, tough, high-carat alloy that will make a very smooth casting with a minimum amount of shrinkage.

As yet we have neither of these requisites which will counteract the shrinkage of the metal on cooling, or give a sufficiently smooth casting for the purpose for which it is intended and until we have these, the writer heartily disapproves of using this method except in an experimental way.

Another way of using this process, and for which success is claimed, is to make the outer band with floor complete. The cusps and contour are built up of wax on this and then cast directly on the cap. There are the same objections to this method as there are to casting the entire cap. The shrinkage necessitates grinding and trimming, thus rendering the cap of no value.



FIG. 428



FIG. 429

The bulk of the contours of the telescope crowns are always mesially and distally, except where the teeth are in an abnormal position. A molar or a bicuspid may be turned one-quarter around. Then the contour would be placed buccally and lingually, as the tooth stands in the arch, but at the same time it would really be on the mesial and distal sides of the tooth, as in the illustration. Fig. 428 shows a rotated molar and Fig. 429, a bicuspid.

As previously stated, the telescope crowns should be used in the posterior part of the mouth only, and never, under any circumstances, anterior to the bicuspid.

**The Telescope Crown in Combination with the Tube and Split Pin.**—This crown is indicated where there is to be but a single retaining abutment for a bridge, or where there are two retaining abutments, but the crowns are so very short that it will be impossible to get sufficient hold with a simple telescope crown. It is nearly always indicated for the lower third molar, and very frequently for the second lower molar,



As is usually the case with the lower third molars, the crown is very short or extends but a short distance above the gum, so that at times, on the distal side, it is necessary to cut the stump nearly flush with the gum, or even beneath it, in order to place a cusp thick enough to give strength and support to the body of the bridge with which it is to be connected.

It is also not infrequent that it is indicated in the upper molars, and at times in the lower bicuspsids, but very rarely for the upper bicuspsids.

**The Construction of the Telescope Crown with the Tube and Split Pin.**—The inner band is made and fitted to the stump in exactly the same manner as for the ordinary telescope crown. If the crown of the tooth is of sufficient length so that the depth of the pulp chamber, from the floor to the occlusal end of the stump, is in the neighborhood of three-sixteenths to one-quarter of an inch, it is not necessary that the tube should go in deeper than to the pulp chamber



FIG. 430

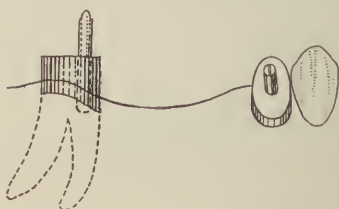


FIG. 431

floor. If, however, the crown is very short, it may be necessary to drop the tube for a little distance into one of the roots. In the lower molar, it is generally advisable to utilize the mesial root for this purpose, as the inclination of these teeth is frequently such, that the mesial root stands at a better angle to receive the tube, as in Fig. 430. If it were placed in the distal root, the upper end of the tube might at times come very close, or quite to the upper distal edge of the stump. It is only necessary to drop the tube for a very short distance into this root, and as a general rule, owing to the lingual inclination of the tooth, it would be placed toward the lingual side.

In the upper molars, the palatal root is the best, as it is of a greater size than are the others. It is best in these cases that the inner cap of the anterior abutment be made first. If this is to be a telescope crown, the inner cap should be completed and polished. If it is to be a porcelain crown or a porcelain-faced crown, the cap is made and the tube adjusted and soldered into it. The cap is

now placed on the root and if there is a tube in this abutment a mandrel is placed in it as an aid in paralleling the molar band. The band is then fitted to the molar stump and paralleled, as nearly as possible in the mouth, to the anterior abutment, after which the mandrel is removed and a modeling composition or wax bite taken. The opening having been made in the stump for the reception of the tube, a heavy wire, of a slightly greater diameter than that of the outside of the tube which is to be used and long enough to extend about three-sixteenths to one-quarter of an inch above the stump, is put into it, roughly paralleled with the mandrel in the anterior abutment tube and held in place with a little soft wax. The mandrel is then removed (Fig. 431) and a plaster impression taken, using a small tray for the purpose, including both abutments and some of the adjoining teeth.

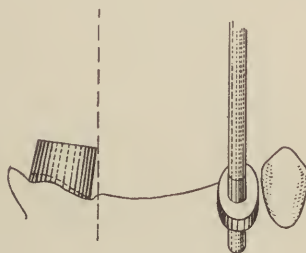


FIG. 432

The pin, and possibly the caps may come away with the impression. If they do not, they are removed from the stumps and carefully put in place and waxed as described in Chapter VII, page 138, on Impressions and Models.

The impression is then varnished and the model made and after it has become hard, the impression is cut away, the caps and pin removed and the model dried and hardened. The caps are now replaced on the model, the wax bite adjusted and the articulation carefully prepared.

If the anterior abutment has a cap with a tube, the mandrel is placed in the tube and the abutments are tested to see if they are parallel. If they are not, they are made so by trimming the molar band. If it tilts forward, it is trimmed from the mesio-lingual edge distally as shown by the dotted line in Fig. 432 and allowed to drop back until it is exactly parallel with the mandrel. If the molar tilts backward as in Fig. 433, it is trimmed from the disto-lingual edge mesially until it becomes parallel. This must be

done very carefully so that it will follow the gingival line exactly as shown on the model.

If it is necessary to trim the sides of the stump in order to do this, it should be marked with a pencil wherever any plaster has been cut away and after the bridge is completed, the stump in the mouth is ground, wherever the pencil marks on the model show that it is necessary, before attempting to put in the bridge.

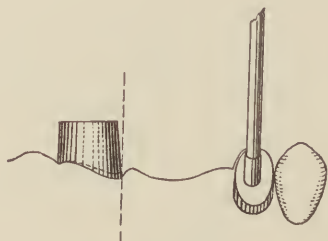


FIG. 433



FIG. 434

Viewed from the buccal side, the abutments must be almost exactly parallel, but looking from the mesial end, if there are but two abutments, they can be quite a little off from parallel (Fig. 434), and the bridge will slip into place as easily and smoothly as though they were exactly parallel, going into position with a slight twisting motion. If there are more than two abutments, then of course they must all be very close to parallel.

The paralleling having been completed, the edges of the occlusal end of the band are turned in slightly, the same as in the regular telescope, a floor of No. 28-gauge coin gold is sweated to it, and the excess gold of the floor trimmed away. By observing the hole in the stump, where the heavy wire has been removed, it can be ascertained about where the hole should be drilled in the floor of the cap for the



FIG. 435

reception of the tube. The hole in the floor should be made of a diameter about one-half greater than the outside diameter of the tube which is to be used (Fig. 435). The tube, with the mandrel inserted, is then placed through the opening, in the floor of the cap while the cap is on the model, the lower end resting on the floor of the pulp chamber or on the bottom of the cavity made to receive it, and adjusted so that it will be parallel with the anterior abutment, looking from the buccal side. If there is a tube in the

anterior abutment, a mandrel is inserted in it. If the anterior is a telescope crown, a little straight edge placed alongside of the inner cap will serve as a guide in paralleling (Fig. 436).

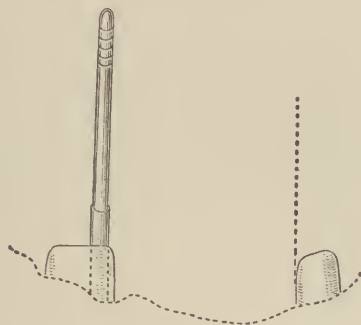


FIG. 436

The tube must also be adjusted so that the outer cap, when the crown is finished, with the pin in position, will draw freely from the inner cap. This should be tested carefully while the tube is waxed in place, before investing and soldering. This may be done by leaving the mandrel in the tube and testing it from all sides with a flat instrument or a small straight edge placed against the sides of the band, as shown in the illustration (Fig. 437). The cap being slightly conical, it is not necessary that the tube be perfectly parallel with the sides of the band at any point, but it must be in such a position that the outer cap will draw freely.

By placing the edge of a flat file on the side of the band on a line with the mandrel, if, as the mandrel and file leave the band, they are parallel or converge toward the upper end from all sides, it will be known that the outer cap will pass over freely after the pin has been soldered into it (Fig. 437). On the contrary, if, as the mandrel and file leave the band, they diverge, as in the illustration, it can readily be seen that it will be impossible to make an outer band which will fit the inner band accurately and have it draw with the pin of the outer cap in place, as shown in Fig. 438, as there is a very decided dovetail between the tube and the mesial side of the cap which would effectually prevent it from doing so.

As stated above, the diameter of the hole in the floor of the cap should be considerably larger than the outside diameter of the tube to permit, when the tube is soldered in place, of countersinking it well at the entrance, so that the pin may readily find the open-

ing. The tube should be in the center of the opening and the wax flowed around it to a depth of about one-thirty-second to one-sixteenth of an inch beneath the floor.

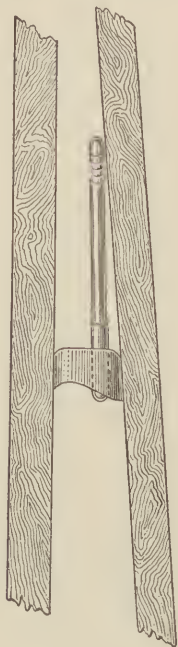


FIG. 437

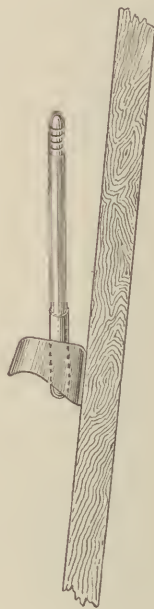


FIG. 438

The wax is then chilled, and the mandrel removed from the tube. This must be done very carefully so as not to disturb the relationship of the tube with the sides of the cap.

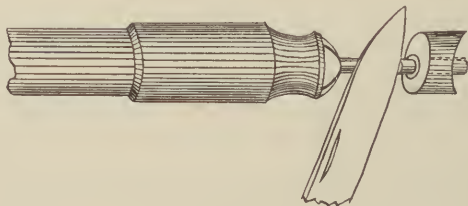


FIG. 439

The surest way of doing it without any danger is to grasp the mandrel in a pinvice, about one-quarter of an inch from the end of the



tube, and with a sharp instrument or the edge of a knife blade placed against the tube, push it off on a crumpled napkin or something soft so that it will not be distorted in falling (Fig. 439). The cap is then invested, care being taken to have the inside perfectly filled with investment, and it is ready for soldering (Fig. 440).

The invested piece is warmed slightly and the wax removed, or it may be removed with a small stream of boiling water, after which it is thoroughly dried out and heated to redness and the tube soldered in place with 20-carat solder. This is best done by using the solder in a strip, having first fluxed the sides of the tube and edges of the floor at the opening.

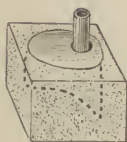


FIG. 440

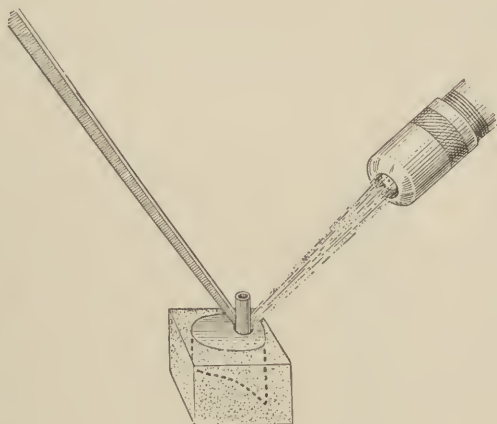


FIG. 441

The solder is held as shown in the illustration, and as the flame of the blow-pipe melts it, it is pushed through the opening around the tube to the under side of the floor, filling the space which has been left by the melted wax (Fig. 441). After it has been soldered, it is removed from the investment, cleansed in acid and dried.

The tube should be thoroughly dried out before cutting off the excess, as should moisture be left in it, the filings, working into the tube, will form a sort of paste which is difficult to remove, while if it is perfectly dry, the filings can be readily shaken out, with the saving of quite a little time. The extending end of the tube is held in a pinvice and cut off with a very fine saw, as close to the cap as possible without injuring the floor.

The sides of the cap are then smoothed and polished. If the bite

was not taken at the time the impression was, the molar and bicuspid caps are placed on the stumps in the mouth and an impression and bite taken simultaneously in plaster, or a wax bite can be taken and separate impressions of the upper and lower taken in plaster. After it has been removed from the mouth, the caps are replaced in the impression, properly waxed and the model and articulation made and after separating, the caps are removed from the model and cleansed. The molar cap is waxed lightly on the inside and filled with fusible metal, the same as for the regular telescope.

The measurement is taken and the outer band made. In a case of this character, where the crown is very short, it will be necessary to carry the outer band down over the fusible metal stump for the time being, in order to secure a fit and a hold on the inner cap sufficient to allow of the trimming, turning in and filing of the occlusal end of the band to conform with the inner cap, as shown in the illustration (Fig. 442).




FIG. 442




FIG. 443

The edges having been turned in at the occlusal end to closely fit the rounded corners of the inner cap, it is filed flush with the floor of the inner cap, the floor being touched lightly, just enough to make it perfectly flat and smooth on the surface. The outer band is now removed and cleansed in nitric acid, to free it from any trace of fusible metal, before trimming. Unless this be carefully observed trouble will surely follow. The gingival end is shortened and festooned to follow the edge of the inner cap, but from one-thirty-second to one-sixteenth of an inch shorter (Fig. 443), and a floor of No. 30 coin gold is sweated to it.

In the making of a telescope crown it must be remembered that after the outer band has been filed flush with the floor of the inner cap and removed, it should always be wiped out thoroughly on the inside before sweating the floor to it. If this precaution is omitted or if any of the filings or dust should adhere to the inside of the band, they will become sweated to the sides during the process of uniting it to the floor. This would render the inside of the band rough, and would result in the scratching of the inner band when the outer cap is being removed or replaced.

If the crown is of good length, the floor is trimmed, as in the case of the regular telescope crown, being made flush on the buccal and lingual sides and extending slightly beyond the band mesially and distally. The band is then contoured with wings and solder in the same manner as in the making of a regular telescope crown.

The opening in which to place the split pin should now be located. The floor of the inner cap having been filed perfectly flat and smooth, the inner edges of the tube are sharp and clear, like the edges of a steel die. The outer cap is placed over the inner cap, and the floor of the outer cap, at the point over the entrance to the tube, is placed on the end of a soft pine stick and the fusible metal stump struck a sharp blow (Fig. 444), indenting the floor into the tube entrance and leaving on the inside a clear sharp outline of the opening (Fig. 445).



FIG. 444

The next operation is to enlarge the entrance to the tube and fit the pin to it. The split pin should fit in the floor of the outer cap tightly, so that no excess of solder can pass through to the inner side of the cap; in this it is not like the tube, in the inner cap, the diameter of which is from one-third to one-half less than that of the hole in the floor to which it is soldered.

It is advisable here to emphasize a most important point, one that must not be forgotten and which applies in all cases where tubes are used. It is well known that a molten mass of solder contracts on cooling. Thus the placing of a large amount of solder around the tube results in its contraction. It is evident that if the pin were made to fit the tube, without first enlarging it at the opening, it would touch only at the entrance, the point where it had been soldered, leaving the lower end free in the tube.

For the sake of illustration, these conditions have been somewhat exaggerated in the enlarged drawings (Fig. 446 and 447). It will be observed that the contraction of the metal around the tube has drawn it in so as to give it a neck smaller than the body of the tube (Fig. 446). It will also be noticed that the only point of contact of the pin with the tube is at the neck (Fig. 447). If it were left in this condition, this narrow neck would soon be worn away, with the result that in a very short time the split pin would be loose and the fit entirely destroyed. In order to overcome this, it is necessary that the neck be enlarged at the opening in each case sufficiently to allow the mandrel over which the tube has been finished, to enter freely. This is best done with a flame-shaped finishing bur (Fig. 448). The pin is now made to fit the tube and it should fit easily, but not loosely, or in other words, it should fit. A pin which fits a tube loosely does not fit at all. There is no such thing as a loose fit.

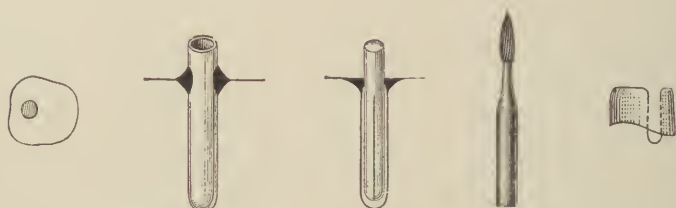


FIG. 445

FIG. 446

FIG. 447

FIG. 448

FIG. 449

The hole in the floor of the outer cap should now be made, the marking on the inside giving the position (Fig. 445). It should be enlarged, while the outer cap is in position on the inner cap just enough to allow the pin to pass through it to the bottom of the tube and fit the hole in the floor tightly. It is then removed from the inner cap.

The selected cusp having been filled and filed perfectly flat on the under surface, is placed in position on the outer cap, the pin for the time being having been removed, and the under surface of the cusp marked through the opening in the floor which was made for the pin (Fig. 450).

The cusp is then removed, and the entrance to the tube countersunk and smoothed in order that the pin may readily find the opening (Fig. 449). This can be done with the same finishing bur that was used in enlarging the neck (Fig. 448). It must be remembered, that this is not to be done until after the location of the entrance to

the tube has been marked in the floor of the outer cap, the hole made and the pin fitted into it. The cap is again put on the inner stump, the pin replaced in the tube through the floor of the outer cap, with the split of the pin running buccally and lingually. The pin is waxed firmly in position, the whole chilled, and the outer cap with the pin in place is removed from the inner cap and invested (Fig. 451).



FIG. 450

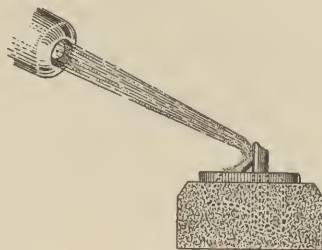


FIG. 451

The inside of the cap should be moistened before filling with investment, so that the operator may be certain that it is perfectly filled and that there are no air bubbles, or any unfilled space around the pin on the inside of the cap, which would allow any of the solder to pass beneath the floor. It should then be heated-up and soldered with 21-carat solder, a very small piece being used for the purpose.

The flame is first thrown on the split pin, as it is much heavier than the floor of the cap, until it is well heated. The flame is then lowered to the floor of the cap, drawing the solder around the pin and uniting it perfectly (Fig. 451).

A hole is then drilled through the cusp at the point marked through the opening in the floor of the cap and enlarged sufficiently to allow it to readily pass over the pin extending through the floor, leaving space on all sides, as in Fig. 452. The edges of the hole on the under side should be countersunk so that it will clear any surplus solder with which the pin was attached to the floor and allow the cusp to rest in close contact throughout. The pin should be cut off nearly but not quite to the floor so that when the cusp is soldered to the cap, it will be entirely covered with solder. It should not extend above the cusp so that it may be seen, as the color of this metal being much lighter than the cusps, and if it is not covered with solder will show and spoil the appearance of the occlusal surface of the crown, looking more like a piece of brass or German silver than gold.



The cap is invested, care being taken to fill it perfectly on the inside. The investment should extend about half way to the occlusal surface on the outside. It is now thoroughly dried and the floor of the cap and the under side of the cusp is well fluxed and the cusp is placed in position. It is then grasped in a pair of pliers one leg engaging the cusp and the other the under side of the investment and held over a Bunsen flame, cusp down, until the bubbling of the flux has ceased, the cusp thus being kept in close contact with the floor, or it can be held in the pliers, cusp up, and heated with the flame of the blow-pipe. It is then thoroughly heated and soldered with 21-carat solder, the solder being used in a strip, the end of the strip being placed in the opening through the cusp over the pin (Fig. 452). As the solder melts, the strip is pressed into the

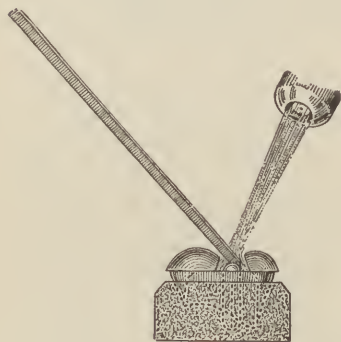


FIG. 452



FIG. 453

opening until it is drawn through from this point to all sides of the crown, and also filling the hole in the cusp and covering the pin (Fig. 453). This is also an excellent way of uniting the cusp to the outer cap in an ordinary telescope crown, making a smaller hole in the center of the cusp, then wiring it in place and investing and drawing the solder to all parts through the hole in the center of the cusp. Soldered in this way there is little likelihood of there being any point between the floor and the cusp which is not perfectly united.

The crown is now removed from the investment, cleansed in acid and finished in the same manner as the regular telescope crown.

If, on carving the cusps, it is found that the pin shows through the solder, it can be ground away with a bur or small stone and then covered again with a small amount of solder. After it has been

cleansed, the inner cap is driven into the outer and adjusted in the same manner as the regular telescope previously described.

The inner cap is now removed from the fusible metal stump and thoroughly cleansed with chloroform and nitric acid. It should be remembered that the cap must not be put in the flame or reheated again, until it is certain that every trace of the fusible metal has been removed.

If the crown be very short, either a simple telescope or a telescope in combination with a tube and split pin, the cusp can be attached to the outer cap and the contour restored with solder at the one soldering. The cap is filled with investment, but the investment does not cover the sides of the crown (Fig. 454). The cusp, which



FIG. 454



FIG. 455

is larger than the cap, is fluxed as is the top and sides of the cap, and held in a pair of pliers, cusp down, over a Bunsen flame, until the flux has dried and the bubbling ceases. These are now soldered together through the hole in the cusp with 21-carat solder and the solder is flowed over the sides of the cap all around so as to fully restore the contour (Fig. 455). It is now cleansed and finished and adjusted to the inner cap. If one side of the crown is very short and the other long, as is often the case with a lower second or third molar, a contour wing can be used on the mesial side and the distal contour restored with solder.

### THE KEY AND SHOE ATTACHMENT.

Another style of anchorage, especially adapted to bicusps and molars having vital pulps, and fairly long crowns, where the tooth is somewhat broken down and can be prepared with little or no irritation to the tooth and where great strength is required, is the dovetailed key and shoe attachment.

The key is made of iridio-platinum or platinized gold and filed smooth to form a dovetail, as in Fig. 456, *A* and *B*.

A strip of the iridio-platinum, No. 32-gauge, is bent to fit the sides of the key perfectly and filed off flush with the face or broad

side of the key, and a floor of the same metal fitted to it and soldered with a little pure gold (Fig. 457, *A* and *B*).

In using this form of attachment, the side of the crown to which the key is to be attached should be straight from the gum line to the top of the cusp and should be reinforced with a piece of No. 28-gauge coin gold soldered across the whole face of the crown with 21-carat solder and polished (Figs. 458 and 459).



FIG. 456



FIG. 457



FIG. 458



FIG. 459

The key is then put in place, a hole drilled through it and the side of the band to which it is attached with a small platinum rivet, such as a tooth pin (Fig. 460, *A*, *B*), the under surface of the key, if made of iridio-platinum, having first been covered with pure gold, as the union between iridio-platinum and the solder is not strong. The key may then be turned a little to the right or left, revolving it on the rivet, (Fig. 461) to make it parallel with the other abutment.

After it has been adjusted, it is soldered to the cap, using a very small piece of 20-carat solder which is placed on the lower edge of the band next to the key at point *c* (Fig. 460, *A*), and from there drawn to the upper end of the key, uniting it firmly to the face of the crown.

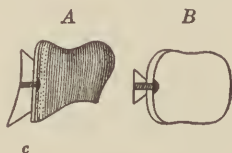


FIG. 460



FIG. 461



FIG. 462

The female part of the attachment, or the shoe, is then slipped over the key and a thin piece of platinum plate cut out to slip down over it next to the crown (Fig. 462), and this is burnished closely to it. It is then waxed to the shoe, removed, invested, and covered with pure or coin gold, uniting it to the shoe and filling the sides flush, as in Fig. 463. After having been cleansed, it is trimmed to its proper dimensions, and replaced on the crown. The facings

are now ground in and the bridge constructed, the shoe being soldered into the end of the body of the bridge as in Fig. 464.



FIG. 463




FIG. 464

If a saddle is to be used, the plate facing the crown, with the shoe attached, is carefully fitted to the saddle. The saddle is then waxed firmly to it, imbedding a piece of iron or brass wire in the wax along the shoe and saddle to stiffen it and prevent distortion while removing it from the key and crown, invested and soldered with 21-carat solder.

The necessary trimming and fitting is now done and it is replaced on the model and the bridge constructed, as will be described in Chapter XIV, on Saddle Bridges.

### REMOVABLE ATTACHMENTS FOR THE ANTERIOR TEETH.

These attachments are designed for the teeth anterior to molars, where it is undesirable that any gold should be seen. The cap is made practically the same as for a Richmond crown, the stump being left standing out of the gum until after the root has been trimmed and the band fitted.



FIG. 465



FIG. 466

In fitting the band to the root, care should be taken to have it nearly parallel with the long axis of the tooth, as in Fig. 465, and any excessive inclination in any direction as in Fig. 466 should be avoided.

After the band has been fitted, the stump is faced in the same manner as for a Richmond crown, except that it should not be cut quite as far under the gum labially, for the following reason. In a Richmond crown, the cap should be from one-thirty-second to

one-sixteenth of an inch beneath the gum on the labial side (Fig. 467), so that the band will be entirely hidden and, if the cap is properly made, it will remain so for many years. If the same procedure be followed with a removable piece, the band being far beneath the gum line allows the gum to crowd over the edge of the cap and onto the floor, when the bridge is removed, so that when the bridge was replaced, there would be the danger that the gum would be caught between the outer and inner caps, and a constant irritation of the tissues result.

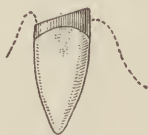


FIG. 467



FIG. 468

The stump should be trimmed to from one-sixty-fourth to one thirty-second of an inch below the gum line on the labial side and should stand about the same distance above the gum line on the lingual side and the band trimmed flush with it (Fig. 468). The placing of the floor on this will raise it high enough so that there will be little liability of the gum coming over the floor sufficiently to allow of its being pinched between the outer and inner caps.

The canal is enlarged with reamers, which are made for the purpose, a little lingually if possible for the reception of the tube.

The band is then faced off and a floor of No. 28-gauge coin gold sweated to it. The surplus metal is partially trimmed away leaving it extending beyond the band on all sides from about one-thirty-second to one-sixty-fourth of an inch, and a hole made through the floor to allow for the placing of the tube in position.

As in the case of the telescope crown with tube and split pin, the hole in the floor of the cap should be considerably larger than the outside diameter of the tube, so as to allow the solder to run through and provide for countersinking (Fig. 469). The cap is then placed on the stump, the floor carefully dried, the tube placed in the root and held in position while it is being thoroughly waxed (Fig. 470).

After waxing, the cap is chilled with cold air or ice-water and removed from the root with the tube in position. This should be done by passing a hooked instrument under the gum and over



the edge of the band, or under the extending edges of the floor, working from different sides, and moving it a little at a time, so as not to change the position of the tube in the cap. It should be noted whether the wax has drawn through to the under side of the floor



FIG. 469



FIG. 470

of the cap on all sides and should there be any point at which it has not done so, a little wax can be added with a very fine heated instrument and the cap again tried on the stump.



FIG. 471



FIG. 472



FIG. 473



FIG. 474

The same care should be exercised in placing the tube through the cap, to get the sides of the tube and the sides of the cap parallel, or so that the outer cap will draw, as in the case of the telescope crown with the tube. The correctness of the inclination of the tube should be ascertained by placing a flat instrument on the lingual side of the cap and also on the mesial and distal sides, the mandrel being left in the tube while the test is being made. The

correct relation of the tube on the lingual and mesial and distal sides of the cap is shown in Figs. 471 and 472, and under no consideration should they be placed in the position indicated in Figs. 473 and 474.

If after the tube has been waxed in position and it together with the cap is removed from the root, a condition similar to that shown in Figs. 473 and 474 is found, it should be replaced on the root to see if the relation of the tube and a cap have not been changed in removing it from the stump. If it is found that it has not changed, it may be necessary to make a new band throughout, tilting it enough in one direction or another so that a correct relation of the tube and cap can be obtained. No attention need be given to the relation of the tube to the labial side of the cap, as the half-band engages only the lingual half of the inner cap.



FIG. 475



FIG. 476



FIG. 477



FIG. 478

The cap is then invested, care being taken to have the inside well filled with investment, and the tube is soldered into it with 20-carat solder carrying the solder well down around the tube (Fig. 475).

The base of the investment is then broken away, still leaving the cap filled, and the sides of the band all around are covered with solder, filling a little more than flush with the extending floor of the cap (Fig. 476).

The investment is then removed, the cap cleansed and finished. In finishing, the lower border is polished to a knife-edge and the upper side is beveled from the floor to the gum line on the mesial, distal and lingual or palatal sides, just rounding the labial side from the lower edge to the floor (Fig. 477). This restores the enamel contour which is necessary for the protection of the gingivæ and the process.

The cap and the inside of the tube should be thoroughly dried out before doing any filing or grinding. The excess metal of the tube is cut away, the floor filed perfectly flat and the neck of the tube opened so that the mandrel over which it has been finished, will enter freely, after which it is countersunk and the edges rounded, leaving the edges of the opening perfectly smooth (Fig. 478).

## MAKING THE HALF CAP.

**Fitting the Pin in the Floor of the Outer Cap.**—The pin is then fitted to the tube. The floor of the outer cap should be made of No. 28-gauge coin gold. A piece of the metal, a little larger than the cap, is selected made perfectly flat, and the hole drilled through it at an angle corresponding to the angle of the floor of the inner cap with the tube. The pin should fit tightly into this, passing through the floor to the bottom of the tube, care being taken that the outer floor fits closely down to the floor of the inner cap at all points. The pin is then waxed to the floor (Figs. 479 and 480).

As the strain on any bridge is practically always buccally and lingually or labially and lingually, there very rarely being any strain mesially and distally, in placing the pin in the cap, the split should always extend from the labial to the lingual sides, as in Fig. 481.



FIG. 479



FIG. 480



FIG. 481



FIG. 482

The strength of the pin is far greater if placed with the split labially and lingually, than it would be if it were placed mesially and distally. This can readily be demonstrated with a strip of the half round wire, of which the pins are made (Fig. 482). It will be found that it can be bent very easily flatwise, but in trying to bend it edgewise, it will be very stiff. If the pin were placed with this split mesially and distally any lateral movement would have a tendency to bend the pin much more easily, the two surfaces sliding together, but by having the strain come edgewise on the pieces, far more than double the strength will be obtained than if it were placed transversely.

The investment should be made as in Fig. 483, making a small investment corresponding with the size of the piece to be soldered, care being taken to get the investment thoroughly around the pin on the under side of the floor where it passes through it. Very little solder should be used to connect this, the solder being placed at the

mesial side of the pin in contact with the floor (Fig. 483, *a*) the pin and opening in the floor having previously been fluxed. It is then soldered with 21-carat solder. In soldering, the investment should be first thoroughly heated-up and after it has reached a red heat, the small blue flame is thrown directly on to the pin which is so much thicker and heavier than the floor that it requires a greater length of time in heating-up. The flame is held on the pin until the melting point of the solder is nearly reached. It is then gradually lowered to the point of junction of the floor and pin and held there until the solder flows entirely around. It is then removed from the investment, cleansed in acid and dried.

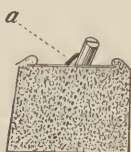


FIG. 483



FIG. 484

The pin and floor are now placed in position over the inner cap and the floor trimmed just flush, and parallel with the tapering sides of the cap (Fig. 484). This should be done with a file or a wheel, and care taken not to trim it to too great a bevel, but to leave it flush, as in Fig. 484, otherwise when the half-band is put in position it could not be brought in contact with the floor of the outer cap.



FIG. 485



FIG. 486

**Making a Half-band.**—The half-band should be made of the same material and gauge as the floor of the cap, No. 28. In the majority of cases, it should not come farther labially than the labial side of the pin, although there are times when it may be necessary to carry it further, even to the buccal side of the cap, and should extend a little above the floor of the outer cap and down nearly to the lower edge of the inner cap (Fig. 485). It should be bent and fitted carefully so that it is in contact with the floor at all points, and when waxed tightly to the floor of the cap, is removed for investment,

The piece should first be moistened on the under side so that the investment will fill it thoroughly, as it is necessary that the corners should be well filled so as to prevent any solder from flowing through at this point.

On the lingual and mesial and distal sides, the investment should be only high enough to engage the lower edge of the half-band so as to hold it in position, as in Fig. 486. It is desirable to have the investment far enough below the floor of the cap so that it may be thoroughly heated at the point of contact between the half-band and the floor, thus allowing of its being more easily soldered. The investment is then dried out and the piece fluxed preparatory to soldering.



FIG. 487



FIG. 488



FIG. 489



FIG. 490

There is a correct way and a wrong way to solder the half-band to the floor of the cap. In the correct way, the solder should always be placed at one point and drawn from there all around where it is necessary to unite the parts (Fig. 487, *a*). If two pieces of solder are placed at different points, as in Fig. 488, *a a*, trouble is almost certain to result. The piece is heated-up and the flame flashed on to it, melting the solder at these two points. When the piece is heated, the gold will expand, and in the half-band, it being a long and narrow strip of metal, the expansion will be greater than it will be in the floor. The half-band, being united to the floor at these two points, as in the illustration (Fig. 489, *a a*), when the flame is thrown on the lingual side, it will expand lingually and be pushed away from the edge of the floor (Figs. 489 and 490), with the result that the solder will be drawn down through, as in Fig. 491, resulting in an ill-fitting band.

If the solder is placed at the lingual side as in Fig. 487, when the piece is heated from that side, to the melting point of the solder, the solder draws the half-band closely in contact with the floor at that place. The metal expands as in the other case, but here it is held tightly to the lingual side and the ends of the expanding half-band are free to move buccally along the sides of the floor. By first melting solder at point *a*, Fig. 487, and then throwing the



flame around both sides, the solder is drawn from that point to the sides of the half-band, uniting it to the floor perfectly. It is then removed from the investment and cleansed and the lower edge of the half-band trimmed so that it will come just to or not quite in contact with the gum (Fig. 492). The outer bands of crowns of this type or of a telescope crown should never pass beneath the gum margin.



FIG. 491



FIG. 492

There is another way of making the outer cap and fitting the half-band. This is done before countersinking the entrance to the tube, and while the edges of the opening are still very sharp after filing the floor.

A floor of No. 28-gauge coin gold, a little larger than the floor of the inner cap, is made perfectly flat. A strip of the same gauge metal is next fitted carefully around the lingual half of the inner cap, scribed around the inside and cut and filed to the mark and flush with the floor. This is now placed near one end of the floor prepared for the outer cap (Fig. 493) and sweated to it.



FIG. 493



FIG. 494

After cleansing, it is placed in position on the inner cap, held firmly and the floor burnished over the entrance to the tube. This will mark the outline of the opening showing where to make the hole for the split pin. In another way of locating this place, a very small portion of wax is put on the under side of the floor at about the location of the tube entrance in the inner cap, which is moistened slightly, and the outer floor and half-band put in place and they are then pressed tightly together. When the outer floor is removed, the impression in the wax will give the exact location at which to make the hole in the floor. This is now made and enlarged nearly to the size shown by the outline or wax, after which the wax is entirely cleaned away and it is replaced on the inner cap. It is

held tightly in place and the hole and the entrance to the tube enlarged until the mandrel over which the tube was finished will enter easily. The entrance to the tube is now countersunk and the edges nicely rounded. The split pin is made and fitted, waxed to the floor, removed from the inner cap, invested and soldered, after which it is cleansed, replaced on the inner cap, and trimmed flush with it all around, except over the half-band, where it is left a little full (Fig. 494).

### PRECAUTIONARY MEASURES TO PREVENT BROKEN FACINGS OR CROWNS.

The making of the outer cap for this form of attachment requires the greatest care, as the slightest deviation in technic may result later in great annoyance to both the patient and dentist through a series of mishaps in the way of broken facings or crowns.



FIG. 495



FIG. 496



FIG. 497



FIG. 498

In almost every case where a patient appears with one of these facings in the anterior part of the mouth broken, if the bridge is removed and examined, it will be found that the under side of the floor of the outer cap shows a very small polished surface just at the labial side, at point *a* in Fig. 495 and Fig. 496. This shows that it was bearing heavily at the place so marked and touching nowhere else, thus bringing the entire strain of the force exerted in mastication on the facing at this point, with the inevitable result that the facing is broken, as there is no porcelain made which will withstand such a strain (Fig. 497).

This result may have been brought about by a slight deviation in the technic in any one of the several steps taken in the making of the outer cap. The first may have been in the soldering of the pin to the floor. In soldering, it must be remembered that the tendency of the molten solder is to flow into corners and angles, or between different pieces of metal which may be nearly, or quite, in contact with each other. In the drawings, which have been

purposely somewhat exaggerated for the sake of illustration, will be found the explanation of the cause of the larger part of the trouble from broken facings in the anterior part of the mouth.

In Fig. 498 is shown the floor with the pin in position, invested and ready for soldering. As already stated, the solder is placed on the labial side of the pin and resting against the floor at point *a*, Fig. 498. If a large amount of solder has been used at this point, what is the result? The piece is highly heated, the solder is melted and naturally seeks the smallest space in which to lodge. It is thus drawn from the labial to the lingual side of the pin, almost the entire bulk filling in the narrow angle between the floor and the pin (Fig. 498). The result is that there being so great a bulk, as the solder cools, it contracts quite a little, changing the normal plane of the floor (*a a*, Fig. 499), drawing it up on the lingual and consequently depressing it on the labial side (Fig. 499, *b b*), with the result that the floor will touch the floor of the inner cap at this point, the labial side, and at no other.




FIG. 499



FIG. 500



FIG. 501

It can readily be seen what would happen if it were allowed to remain in this condition, and the facing attached. The trouble would have been obviated in the first place if only just enough solder had been used to attach the pin to the floor.

The second step, where the trouble may have occurred, is in the soldering of the half-band to the floor. In this, as in the previous case, only a very small piece of solder should be used, only sufficient to attach the half-band to the floor, but not enough to extend to the pin, unless the pin has been cut close to the floor.

The pin, having been left long on the top of the floor and sloping well lingually, may come nearly in contact with the upper edge of the half-band. If a large amount of solder is used in soldering this half-band, the solder will flow in between the pin, and the floor of the cap (Fig. 500) and in cooling, as in the first step, contracts and changes the plane of the floor (Fig. 501).

If it is found that the labial side of the floor has been depressed, it should again be placed on the inner cap and the floor, from the

labial side of the split pin out, raised slightly, so as to be clear, before proceeding with the next operation.

The same thing may happen in the final soldering if the pin has been long, even if in the previous operations only a very small amount of solder has been used. The facings having been backed and the piece invested, the solder may bunch up and cool between the pin and the floor and so produce exactly the same results as in the previous cases.

The cap being completed, the pin should be cut off close to the floor of the cap before grinding the facing (Fig. 502). If this is done there will be no risk of any trouble in the final soldering of the piece.



FIG. 502



FIG. 503

It should be remembered that the whole trouble is brought about through the contraction of the solder on cooling, and the effect of this should be carefully studied, not only in this, but in other operations, as it is something that will have to be contended with in all of our prosthetic operations.

It is better that the floor of the outer cap should slightly clear the floor of the inner cap at the labial side, rather than to press heavily on it, because if the floors are not in actual contact at that point (Fig. 503), there will be little probability of the facing being broken, but if it rests heavily there, and at no other place, as in Fig. 497, one may count on the facings being broken about as fast as they can be put on.

Before grinding the crowns or facings to these half caps, they should always be examined to see that the two floors clear. They are put together and held to the light, looking mesially and distally, and if they are properly adjusted, one should be able to just see a little light between the two floors at the labial side.

When an accident of this kind occurs, and the floor is found to press heavily on the labial side, the bridge should be placed in the mouth and the outer floor lifted a little off from the inner cap, so that it will just clear it, by passing a thin instrument, like a knife blade, between the two floors and raising the labial side of the outer one very slightly. If this is done when the new facing has been replaced, there is little liability of its being fractured.

### INLAY ABUTMENTS.

The inlay abutment is another form of anchorage which is useful, especially for small bridges, although there are times when they may be indicated in quite extensive cases.

An inlay abutment consists of a carefully fitted inlay in the crown of a tooth, a molar, cuspid, upper central and at times a lower bicuspid, but very rarely or never in an upper bicuspid. An iridio-platinum tube passes through this inlay into the pulp chamber or the pulp canal. In this tube is fitted a split pin to which the bridge is attached or a cavity is made in the inlay and a second inlay with a split pin is fitted into this and the body of the bridge is connected to this inlay. The teeth in which these anchorages are used are in most cases non-vital, but many times in vital molars where there are large deep cavities, the inlay attachment can be used to advantage.

These attachments are frequently indicated in the anterior part of the mouth where one or more teeth are to be replaced, such as a missing lateral or central, or a lateral and central incisor, both on the same side of the mouth and at times even where the four incisors are missing. In the back of the mouth they are frequently indicated where a single bicuspid or molar, or a molar and bicuspid are missing, or at times, in the lower jaw, even the two bicuspids and molar. An inlay attachment can be used in the second molar, and in the cuspid where it is desired to preserve the crowns of these teeth for esthetic reasons. Frequently, where a molar crown is perfectly sound, but the tooth is perhaps somewhat ill-shaped, so that it would be almost impossible to prepare it and fit a band properly, it is better to use the inlay attachment.

**Inlays for Anterior Teeth.**—In the making of these attachments, those for the anterior part of the mouth, the upper centrals or cuspids will first be considered, the laterals and all of the lower incisors being too frail for such an anchorage.

The tooth having been devitalized, the apical third or half of the canal is carefully filled and the lingual surface of the crown cut away from the side to which the bridge is to be attached to about two-thirds of the distance across the crown, and extending down to the gingivæ, or near enough to it so that there will be room to allow of sufficient bulk to the inlay to give support to the bridge and at the same time afford a good occlusion (Fig. 504).



The cavity is shaped somewhat as shown in the illustrations (Figs. 504 and 505), being made non-retentive, and the enamel edges of the cavity should be beveled so as to give more perfect margins and extra support for the inlay, and also to minify any chance of fracture of the crown of the tooth. The canal is then enlarged for the reception of the tube. It should be noted that a larger tube can be used



FIG. 504



FIG. 505

in an inlay abutment than could be used where the tooth is cut beneath the gum labially, as when using a porcelain crown or a porcelain facing. The reason for this is that in the case of an inlay abutment when putting in the tube, starting as it does considerably above the gingival line, it is not necessary that it should go to a greater depth than about one-quarter or one-third the length of the root below the gingivæ, so that it occupies only the broadest and heaviest part of the root.

In the central incisor, a No. 5 tube can be used and at times even a No. 6. A No. 6 tube is generally indicated for the cuspids. The canal is enlarged somewhat lingually so as to give the tube a slope in that direction, which will allow plenty of metal between it and the labial side of the cavity and permit of its being cut away for the reception of the second inlay.

The cavity is moistened and the tube, with the mandrel in it, is placed in the root and pressed well lingually so that it clears the incisal edge of the tooth by a good margin (Fig. 506). The cavity is then filled with wax, the wax being flowed in hot so that it will pass around the tube and become well attached to it. The cavity should be well filled and the wax carved so as to reproduce the natural contour of the lingual surface of the tooth.



FIG. 506

It will be found on removing the inlay and replacing it again in the cavity that the shrinkage of the wax on cooling has opened the margins, especially at the gingival edge. The wax should be

trimmed a little so as to enlarge this space slightly, after which the inlay is replaced and fresh wax flowed in the crevice.

The wax should then be smoothed flush with the sides of the tooth and a little more wax flowed over the margins so as to leave something of a feather edge all around, and it is again removed from the tooth and prepared for casting.

The mandrel is grasped in the pin-vise and some of the wax carefully trimmed away from around the sides of the tube where the cavity will be made for the second inlay, thus roughly shaping it in the wax and saving considerable time in grinding the gold later after it has been cast, as shown in the illustration (Fig. 507), after which the mandrel is removed. This should be done very carefully so as not to mar or distort the inlay. The mandrel being held in the pin-vise, a sharp instrument is placed against the end of the tube as shown in Fig. 439, and it is in this manner forced off from the mandrel. In removing it, it is well to hold it over a napkin or some soft material, so that should it drop from the mandrel there would be no danger of marring the edges.




FIG. 507

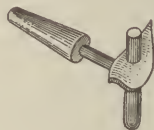


FIG. 508

The sprue wire is attached to the lingual side of the inlay and a little to one side of the tube, as shown in the illustration (Fig. 508). The lower end of the tube is held in the pin-vise and the tube carefully filled with asbestos paper or material of a similar nature, so that in casting there will be no possibility of any of the metal forcing its way into the tube. The inlay is then flaked and cast. For these inlays, the writer prefers Weinstein's Ney Ora A Casting Gold or pure gold, as with these, much more perfect margins can be secured than is possible with any other alloy. If they are carefully made, after setting, the gold inlay can be burnished and finished so as to entirely obliterate any line of cement.

The inlay having been cast, is taken from the investment, the asbestos paper removed from the tube and the whole placed in hydrofluoric acid to remove any traces of silica which may be clinging to its surface.

It is then thoroughly rinsed and the tube carefully cleansed and dried and the surplus tubing extending above the inlay cut away.

It is first placed in the mouth and roughly articulated, enough of the gold being cut away so as to just clear the occlusion, after which it is removed and the cavity is made for the second inlay. This is done before taking the final impression and articulation, as by making the cavity at this time it forms a positive seat so that after the plaster impression has been removed from the mouth, the inlay can be replaced in its proper position in the impression with perfect accuracy.

The cavity for the second inlay is shaped in the same manner as, and should follow the general outline of, the first inlay, allowing a sufficient margin of gold to remain at all points to give the required strength to the attachment (Fig. 509). The cavity is smoothed so that there will be no sharp edges which will scrape the plaster, but is not finally finished, after which the inlay is replaced in the mouth, and the impression and articulation taken. After the impression has been removed from the mouth, the inlay is carefully replaced in it, and great care should be exercised to be certain that it goes exactly into place.

It is then well fastened at two or three points at the margins with a little sticky wax, after which a very thin film of paraffin and wax is placed around the tube. The whole inlay is then given a thin coating of cacao-butter or oil and the impression having been varnished, the model is made and articulated in the same manner as for an ordinary bridge.



FIG. 509

After the model has been separated from the impression, the inlay is removed by heating it slightly and in this case it is better that the model should be thoroughly dried and hardened, especially around the tooth which receives the inlay. This can be done, after drying, by soaking it with thin sandarac varnish and again drying thoroughly.

The finishing touches are now given to the inlay, by replacing it on the articulated model and grinding a little wherever necessary. The cavity in the inlay can readily be changed to suit the existing conditions. It should then be made perfectly smooth and the constriction at the neck of the tube removed with the flame-shaped finishing bur (Fig. 448), so that the mandrel over which the tube was finished will enter freely. The entrance to the tube is rounded somewhat with the same bur.

The cavity can be smoothed ready for the pumice by using very fine carborundum stones, or dull finishing burs, those of the pear-

shape, or rose-burs, being indicated, and if they are used wet, they will finish it much more smoothly than if they are dry. A sharp bur will not finish the cavity nearly as well as will a dull one, and the writer when in need of a bur for finishing purposes and having only new ones at hand, makes it a custom to smooth them a little by running them over an Arkansas stone before using them on the inlay. After having been made perfectly smooth and symmetrical with the burs, the cavity is finished with pumice and rouge. This can best be done by using a wooden point in an engine port polisher and after roughening the point somewhat, wrapping a little cotton around it so that it will carry the smoothing and polishing powder.

**The Fitting of the Split Pin.**—The next step is to fit the split pin. The pin is made in the manner which will be described later, with the exception that it is made about twice the length of the tube, and the point of contact is also long, as shown in the illustration (Fig. 510), so that the point of union where the pin has been soldered will come, when it is finished, just below the floor of the cavity. It is carefully fitted to the tube and should fit it just about as easily as the pin should fit the tube for an anterior crown.



FIG. 510



FIG. 511

It is then annealed and placed in the tube and a mark made just at the entrance from the floor line at point *a*, Fig. 511. It is now removed and placed, the finished closed end first, in the pin-vise, carrying it in about one-thirty-second of an inch farther than the mark showing the floor line. The vise should be tightened firmly and the pin bent over by pressing it against the edge of the bench, or by catching the end in a pair of pliers.

It is bent in the direction of the split and in this case the split runs mesially and distally instead of bucco-lingually, but the reinforcement of the second inlay will counteract any danger to the pin from being so placed. The reason for doing this is that the pin bends better in this direction. If bent in the opposite direction, unless it be soldered well beneath the floor of the inlay, the union might be broken at the bend, and the two halves sliding one upon

the other, the outer half being drawn up, distort the pin and render it worthless.

After bending it part way, it is best to re-anneal it before the bending is finished. The pin is bent nearly at right angles or even farther, so that it will follow the general direction of the occlusal plane (Fig. 512).

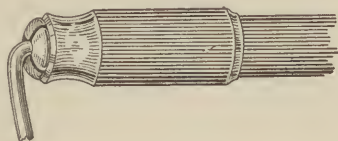


FIG. 512

The pin, having been bent to the desired shape, is filed open at the end, care being taken to file it in the direction of the split, and the end is nicely rounded. Every thing is now ready for the making of the second inlay.

**The Second Inlay.**—The second inlay should be made of a harder metal than the first, such as coin gold, or some alloy equally hard and which fuses at about the same temperature as does the coin gold.

The second inlay can be made by lubricating the cavity in the first inlay, inserting the pin in the tube, and building it up with wax and casting, but this will not make as perfect an inlay as can be made in the manner next to be described, but it can be used if desired.

The method which the writer prefers in making the second inlay is to fit a pure gold matrix into the cavity and afterward fill the matrix with coin. The inlay is first embedded in some hard modeling composition which is freely cleared from the edges of the cavity and allowed to become quite cold and hard before working on it. The pure gold should be of about No. 36-gauge, and great care must be used in pressing and burnishing to have the margins as nearly perfect as possible. Small steel burnishers or orangewood sticks are useful in fitting the matrix. It should be annealed frequently during the operation and worked in very slowly, as in a cavity of this kind, if the metal becomes the least bit hard from burnishing, it is easily cracked.

After the matrix has been fitted in, a hole is made over the entrance to the tube, so that the pin will pass through the matrix and enter the tube freely. This having been done, the pin and



matrix are removed, and the cavity and entrance to the tube are given a very light coating of cacao-butter. The matrix is then annealed and it and the pin placed in position, and the body of the matrix filled with a hard, sticky wax. The surplus pure gold extending beyond the edge of the cavity is also partially covered with the wax, leaving enough of it exposed to engage in the investment. The wax should be run in hot so that it will pass all around and under the pin, and after it has been chilled it should be pressed tightly down around the pin and over the margins with a burnisher, forcing the pure gold matrix in close contact with the edges of the cavity. It is then removed and is ready for investment.

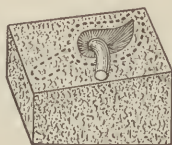


FIG. 513

It is invested as shown in Fig. 513, and only a sufficient amount of the investment used to hold the parts in position. The overlapping edges of the matrix should be partly covered, but the investment should not be carried quite to the cavity margins. It is then heated-up to a red heat.

A button of coin gold of sufficient size to fill the matrix is then made and laid over the pin, the whole heated-up well, and the button melted into the matrix so that it will fill it a little more than flush, the same as in filling a cusp matrix, after which the inlay is removed from the investment, well cleansed and placed for a short time in hydrofluoric acid.

It is then washed and dried, replaced in the first inlay and finished. It should be ground perfectly flush with the margins and from the second inlay to the outer edges until it is finished and properly contoured. It should be remembered that the cutting should be from the center outward (Fig. 514). If it were ground in the opposite direction, the gold of the outer inlay would be burnished over the margins of the second inlay and so lock it that it would be impossible to separate them. It is now ready for attachment to the bridge.



FIG. 514

This work is done on the model and after all of the parts of the bridge are assembled they are waxed together, care being taken to

wax it thoroughly to the extending pin and to the face of the inlay next to the bridge. The piece is chilled and the second inlay removed from the original by grasping the tube and pressing against the underside of the pin with a fine-pointed instrument or the edge of a knife blade exercising great care not to use force at any other point, otherwise the relation of the bridge and inlay might be disturbed.

Before investing for the final soldering, the underside, or base of the inlay, which rests in the cavity of the first inlay, should be wiped off with alcohol, to free it from grease, and then coated with anti-flux (common whiting will answer for this purpose), which will prevent the solder from flowing over the margins and destroying the fit of the inlay. In finishing the piece, great care should be exercised not to polish the pin or the base of the inlay. An old tube placed over the pin during the finishing of the bridge will prevent any injury to it.



FIG. 515



FIG. 516



FIG. 517

**Inlays for Molars.**—The cavity for the inlay for a molar should be large and take in a third or a half of the occlusal surface (Fig. 515), or if there are fillings or decay in the fissures, it should be extended so as to include these, reaching down on the side to which the bridge is to be attached to near the gingivæ, as shown in Figs. 516 and 517.

The cavity is made non-retentive, and the enamel edges should be beveled all around. If there should be any undercuts, they are filled in temporarily with gutta percha or cement.

The tube for the molar should extend to the floor of the pulp chamber and occasionally it may be necessary to deepen it on the mesial side, letting it drop into the root a short distance, as in the case of a telescope crown with a tube and split pin (Fig. 430).

It is desirable in these cases that pure gold should be used next to the tooth structure, as in grinding and finishing the inlay in the cavity, the pure gold can be burnished over the edges of the enamel, thus securing much more perfect margins than could be done if a

hard gold was used. It very often happens that the lower molars have tilted forward, so that the only point of contact with the occluding teeth is the posterior buccal cusp (Fig. 518). Where this is the case, practically the entire occlusal surface must be built up so that a perfect articulation can be obtained. Here it is necessary to grind a little of the enamel away from the upper sides of the tooth, cutting straight down from the point where it breaks contact with the occluding teeth, trimming just enough to even off the enamel and beveling it outward and downward (Figs. 519 and 520). A good way to prepare these inlays is by the indirect method and this is the one which the writer prefers. If the cavity is quite deep, it is not necessary that the matrix should go all the way to the bottom, especially if the root has been opened so that the tube can be dropped for a little distance into it. This opening can be filled with gutta percha which is removed after the matrix has been made.



FIG. 518



FIG. 519



FIG. 520

These preliminary steps having been completed, an accurate impression of the cavity and the tooth is obtained. An amalgam die is made from this and it should be made of *good* amalgam, the mercury being well expressed, and packed with extreme care so as to secure a perfect die, an exact reproduction of the tooth and cavity.

Too often there is a great deal of carelessness shown regarding the kind of amalgam used for this work. Anything is used so long as it is cheap, little or no thought being given as to character or quality.

The quality of the amalgam used for this purpose should be such as would recommend it for any first-class filling in the mouth.

By using more than one die or a block with a depression in it, a matrix of 28-gauge pure gold might be fitted to the cavity by frequent cleansing and annealing, but it is hard to do with metal of such thickness and the easier way is by casting.

A matrix of pure gold is prepared and it is into this matrix that the main body of the inlay is made. The matrix should be from one-sixty-fourth to one-thirty-second of an inch in thickness, depending upon the size of the cavity. The die is lubricated and a film of wax of the desired thickness is put over the inside of the

cavity and well over the margins all around. If it is thicker in any one place than it should be, it can be scraped away with a spoon excavator. If removed from the die and held to the light, it can readily be seen where to trim, as the thicker places will show deeper in color. It is desirable that it should be of nearly a uniform thickness throughout as, if it is, it will cast better with less liability of becoming distorted. The wax on the margins can be a little thicker than inside the cavity.

The wax matrix having been completed, a hole is cut in the bottom over the point where the tube is to rest, about three-thirty-seconds of an inch in diameter (Fig. 521). The wax is now pressed carefully around the margins, and if it is convenient it can be tried in the tooth to determine if it is all right, but if the technic has been carefully followed out, it is not necessary that this should be done. The sprue former is attached to the margin of the matrix at the distal side (Fig. 517). It is then chilled and removed (Fig. 522) and the under side carefully wiped with alcohol. The sprue



FIG. 521




FIG. 522

former is then set in the flask base for investing. It is necessary to be painstaking in investing, as the matrix is frail, but with a little care, there is no danger of distortion.

It is cast with pure gold and after removing from the flask, is washed and put in hydrofluoric acid. It is then thoroughly brushed and rinsed and tried in the cavity in the tooth and if careful attention has been paid to the details throughout, it should fit the cavity perfectly. It is well, however, in any case, to tap it down all around, using a cottonwood stick, a light mallet and a light blow. If the margins of the matrix are so thick as to interfere with the occlusion, they are ground until they do not quite touch, just clearing the least bit, but left extending a very little beyond the outside wall of the enamel. If there is an anterior abutment, the inner cap is put in place and a wax or modeling composition bite is taken. Some tough wax, pink paraffin and wax is good, is then pressed through the hole in the base of the matrix, holding the matrix in place while doing so, to the bottom of the cavity made to receive the tube, filling

it full, and over the floor of the matrix so that it will be firmly attached (Fig. 523), after which a plaster impression is taken, using a tray for the purpose. After the impression has been removed from the mouth, it is placed on a pad of blotting paper, the matrix



FIG. 523

is taken from the tooth, care being used so as not to distort the wax, and the abutment cap from the anterior stump. After the impression has dried out for a few minutes, if broken, it is assembled and waxed together and the abutment cap and matrix put in place, most careful attention being given so as to be sure that they are perfectly seated. The cap is waxed around the outside edge of the band and on the inside enough so that it will draw and a thin film on the out-

side of the tube. The matrix is tacked at two or three points so that it cannot shift its position. The impression is then varnished and the under side of the matrix given a very light coating of cacao-butter or oil.

The model is now made and after it has hardened and been separated, the wax bite is carefully adjusted and the articulation made. After these have been separated, the anterior abutment cap is removed by heating slightly and the matrix also by the same means, but the latter must be moved very carefully so as to avoid splintering or breaking the model, as the walls of the plaster tooth are rather frail and will break easily before they have been hardened. After it has been removed, the wax which had been forced through the hole in the base is taken away leaving a perfect reproduction of the cavity in which the tube is to rest. If, in removing the cap or matrix, any wax has been melted into the plaster, it should be washed away with a thin stream of boiling water, after which the model is thoroughly dried out with a gentle heat. When this has been done and the model has become cold, it is soaked in dilute sandarac varnish or given several coats of it, especially the part on which the work is to be done, and again placed over a mild heat until it is perfectly dry and hard.

The anterior abutment cap is now put on the model and if it has a tube, a mandrel is inserted. The lower part of the cavity in the molar stump from which the wax was removed is coated very lightly with cacao-butter or oil, as is also the inside of the matrix so that the wax will draw easily. The tube, with the mandrel in place, is now passed through the hole in the floor of the matrix, the closed end resting in the bottom of the cavity made to receive it. It is



then tested to see if the position of the hole in the matrix will permit of its being made parallel with the tube in the anterior abutment (Fig. 524). If it does not, the matrix is removed, wiped dry, and the hole enlarged in any desired direction. It is then lubricated lightly again, replaced in the cavity and the tube made parallel with the anterior tube. It is held in its proper position by the mandrel, and the inside of the matrix filled with inlay wax, flowing in hot with a spatula so that it will become attached to the tube firmly. The inlay wax is not sticky and it is not a bad plan to flow a little ring of sticky wax around the tube, just above the floor, before putting it in place. The inlay wax will adhere firmly to the sticky wax. The wax is built up high enough in the body of the cavity and over the occlusal margins of the matrix to allow for grinding and articulating.



FIG. 524



FIG. 525

The wax is now cut away from around the tube and at the mesial side, roughly shaping the cavity for the final inlay. The mandrel is now removed from the tube as in Fig. 439, and the tube carefully packed with asbestos paper. The sprue former is attached to the mesial side and directed a little to one side of the tube as in Fig. 525.

The wax inlay is now removed from the pure gold matrix and flaked and cast with coin gold. After it has been removed from the investment, the asbestos paper is entirely removed from the tube and the inlay placed in hydrofluoric acid for a time, and after washing it well and drying, it is examined carefully to see if it is perfect. If there is any roughness on the surface caused by minute

bubbles in the investment, it is smoothed off and again placed in the matrix to see if it fits as it should. If so, it is ready for soldering. The under side of the matrix is covered with whiting or some other anti-flux so that no solder will flow over it and destroy the fit in the tooth. The under side of the inlay and the inside of the matrix are lightly fluxed and held together with a pair of pliers while being heated over a Bunsen flame or with a blowpipe flame until the bubbling of the flux ceases.

It is then soldered with 21-carat solder, the solder being placed at some point between the pure gold matrix and the coin inlay as at *a* in Fig. 526, and drawn through entirely from that point until the matrix and inlay are perfectly united.

After soldering, cleansing, and drying, it is tried on the die and if it is all right the cavity is prepared for the final inlay. The tube is cut off close to the floor and the cavity and the inlay is carefully articulated. The cavity is cut to the desired depth, making it larger than the tube and sloping the sides inward so that it will be slightly wedge-shaped, being a little larger at the top. The groove leading to the tube is also enlarged and deepened, but not so much as the cavity around the tube, flaring it outward at the mesial end, so as to give a broad surface where it is to be attached to the body of the bridge.

The entrance of the tube is enlarged, so that the mandrel over which it was finished will enter freely, countersunk and the edge rounded. The entire cavity is now finished and polished.




FIG. 526



FIG. 527



FIG. 528



FIG. 529

When the inlay is finished, looking down on the occlusal surface, the cavity presents something the appearance of a key-hole (Figs. 527 and 528). A vertical section through the center, mesially and distally would show as in Fig. 529. The shaping of the cavity in this manner aids in the retention of, and also gives greater stability to, the bridge.

It is now embedded in hard modeling compound which is trimmed so that the margins of the cavity are perfectly clear. The split pin is fitted to the tube and bent so as to follow the curve of the floor

of the cavity and the closed end opened to the split. The matrix of No. 36-gauge pure gold is carefully fitted into the cavity, extending for a little distance over the margins all around. When it is perfectly fitted at every part, the hole is made in the floor for the pin. The entrance to the tube, and the floor around it are now lightly lubricated, and the matrix well annealed, replaced in the cavity, the split pin inserted in the tube and the cavity filled with hard, sticky wax. After the wax has chilled, it is packed tightly into the cavity and around and over the margins with a strong burnisher.

It is removed from the original inlay, invested the same as the one for the anterior abutment, and filled with coin gold, making it a little flush and carrying the gold a little over the margins.

After removing from the investment, it is pickled in acid, washed and dried. In putting it back in the first inlay, it must be certain that it goes all the way down into place. It is then placed on the model and finished, grinding it down flush with the margins of the cavity of the original inlay, being careful to grind from the center outward toward the margins, and at the same time it is carefully articulated and afterward carved. The inlays are then separated and cleansed so as to be sure that there is no dust or grindings between them. They are put together and separated several times to see that they work smoothly, after which they are put on the model and the body of the bridge completed and connected with the second inlay the same as the inlay in the anterior part of the mouth.

Before cementing the inlay in place, any gutta percha or cement which has been placed in the tooth to obliterate undercuts, should be removed in order that the inlay may become firmly attached with cement.

It is an advantage to have the bridge worn for from twenty-four to forty-eight hours without cementing in order to allow for the settling of the piece, and for the abutments to accommodate themselves to it. Where there is an inlay abutment such as the one just described, the inlay is always set separately, as there is only one way in which an inlay can go into place and it must go to its proper place or it will stand away from the margins of the cavity at one point or another with the result that the cement will wash out and decay take place. If there has been a slight shifting of the tooth during the construction of the bridge, the wearing of it without cementing will bring it back to its normal position in a very short time.

After it has been carefully articulated, finished, except the edges overlapping the enamel wall, and cemented, it is best to leave the final finishing of the outer margins to a subsequent sitting so that the cement will have become thoroughly hardened.

The edges of the inlay are ground with fine stones flush with the face of the enamel, grinding from the gold down toward the cavity edges, thus burnishing the pure gold of the matrix over the line of cement and securing more perfect margins.

**Inlays by the Matrix Method.**—In the absence of casting machines, inlays can be made by the matrix method so that *they will be* as perfect as those made by casting. The cavities are prepared in the manner already described. A matrix of pure gold, as heavy as can be worked into the cavity, is burnished into place, or a very thin platinum matrix may be used, burnishing it in the same manner as for a porcelain inlay. The matrix must be carried over the cavity margins and made as perfect as possible (Fig. 530).



FIG. 530

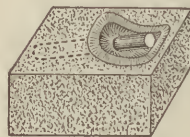


FIG. 531

It is then removed and annealed and put back in the tooth, the tube placed in position (Fig. 530) and waxed well with hard sticky wax, filling the matrix to the cavity margins. When the wax has cooled, it is packed tightly in place around the margins of the cavity with a burnisher so as to press the matrix in perfect contact. It is then removed and the tube filled with asbestos paper or fiber, and the whole invested (Fig. 531).

If a pure gold matrix has been used, it should be filled with coin gold, in the same manner as for the second inlay previously mentioned, but if the matrix has been made of platinum, it can be filled with pure gold. After cleansing, it is dried out and the cavity prepared for the second inlay, the technic of which in this case and in the making of the second inlay is exactly the same as has already been described, where the original inlay had been cast around the tube.

In very small pieces, or in the anterior part of the mouth, where

the teeth are small, the second inlay may be dispensed with by fitting and bending the pin so that it will rest in the bottom of a groove which has been made to receive it (Fig. 532). The groove should be made the size of the split pin which is to be used and after it is completed, the extending end of the pin is soldered into the bridge. This will answer the purpose and do as well in carrying a small bridge either in the anterior or posterior part of the mouth as if there were a second inlay, but it does not make quite as clean a piece, as there will be a groove on either side of the pin as it rests



FIG. 532



FIG. 533

in the inlay. Neither is it quite as strong, and where strength and rigidity are desired the double inlay should be used.

Inlay abutments may sometimes be used in the lower bicuspsids, especially if they are made so as to restore a part or the whole of the occlusal surface of the tooth, in which case the tooth is beveled from the inside outward and downward toward the gum, as in Fig. 533, and, as will be seen, there is practically no possibility of the tooth being fractured by the pressure, the tendency being to minify the chance of fracture and prevent the sides of the tooth from spreading. In the upper bicuspsids, however, the inlay is very rarely indicated, as the crowns of these teeth are never very strong and very little force would be required to bring about their fracture.

#### REVERSAL OF ORDINARY METHOD OF USING THE TUBE AND SPLIT PIN.

There are cases where the ordinary way of using the tube in the root with the split pin attached to the bridge is not practical and it is necessary to devise some other method. In some cases a complete reversal of this type of attachment is indicated, using the split pin on the inner cap attached to the root, while the tube is embedded in the bridge. There are times where the roots stand



on such divergent angles that it is not possible to insert tubes to a sufficient depth to give retention and have them parallel, and it is in such cases that the reversal of order is more frequently indicated. Take for example two cuspid teeth in the lower jaw, standing as represented in Fig. 534.

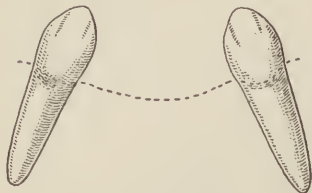


FIG. 534



FIG. 535

In a case of this description, the roots are prepared in the same manner as when they stand in a normal position, with the exception that the mesial or approximal sides are cut well away, as in Fig. 535, in order that the bands may be adjusted with their sides nearly parallel to each other. The labial and lingual sides are trimmed, but it will not be necessary to trim the distal sides, as the inclination of the roots is such that the band will hug tightly at these points.

The bands are then fitted, removed, and the roots cut down to their proper level. The bands are then replaced on the roots and scribed around on the inside at the top of the stumps, and the canals enlarged to receive a strong post. The articulation is then taken after which posts are placed in the canals, extending well above the bands and a plaster impression taken with bands and posts in position as in Fig. 536.

A model is then made and the work from here on is done entirely on this. The bands are cut flush with the top of the stump and the floor of No. 28-gauge coin gold is sweated to them.

The pins are made from half round platinized gold wire, the same as the ordinary split pin, and being soldered for about three-eighths to one-half an inch, leaving them open for about one-quarter of an inch from the upper, or closed end. They are then fitted to the tubes which have previously been made and should be about a No. 4 or a No. 5, as a general thing, but at times it may be necessary to make them smaller.

Openings are then made through the floors of the caps to fit the

pins tightly and the floors are polished. The upper or split ends of the pins are then grasped in the pin-vise so that they are clutched just below the point where they are soldered and are bent so that the bend will come just beneath the floor and when they pass through the floor they will stand parallel with each other (Fig. 537).



FIG. 536

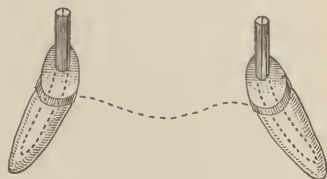


FIG. 537

A little wax is placed around the pins where they pass through the floors so that no solder will draw through at this point, the wax being very hot and afterward every particle of it should be scraped from around the pin and off the floor. A little impression is then taken, in investment material, of each of the caps separately with the pins in place. The caps and pins will probably come away with the impressions, but if they do not, they are removed from the stumps and carefully replaced in them. In removing the impressions from the mouth, they should be carried a little mesially so as to follow the direction of the pins in the roots. The investments are dried out, the pins fluxed on the inside of the caps where they pass through the floors and they are soldered to the floors from the underside with 20-carat solder, as shown in Fig. 538.

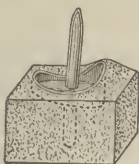


FIG. 538



FIG. 539



FIG. 540

It is a good plan to take a very narrow strip of solder and bend it in the form of a ring which will just pass over the pin. First put a little liquid flux around the pin where it passes through the floor, and then put this ring on the pin and let it slide down to the floor of the cap. This will remain in place and make the soldering easier. The investment is well heated-up and the flame kept away from the

pin as much as possible until the floor of the cap is red. The flame is then thrown on the pin close to the floor and the solder will flow easily and unite them perfectly.

They are thus soldered from the inside, so that no solder will flow on the outside of the floors of the caps or around the pins and thus interfere with the fit of the tubes and outer caps.

**Making the Outer Cap.**—In making an outer cap for this style of abutment, a floor of No. 28-gauge coin gold is used and the hole is made so as to fit the pin easily, but it must not be loose. It is then cut flush with the sides of the inner cap and the half-band fitted, waxed to it and soldered as in the making of a cap of the regular type, after which it is replaced on the inner cap (Fig. 539).

The tube, which should be the exact length of the pin, less the thickness of the outer floor, and closed at the upper end, is next placed over the pin and is made so that it will set down closely to the floor all around and is heavily waxed to it with a hard tough wax. It is then removed, a little investing material carried into the tube and a small iron wire inserted, letting it extend about one-quarter of an inch below the floor, as in Fig. 540. This will hold the tube in place so that it will be impossible for it to shift its position and it is embedded in the investment (Fig. 541). The tube is well soldered to the floor with 21-carat solder.

After cleansing and drying the facing is ground to the floor of this cap (Fig. 542) and when the bridge is invested for soldering, a small wire is inserted into the tube and embedded in the investment, the same as when attaching it to the floor, to prevent it from shifting.



FIG. 541



FIG. 542



FIG. 543

In soldering this crown, it is necessary that the tube should be completely embedded in and entirely covered with the solder which should be of 20 carat. It is rarely that the proper lingual contour of a cuspid crown of this type can be obtained as the tube is of such bulk and must have sufficient length to give it retention, so that the crown will necessarily be bulky on the lingual side (Fig. 543), often presenting something of the appearance of a lower first bicuspid.

If an all porcelain crown is to be used, the pin should come up through the center of the cap and the tube of the outer cap serve as a post for the retention of the crown, the hole in the base of which

is enlarged sufficiently to allow it to go over the tube. The crown is ground and based with pure gold as already described, the tube passing through the base and into the crown. It is then waxed, the crown removed and the cap and base invested, a wire and some investment being carried into the tube as before, and soldered from the lingual side.

These crowns can often be used in any of the teeth anterior to the molars, except the upper laterals and lower incisors, and frequently on the molars and bicuspid, and form practically as good an anchorage as a crown of the regular type, but as they are more difficult to make they are not used except where especially indicated.

In cementing these caps, it is not possible to cement them in the way in which the caps of removable bridges are ordinarily cemented, as the inclination of the pins is such that they could not enter the roots. In this type it will be necessary to set the crowns separately, using only as much cement as is required to set them properly and then placing the bridge over them immediately, before the cement has had time to set, and pressing them firmly in place, thus insuring their being perfectly seated in their proper position. The outer caps should first be coated with cacao-butter so that if a little of the cement should get between the outer and inner caps, they could be readily separated.

#### BRIDGES CARRYING TWO OR MORE DUMMIES, WITH BUT A SINGLE RETAINING ABUTMENT.

There are many times where a single tooth or root serving as a retaining abutment will, with the assistance of spurs, carry a bridge with two or three dummies with perfect safety and satisfaction, especially in the lower jaw and often in the upper. A condition frequently met with in the lower jaw and to which this kind of a bridge is applicable, is, first, where the first bicuspid and first molar in the lower jaw are missing (Fig. 544), and second, where the two



FIG. 544

bicuspid and second molar are gone, the first and third molars being in place. In either of these cases, if the remaining teeth are in good condition, a bridge with but a single retaining abutment is indicated. In the first instance, the second bicuspid would be the principal abutment and the attachment may consist of a telescope

crown in combination with a tube and split-pin, or the tooth may be cut off to the gum line and an anterior attachment, with a tube and a split pin, for a porcelain-faced crown, or a porcelain crown may be used on it, the latter preferably.

In the second, a telescope crown in combination with a tube and split pin on the first molar would be the main abutment.

If fixed bridges are to be supplied, where the two bicuspids are missing, a shell crown would be used on the molar. Where the first bicupid and first molar are gone, a shell crown or a Richmond crown on the bicupid. If a telescope crown with tube and split pin is to be used, the band is made and carefully fitted, the stump is opened up for the tube and a modeling composition or wax bite taken with the band in place. The distal side of the cuspid is notched or grooved where it is intended that the spur should rest.

It is not necessary to mark the molar, as the spur will rest in an inlay in the anterior part of the fissure. A wire of a diameter a little greater than the outside of the tube which is to be used and about three-sixteenths or one-quarter of an inch longer is placed in the stump, roughly paralleled to the band and held in place with a little soft wax. The impression is then taken in plaster using a small tray and including several of the adjoining teeth. If a porcelain or a porcelain-faced crown is to be used, the cap with the tube soldered into it is completed and put in position on the stump, before the impression is taken.

The pin and possibly the band or cap may come away with the impression. If not they are removed from the stumps and replaced in it and properly waxed, the impression varnished and the model and articulation prepared and hardened and it is ready for the making of the bridge.

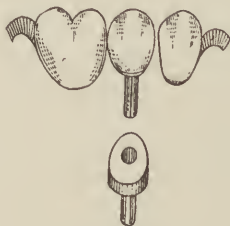


FIG. 545

If a telescope crown with tube and split pin is used, this is completed and articulated. If a porcelain crown, the cap, half-band and pin are made, the crown ground, the gold base made and sol-



dered and the crown articulated and finished, but not cemented. In this case, porcelain crowns would also be used for the dummies (Fig. 545).

### **PORCELAIN CROWNS WITH SOLDERED BASES FOR MOLAR ABUTMENTS IN REMOVABLE BRIDGE-WORK.**

Where it is undesirable to use the gold telescope crowns as anchorages in the back of the mouth, or where the crowns have broken away nearly to the gum line, a removable porcelain crown with a soldered base can be used. It is more difficult and requires much more time in constructing than does the telescope crown and it is seldom indicated posterior to the first molar.

The work of preparing the stump, making and fitting the band, facing the root and cutting down and filing the band is done in exactly the same manner as described under the sub-heading of "Fixed Porcelain Crowns with Soldered Bases for Molars," page 210 and the bulk of this description can be applied to the removable crown.

In enlarging the canals for the pins for retention, the one most suitable, which can be determined by the roentgen-ray, is enlarged to receive a pin of a diameter somewhat greater than that of the tube that is to be used and to a depth of about three-sixteenths of an inch. It is made as nearly parallel with the mandrel in the anterior abutment as possible. The band is now put on the stump, the two smaller pins and the large one are placed in the enlarged canals and held in position with a little soft wax. The anterior abutment cap being in place, an impression is taken including this and the molar. When it has been removed from the mouth, the pins will probably come away with it, the cap and molar band are replaced in the impression, waxed in the manner already described and the model prepared.

The floor of 28-gauge coin gold is fitted and sweated to it and trimmed, leaving it extending beyond the band on all sides as for the anterior crowns (Fig. 282). The points at which the holes for the pins and the tube are to be made, are located as shown in Fig. 314. The holes are made large so that the solder will draw through a little. The model is then oiled, the cap put in place and the pins put in place and waxed. The mandrel is placed in the tube of the anterior abutment and the tube for the molar with the mandrel in, is put in the molar, resting in the bottom of the cavity and care-

fully paralleled with the mandrel in the anterior abutment and waxed heavily to the floor, letting the wax run through a little. It is now removed, the mandrel taken from the tube as shown in Fig. 439, invested and the tubes and pins soldered to the floor with 21-carat solder. The investment is then broken away from the sides and the band freely exposed all around and the band covered with the same solder, rounding it up flush with the overhanging edge of the floor (Fig. 476). It is then finished, beveling it outward and downward on the lingual, mesial and distal sides as in Fig. 477. The surplus metal of the tube and pins is cut away, the floor finished perfectly smooth with a very fine file and the entrance to the tube slightly countersunk (Fig. 478). The outer or half cap is made as described under the heading "Making Half Cap," page 287. From this on the technic is the same as for the filed molar crown.

The crown is built up and ground as shown in Fig. 315, the only difference being that in this case on the mesial side to which the bridge is to be attached, the bevel is deepened and extends higher up than it does in a fixed crown, to give a strong attachment for the body of the bridge (Fig. 546). The holes are then made in the base of the crown, the pure gold base made, the pins fitted in, waxed, invested and soldered with a small piece of coin gold and after it has been cleansed it is waxed, invested, and soldered the same as was the single crown, flushing the base all around.



FIG. 546

It very rarely happens that the condition or inclination of a molar root is such that it is not possible to use a tube in the root. Where this does happen, it will necessitate a reversal of the ordinary method of using the tube and split pin.

The stump is prepared and the cap with the retaining pins are made exactly the same as for the single molar crown, except the floor which is of 28-gauge coin gold.

In a crown made in this manner, the tube can be placed as desired, and where the bite is close, it should be put where the porcelain is thickest. The tube is made of the exact length needed and the split pin a little longer and opened at the end and rounded. A hole is made in the floor where the pin is to go and the pin should fit very tightly.

The opened end of the pin is now pushed all the way to the end of the tube and the soldered end is forced through the hole in the floor of the cap until the lower edge of the tube is in contact with the floor. It is then carefully paralleled to the mandrel in the ante-

rior abutment, making sure that the tube is in close contact. The pin should extend about one-sixteenth of an inch or a little more, beneath the floor of the cap and the plaster can be cut away to receive it. The cap is now removed from the model, the pin waxed well to the floor of the cap on the under side, leaving enough of the end exposed so that it may be grasped with a pair of pliers and the tube removed without changing the relation of the pin and cap. It is then invested, and soldered from the under side as described, and shown in Fig. 538. The surplus pin and the excess solder on the under side of the cap is cut away nearly to the floor but not quite, leaving it thick enough to give ample strength.

When the crown is set, the stump at that place is ground to allow for this extra thickness of metal.

The tube is now put on the split pin and the floor of the outer cap, 28-gauge coin gold is prepared. The hole is made and should be large enough so that it will just slide over the tube easily. It is then trimmed flush with the sides of the inner cap, the half-band fitted and waxed to it, and it is removed, invested and soldered with 21-carat solder. After it has been cleaned, it is again placed on the inner cap over the tube and the tube waxed strongly to it. It is then removed, a wire with some investment is pushed into the tube (Fig. 540) and it is invested as in Fig. 541 and soldered heavily with 21-carat solder.

The caps are put together, replaced on the model and the crown completed in the same way as the one previously described.

The hole in the crown is made large enough to go over the tube and if the crown is short, or the tube is near the mesial or distal side of the cap, a hole for another pin should be made at the opposite side under one of the cusps. The base of the crown is beveled all around and the mesial side deepened as in Fig. 546. The pure gold base is made and the pin going in the hole opposite the one for the tube is inserted through the gold base and soldered to it with coin gold. The crown is then replaced in the base and in position on the model and waxed, invested and soldered.

#### OTHER ATTACHMENTS FOR REMOVABLE BRIDGE-WORK.

There are a number of attachments for removable bridge-work on the market, nearly all of them being similar in type and of greater or less value. The following are among the best.

**McCollum Attachment.**—The *plain* type of the McCollum Attachment (Figs. 547–550) is of a general T-shape as illustrated. It is provided with a cleft at right angles to its transverse portion for adjustment. The male part is made of high-fusing platinized gold, the female of platinum in the form of a slotted, seamless tube.



FIG. 547



FIG. 548

The *Stress-breaker* extension type has a shank formed of a doubled-over piece of metal, the leaves of which terminate in the two halves of the slide member of the attachment. The split *s* is left for the purpose of expanding the attachment to take up wear. The tube *t* fits over the slide member and is to be soldered to the abutment. The stress breaker box *b* fits loosely over the shank. The

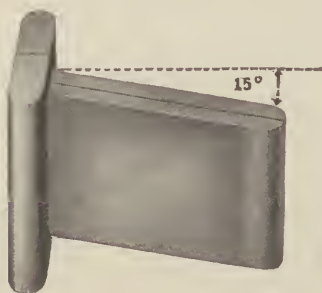


FIG. 549



FIG. 550

denture is to be cast around it, a hole being drilled and threaded piercing the lingual or palatal wall of the box. A set screw is fitted to this hole and rests against the shank of the attachment, holding it in place. It will be seen that in addition to forming a flexible connection between denture and attachment, this construction

permits of easy replacement in the event of breakage. All that is necessary in such a case is to release the set screw's retention of the attachment and to insert a new one.

**Forms 2 and 3 McCollum Attachment.**—To add to the possibilities of adaptation, particularly in close bite cases, the attachment is also made with the shank offset instead of at right angles to the slide member. No. 2 form carries an extension at a 15° degree angle, Fig. 549; No. 3 at a 30° angle, Fig. 550.



FIG. 551



FIG. 552

**Stern Attachment.**—The Stern adjustable attachment (Figs. 551 and 552) consists of a pair of transverse wings joined to a solid shank. The wings are doubled over, leaving a space in the center which is designed to accommodate a round rod (a common steel

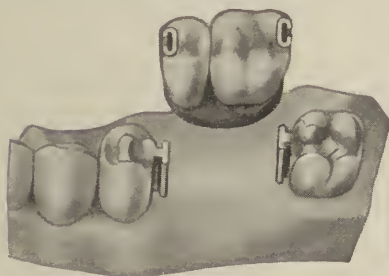


FIG. 553



FIG. 554

needle is most satisfactory) which is inserted for the purpose of increasing the tension on the wings of the attachment when adjustment becomes necessary. In this manner the adjustment is made with precision and without altering the fit. Various sizes are provided to accommodate different circumstances,



**The Berry Attachment.**—The Berry attachment here shown (Figs. 553 and 554) is applicable to a great variety of partial dentures. It is substantially constructed of hard, wear-resisting, gold, clasp metal and can be adjusted to take up wear by closing the tubular portion slightly.

The post or male part is designed to be soldered to a crown or inlay abutment, the tube to be secured to the denture.

### SUPPORTING ABUTMENTS.

The anchorages so far described have been retaining abutments and the supporting abutments will now be considered. As previously stated, the supporting abutment gives support against vertical and lateral stress but has nothing to do with the retention of the bridge in place in the mouth.

Supporting abutments may be in the form of gold fillings or of inlays, which are cupped, grooved or countersunk to receive a lug or spur. A hooked spur of platinized gold or iridio-platinum resting in a countersunk gold filling or an inlay forms an excellent support for one end of a bridge. They are especially indicated in the lower jaw, where they will safely support one end of a bridge consisting of two or three or even more teeth and having but a single retaining abutment.

In the upper jaw, with a crown carrying a single dummy, the other end may be supported by a spur in countersunk filling or an inlay. They are often useful, too, in giving extra stability to a larger bridge which has two or more retaining abutments, but which may require some additional support.

**Gold Fillings.**—Where a spur is to rest in a filling in any of the anterior teeth, either upper or lower, the cavity is made in the palatal or lingual side of the tooth and also extending for a distance over the side next to the bridge, as in Fig. 555. Where the bite does not interfere, the cavity is made just at the basilar ridge where the enamel is very thick, and should be of good size, approximately about one-eighth of an inch in diameter.

The cavity should be started with a small carborundum wheel, plenty of water being used, to cut through the enamel and give the general outline to it, before putting on the rubber dam. The rubber dam having been adjusted, the cavity is deepened with burs as much as possible without endangering the pulp. The cavity is well undercut and a filling of hard gold, thoroughly con-

densified, is inserted. It is made large enough so that the contour of the tooth is somewhat exaggerated, as in Fig. 556, but not enough to interfere with the articulation.

The filling is then polished and a hole drilled in the center of it on the palatal side to within a short distance of the bottom of the cavity, the base of the hole being shaped with a bud-shaped bur about the size of the No. 14- to 16-gauge wire of which the spur will be made. A groove of the same size is then cut from this opening to the distal side of the filling, care being taken to allow a strong body of gold to remain underneath and around it so as not weaken the filling (Fig. 557, *a b*).



FIG. 555



FIG. 556




FIG. 557

Before taking the impression, a small amount of pink wax is pointed and pressed into the bottom of the cavity and into the groove, and the impression taken in plaster in the ordinary manner. When the impression is removed from the mouth, the pink wax will come away with it, giving a perfect impression of the cavity and groove in the filling. If the impression is taken without the wax, the fine point of plaster extending to the bottom of the cavity will be broken away and will not give a perfect impression in the model. The model is then made and articulated and after separating, the wax impression of the cavity in the gold filling is removed and there remains an exact reproduction of the cavity to which the spur is to be fitted.

The model is dried out thoroughly and painted with thin sandarac varnish, especially the tooth that is to serve as a rest for the spur, which should be well saturated with it, and after it has become perfectly dry, it will be very hard and will not become marred in fitting the spur.

The fitting of the spur must be done with extreme care if the best results are to be obtained.

A piece of round platinized gold wire of the proper size is bent at right angles, and this is carefully filed or ground so that the point

of the spur rests in the base of the cavity and the shank lays closely in the bottom of the groove leading to it. When it has been accurately fitted and polished, it is tacked to the tooth with a little sticky wax to keep it from shifting its position and the extending shank waxed firmly into the body of the bridge. It is then invested for soldering, the spur being embedded in the investment.

**The Inlay as a Support.**—In using a gold inlay as a support for the spur, the operation is simplified, and the spur can be made of any shape desired with a certainty of its fitting the cavity properly. A slight notch or groove is made in the tooth, before taking the impression, where it is desired that the spur should rest, in order that the position on the model which the spur is to occupy may be determined. The spur may be in the form of a hook, especially in the teeth anterior to the molars (Fig. 558), or in the form of a dovetail (Fig. 559). The latter is especially applicable in the case of the molars where greater strength is required.



FIG. 558



FIG. 559

The object in making the spur in the shape of a hook or dovetail rather than having it straight and flat, is that it may bind or lock the teeth together so that there is no possibility of their spreading, which might happen should there be a smooth piece of wire resting in a groove.

The plaster tooth is cut away sufficiently, at the point indicated by the notch or groove, to allow for the resting of the spur, and the bridge is constructed with the spur made so as to rest in this cavity and not interfere with the occlusion. When the bridge is completed, the natural tooth is cut away roughly, where the spur is to rest, so as to allow the bridge to drop into its proper position. If the spur is too deep, so that it might endanger the pulp in making a cavity large enough to receive it, it can be ground so that it will clear sufficiently. It is well to allow the patient to wear the bridge for a day or two before cementing.

When the bridge, if it be removable, has been cemented, and the cement thoroughly hardened, it is taken from the mouth, the excess cement carefully removed and the next step is the making

of the inlay. The cavity for the spur is enlarged sufficiently to allow of a good bulk of gold on all sides, extending well down on the approximal side of the tooth. On this side the cavity can be made very shallow, as there is no strain here and the gold over this surface is simply to protect the tooth from decay, a case of extension for prevention, which is very necessary in the case of fixed bridges, but not so important where the bridge is removable.

The sides of the cavity should be made as nearly parallel as possible, but it must be made non-retentive so that the wax inlay will draw freely.

The cavity is then filled with wax and the patient instructed to close the mouth. The margins are trimmed all around. The bridge is now warmed slightly, put into place and the patient allowed to bite down on it, pressing the spur into the wax and bringing the teeth tightly together. The mouth is then opened and the surface of the wax again carved with the bridge in place. The bridge is then removed and the margins gone over, as the wax will have bulged a little from the spur pressing into it, and trimmed as necessary, leaving the wax the least bit full over the margins.

The bridge is now replaced and removed a couple of times, after which the wax impression is removed, the sprue wire attached and it is flaked and cast, preferably with coin gold or some other hard alloy which will make a clean, perfect casting.

After it has been cleansed, it is placed in the cavity and the bridge tried in to see if every thing is all right. If it is, the inlay is removed, cleaned, and dried with alcohol. The sides are now roughened a little and the cavity undercut slightly, after which it is cemented in the tooth and held under pressure for a few minutes. After the cement has thoroughly set, the inlay is carefully polished and the bridge placed in the mouth.

In the case of a fixed bridge, the inlay is prepared and cemented before the final cementing of the bridge.

By making the inlay in the manner described, it is certain that the spur fits the cavity made to receive it and is perfectly seated, which is not always the case where a gold filling has been used as a rest.

## CHAPTER XIII.

### TUBES AND SPLIT PINS.

AMONG the most important accessories in removable bridge-work are the tubes and split pins. In order that they be effective, it is necessary that they should be made with the greatest accuracy. The tubes should be perfectly round and smooth on the inside and the split pins, which are to be used in them, should be made so as to fit perfectly, otherwise they will be of but little value.

The metal of which the tubes are made should be hard, tough, rigid and non-oxidizable. The best alloy for the purpose is iridio-platinum, the alloy containing approximately 10 per cent of iridium. If the dentist is specializing in bridge-work or is doing a large amount of it, it would perhaps be better and cheaper to have the tubing made by a platinum manufacturer who makes a specialty of work of this character. Should this not be the case, good and satisfactory tubes can easily be made by the operator. When the writer first began the making removable bridge-work, he made his tubes by drilling a solid iridio-platinum wire with a twist drill of suitable size on a jeweler's lathe. It developed, however, that a drilled tube was not a good tube. It makes little difference how sharp the drill may be, or how smoothly it cuts, the tube will always be rough on the inside, the drill leaving a minute thread which, no matter how fine it may be, will wear down quickly, and entirely destroy the fit of the pin in the tube. Tubes can be made with a draw plate, but a drawn tube is never perfectly straight, and before using them, it is necessary to drive a mandrel through in order to straighten them. Then too, unless they are made in quantities, it takes more time and trouble than a busy dentist can afford to give to it, without getting any better results than can be obtained by simpler means.

**Making Tubes by the Mandrel Process.**—A simple and easy method of making a good tube and one which the writer has largely employed for many years, consists of working them over steel rods or mandrels made for the purpose and is as follows:

**The Mandrels.**—The set consists of six mandrels made from regular sizes of Stubb's steel wire, which can be procured from dealers



in machinists' and jewelers' supplies. The gauge numbers run from 48 to 53 inclusive, the sizes of the wire being, respectively, .075, .072, .069, .066, .063 and .058 of an inch in diameter.

These rods are cut in lengths of about one and a half inches, and the ends carefully rounded and polished. For convenience, they may be numbered from one to six, by marking them with rings around one end, according to the size of the mandrel, beginning with the smallest Nos. 1, 2, 3, 4, etc. (Fig. 560).

In tempering the mandrels, they should be heated to a cherry red (it is best to heat them on a charcoal block), and then plunged in water to harden them. In plunging them in the water, they should be grasped with the pliers by one end so that they will hang vertically and enter the water in this position. If they are plunged in sideways, so that one side of the mandrel becomes chilled before the other, they are more apt to be sprung or distorted.



FIG. 560. — Enlarged about one-third.

They are then dried off and polished with cuttlefish or other very fine grit paper. The heating and chilling having made them extremely hard and brittle, it will be necessary to soften them somewhat to prevent their breaking, which may be done preferably by laying the mandrels on a piece of heated metal until they assume a color indicating the desired temper, when they should be again plunged into cold water endwise. The mandrels should be of a high spring temper and should be drawn down until the color is between a deep straw and a pigeon blue. This gives them the right degree of hardness, after which they may again be polished, or they can be used without polishing.

It is a good plan when the mandrels are first heated-up, before they become red, to plunge them into a cake of soap and then proceed to heat them up to a cherry red. This will not prevent, but will greatly minify the oxidation of the metal, and they will come out much cleaner than they otherwise would.

Another method of procedure for the beginner, or for those not familiar with the tempering of steel, and which will perhaps answer the purpose for which the mandrels are intended, is to bring them to a cherry-red heat and then plunge them into a heavy oil. They are next held in the flame of an alcohol lamp or a Bunsen burner

until the oil is burned off, and then plunged into water. This will soften the mandrels so that they will have a fair spring temper, but not so good as by the method first described. After the oil is burnt off, they should be carefully smoothed and polished.

**The Tubes.**—The alloy which the writer has found best and most satisfactory for making tubes is iridio-platinum plate, containing about from 10 per cent to 12 per cent iridium and of No. 32 gauge or .008 of an inch in thickness. If the plate is about three-eighths or seven-sixteenths of an inch wide, it will be of sufficient width to give ample length for any tube that may be required. The strip should be cut lengthwise with the grain of the metal as it has passed through the rolling mill.

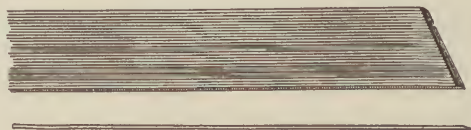


FIG. 561

In making the tube, the plate is first annealed, the end squared, and beveled with a fine file to a knife edge (Fig. 561). A hammer-headed hand-vise is necessary in making the tubes. It is very strong, and the jaws open and close on perfectly parallel lines (Fig. 562). The serrations should be ground off on one of the jaws so

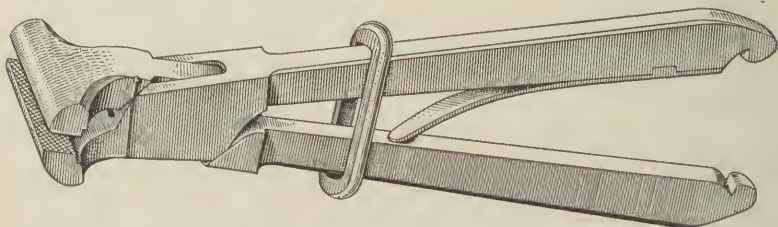


FIG. 562

as to leave it perfectly smooth on the inside, and the outer edge should be very slightly rounded. If the serrations on the other jaw are very fine, they can be left as they are, but if they are coarse, they should be smoothed somewhat, but left a little rough.

If this instrument cannot be procured, a pair of parallel pliers can be used, but they are not as good as the hand-vise.

The end of the iridio-platinum plate is grasped in the jaws of the hand-vise and bent slightly upward, the beveled edge being underneath (Fig. 563).



FIG. 563

A mandrel, one size smaller than it is desired that the inside diameter of the tube should be, is then laid across it, the turned up edge of the plate preventing it from rolling off. It is now grasped

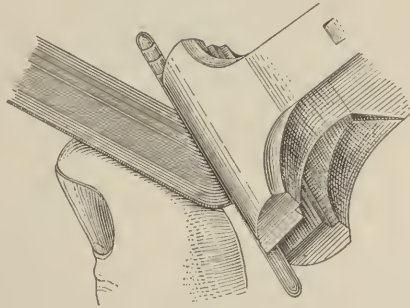


FIG. 564

by the hammer headed hand-vise, one jaw engaging the mandrel and the other the upturned edge of the plate (Fig. 564). The

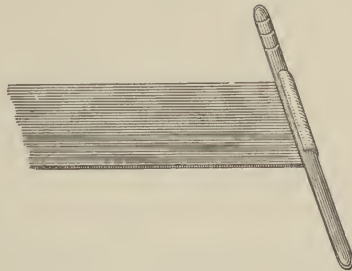


FIG. 565

plate is then bent around the mandrel, as shown in the illustration, until the beveled edge has passed the center, so that it will not drop out if it is raised above the level of the opposite end (Fig. 565).

The plate, with the mandrel in position, is next laid on a flat hard surface, such as the face of the anvil, or on a flat, smooth file. The end of a flat coarse file, say a No. 2 cut, is held in such a position as to catch the beveled edge of the platinum. The other end of the plate is held tightly with the thumb or the fingers of the left hand and the file pressed downward and backward toward the mandrel,

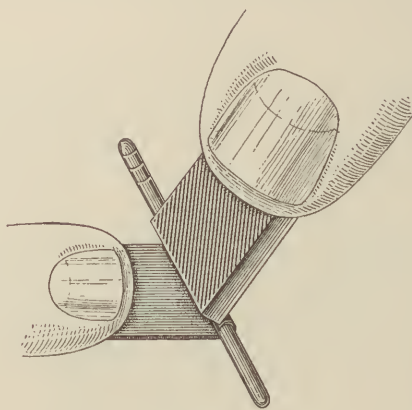


FIG. 566

as is shown in Fig. 566, the plate being rolled around it until the beveled edge is in contact with the upper side of the plate, as shown in the illustration (Fig. 567). It is very important that it should be rolled only until the beveled edge is exactly in contact with the plate, for the following reasons: It is desirable to use as large a tube or pin in a tooth as the root will permit of. The difference in



FIG. 567

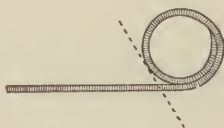


FIG. 568



FIG. 569

the size of the mandrels is .003 of an inch, with the exception of that between the first and second, in which the difference is .005 of an inch. The plate used for making the tubes is of No. 32-gauge, or .008 of an inch in thickness. If in rolling the tubes, the lap is carried beyond the point of contact, as shown in Fig. 568, there will be an extra thickness of metal on that side. It can readily

be seen that this extra thickness of metal will give an outside diameter of the tube that will be .008 of an inch greater than it would were it brought exactly in contact with the beveled edge (Fig. 569). The result would be that the hole in the root would have to be made as large to accommodate a tube so made as though it were intended to use a much larger tube, being .008 of an inch larger or nearly the difference in size between three mandrels. In other words, if this extra lap were made it would be necessary to have an opening in the root for a tube so made over No. 2 mandrel, as large as would be required for one which had been properly made and finished over a No. 5 mandrel.

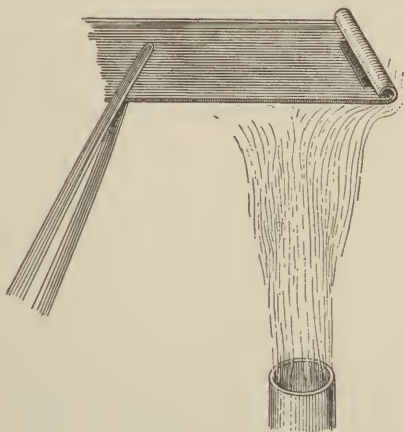


FIG. 570

The tube having been rolled in the proper manner, the mandrel is removed and the seam soldered with pure gold, no flux being used. A small piece of pure gold is laid on the plate, being in contact with the plate and lower side of the tube (Fig. 570). It is then soldered by holding it over the flame of a Bunsen burner, first passing it through the flame so that it will strike the plate a short distance from the tube, and holding it there until the gold begins to melt. The tube is then drawn back into the flame and held until the gold is thoroughly melted, the tube is soldered all the way across, and the gold is well burned into the platinum.

If the tube is first held in the flame, it will be found that as the pure gold melts, it will jump up over the side and around the top of the tube, but will not unite it at the lap. It is cooled by lay-



ing it on a cool surface, such as a file or an anvil. This will take but a moment. It should never be cooled in water, as should this

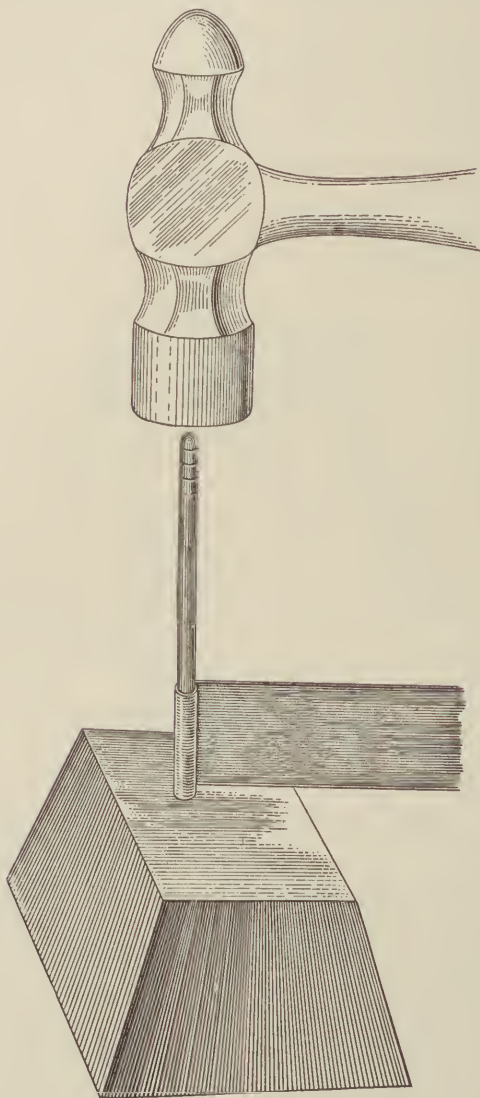


FIG. 571

be done, when another mandrel is driven through it, the tube being wet, unless the mandrel is immediately dried on removing, will

cause it to rust so that it may be ruined after having been used but a few times.

The next step is to take the mandrel of the next size larger than the one over which the tube was first rolled and drive it through the tube, having the tube facing toward the operator and the surplus plate extending to the right. The end of the tube is placed on the anvil and the mandrel driven through it by tapping it lightly with a light hammer until the end comes in contact with the anvil (Fig. 571). The mandrel is then grasped in a pin-vise and the surplus metal trimmed away as close to the tube as possible (Fig. 572).

The mandrel being driven through in this manner, with the lap to the right, allows the flat side of the scissors to be placed against the tube and thus cut close to it. The lap is then filed perfectly smooth and flush with the sides of the tube (Fig. 572, *a a*), so that in rotating it between the fingers, no unevenness is felt. If a ridge is felt along the side, it should be filed off carefully so that the diameter is no greater at that point than at any other.




FIG. 572

The end of the tube is then bent over the rounded end of the mandrel by pressing it and working it over with the side of a smooth, flat file, until it is partially closed (Fig. 573). The stretching of the tube over the mandrel will necessarily make it fit so tightly that it cannot be pulled off, but by rolling it a little under a smooth file on the anvil, with a little pressure the metal will be stretched sufficiently to allow of the mandrel being removed.

A small square of the same metal of which the tube is made is then placed on the charcoal block and a small piece of pure gold melted on its surface. The tube is grasped in a pair of pliers, the partially closed end being down and resting on the square of platinum (Fig. 574). The small blue flame of the blow-pipe is applied and as the pure gold melts and catches the tube to the floor it should be lifted slightly from the charcoal block so as to allow a flame to pass underneath the floor until the pure gold solder has flowed all around, perfectly uniting the tube to the floor. The mandrel is again driven into the tube and placed in the pin-vise, which grasps the end of the tube, the surplus metal of the floor

is cut away and the edges filed flush with the sides of the tube and the end slightly rounded.

When speaking of the size or the number of the tube, the size of the mandrel over which the tube was finished is indicated. Thus a No. 4 tube was first rolled around a No. 3 mandrel and finished on a No. 4.

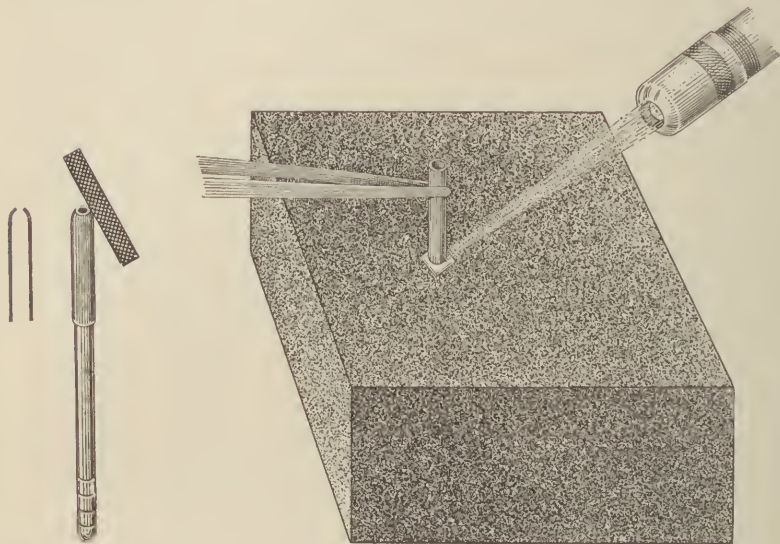


FIG. 573

FIG. 574

If a large amount of the tubing is being used and it is made by a platinum manufacturer, it should be drawn so that the inside diameter is one- or two-one-thousandths of an inch smaller than the mandrel over which it is to be finished. When ordering, the mandrels should be measured with a micrometer gauge and if a No. 4 mandrel measures say .069 inches, the tubing should have an inside diameter of .067 or .068 of an inch and so on. The tubing comes in about foot lengths and they can be cut as needed in any length desired. The mandrel is driven through them and they are finished in the manner described.

For some time past, the writer has been using shorter tubes of a greater diameter than he did originally and he feels that this is an improvement, as with a short, heavy split pin there is greater strength with less liability of their being broken. If they are well fitted, their retentive properties will be just as great as though they

were longer, but smaller in diameter. Almost any root will easily accommodate a much larger short tube than it would a long one, especially the upper centrals which are often quite short, and conical or wedge-shaped.

Of course, the size of the tubes used would depend upon the size and shape of the roots involved and this is clearly shown in the radiograph.

The smaller roots, the lower incisors, upper laterals and bicuspid would of course necessitate the use of the smaller tubes, Nos. 1 and 2, but there are times when bicuspid will take a No. 3 and the laterals a No. 3 or even a No. 4 tube. The upper centrals will always take a No. 4 and often a No. 5 or No. 6. The cuspids of the upper jaw practically always a No. 6 and of the lower jaw, generally a No. 6, but nothing under a No. 5. In the lower bicuspid No. 3 or No. 4 and at times even larger. For the combination telescope with tube and split pin, the larger tubes should be used. It is practically never that the split pin should exceed one-quarter of an inch in length. That would be the average length for those most depended upon for retention. The above table will serve as a guide for the size of tubes used, but the writer has, in some special cases, used even as large as a No. 10 tube.

### SPLIT PINS.

The split pin, in order to be effective, must be made of a tough, high fusing, elastic material and rigid enough to withstand the strain to which it will be subjected, and must be an alloy which will retain its elasticity even after being subjected to a very high heat.

There should be no loss of metal between the halves to weaken it in the least, and it should have practically the same amount of material in it as through it were a solid pin. The solid pin, which has been sawn through the center in order to produce a split pin, is worthless, so far as the strength and lasting qualities of the pin goes, for the reason that a saw cut made through the center of the metal, has cut it away at its heaviest and strongest part and rendered it comparatively weak (Fig. 575). Half-round wire is best adapted for making split pins and securing a maximum amount of strength (Fig. 576). For this purpose, platinized gold or clasp wire is the best.

**Iridio-platinum Wire.**—Iridio-platinum wire, while it may be a tougher and more rigid alloy than the clasp wire, does not seem to be

suitable for split pins. The writer did considerable experimenting with this alloy, covering a period of two or three years. At first it seemed as though this were the metal best suited for the making of split pins. After a time, however, bridges in which these pins had been used were brought back to him with the pins broken off close up to the caps and they were replaced with platinized gold wire. It seemed that the constant springing brought about a recrystallization of the metal which rendered it very brittle. It would break with a clean sharp fracture, showing a very fine grain which presented the appearance of fractured hardened steel, as of a broken needle. This result followed in a very large percentage of the cases where the iridio-platinum had been used, so that its use was finally discontinued.



FIG. 575



FIG. 576

**Platinized Gold or Clasp Wire.**—Of the various makes of gold and platinum alloys, known as platinized gold or clasp wire, which can be procured from the different dental supply houses, very few are at all suitable for split pins. The majority are too soft, or become so after being subjected to a high heat, and they also have too low a fusing point, very few of them standing a higher heat than that required to melt 18-carat solder. When the heat is raised above this point, the metal loses its elasticity and is apt to be fused together.

For many years there was only one manufacturer who produced a clasp wire which was suitable for this purpose. Within the past few years, however, other manufacturers have taken the matter up and it is now possible to secure other makes of high-fusing and high-grade metal which can be used. It should have a melting point above that of coin gold, and it should be possible to use this alloy as a solder for it without the slightest tendency to fuse, and without any loss of elasticity.

During a series of experiments the idea of sweating the halves together was tried. The sweating of the alloy was easy enough, but the process from a practical standpoint proved a failure. In sweating the parts together, the whole mass of metal was heated



nearly to the melting point of the alloy, but this high heat brought about a recrystallization which rendered the metal practically the same as cast gold, with the result that the pins became quite brittle and were broken in a comparatively short time, necessitating the replacing of them in nearly ever instance where they had been used.

Mr. L. J. Weinstein conceived the idea that it would be better if the corners of the half-round wire were very slightly rounded and he had draw plates made to do this (Fig. 577). It has proved most satisfactory and never since that time has the writer used any wire with a sharp edge. Where a complete half-round wire is used in making a split pin, after it has been soldered together, forged, filed, and finished to fit the tube, the metal is made so smooth and polished by the burnishing that it is absolutely impossible to tell in which direction it runs, even with the aid of a magnifying glass and sometimes when it has been necessary to spread the pins after a bridge had been worn for a time, the only way in which the split could be located, was to grasp the end of the pin in the beaks of a pair of small smooth pliers giving them a slight twisting motion. This would cause the halves to slide on each other, thus locating the split.



FIG. 577



FIG. 578



FIG. 579

If the sharp corners are done away with, when the pin has been completed, a little groove will show along the side, where the halves come together, thus doing away with all the trouble of locating the split, and indicating clearly just where to spread the halves in order to tighten the pin (Figs 578 and 579).

There are at least two of the manufacturers of dental alloys now who are drawing their half-round wire this way, but if it cannot be procured, the sharp edge of the wire at hand should be taken off with a very fine file before it is used.

The size of the half-round wire used in making the pins for the different sized tubes should be, after the two halves have been brought together and hammered down, about one- or two- one-thousandths of an inch larger than the inside diameter of the tube or size of the mandrel over which the tube was finished, thus giving an

excess of metal sufficient to allow for turning or filing and polishing in fitting them to the tubes.

It is better of course, to have a draw plate and draw the wire down to the size needed, but if this is not possible, the wire bought should be as near to two-one-thousandths of an inch larger than the mandrel as can be secured, so as to leave as little filing and finishing to be done as possible. Of the regular sizes procurable at the dental depots, the No. 12, No. 13 and No. 14 come nearest. The No. 14 gauge can be used for the No. 1 tube and sometimes for the No. 2; the No. 13 gauge for the No. 3 and No. 4 and the No. 12 gauge for the No. 5 and No. 6.

The measurement should be taken from the bottom of the tube to the floor of the cap and the wire should be bent about one-eighth of an inch longer so that the pin when completed will stand that distance above the floor.



FIG. 580

The half-round wire is well annealed and is then bent on itself, the flat side innermost, as in the illustration (Fig. 580). It is then again annealed and bent still further over, bringing the end in contact with the flat surface of the wire. It is now grasped in a pair of pliers, at point *a*, Fig. 581, and held in the flame of a Bunsen burner until it reaches a red heat. The ends are brought together and held until it is chilled slightly, thus removing the spring and bringing the ends in contact for about one-eighth of an inch. The contact should be long enough so that when it is soldered and the pin completed, the soldered portion will come about one-thirty-second of an inch beneath the floor of the cap. The pin and the point of contact is longer in the case of an inlay and tube and split pin as already described.

The parts in contact are then fluxed and a very small piece of coin gold or 21-carat solder placed on the flat side of the wire in contact with the overlapping end, point *b*, Fig. 581, and melted with the blow-pipe and drawn through sufficiently to unite it. Care should be taken not to use an excess of the coin gold or solder or too great heat, as by so doing the pin may be very materially weakened.

If a large amount of solder has been used, or if it has been excessively heated, it will draw through into the loop, leaving a large bulk of the gold extending beyond the point of contact (Fig. 582, *a*). The result is that when this is hammered and forged down, so that the two sides of the pin are in contact, the large bulk of the coin gold has been forced forward and hammered into the sides of the platinized gold wire, so that both sides are partially cut through, as in Fig. 583. This will, of course, weaken the pin at this point and it will very easily be broken.

After the pin has been soldered, the extending wire is grasped in the pin-vise and the sides of the pin hammered together, using a small hammer and striking lightly, bringing the two halves in contact.



FIG. 581



FIG. 582

During the hammering or forging the pin must be kept rotating, thus forging it round as the halves are gradually brought together. If the two halves are hammered together without rotating, it will be found that the sides have been flattened, thus making the diameter of the pin in this direction much less than in the direction of the split (Fig. 584). This will render it much more difficult, in fact it will be almost impossible, to make the pin perfectly round, whereas, by rotating it, the halves are brought in contact, at the same time forging it into the desired shape so that there will be little trouble in making the pin fit the tube. After forging, the pin should be annealed.



FIG. 583



FIG. 584

**Filing of the Pins.**—Filing is an art. There may be some who will doubt this statement, but it is true nevertheless. To learn to use a file properly requires a great deal of practice and some natural ability, and before undertaking to fit the pin to a tube, considerable time should be devoted to working with the file. Of as great importance as the proper use of the file is the proper method of using the pin-vise, and the dentist should learn to rotate the pin-vise properly.

The best pin-vise to use for the purpose is one which is perfectly round, and which has no set screws for tightening the jaws or catching and holding the pin, but has jaws of the nature of a chuck or clutch which will grasp the pin and hold it in line with the pin-vise. The one shown in the illustration (Fig. 585) is the best that can be procured for all work of this character.



FIG. 585

The pin is grasped by the soldered end in the pin-vise, catching it only far enough down to insure a strong hold, and it is fastened as tightly as possible. It is held lightly in the fingers of the left hand, the end of the thumb resting on the top, and the pin on the filing block, as shown in the illustration (Fig. 586).



FIG. 586

The file used for roughing down should be of two or three cut, flat, and about five inches in length, and should be held in the right hand very lightly, the forefinger resting on the face of the

file, and over the middle of the pin extending from the pin-vise (Fig. 587). The pin-vise is then rotated to the right with the thumb and fingers of the left hand. The file is passed lightly over the pin in the opposite direction, very little pressure being used, not much more than the weight of the file itself. The file should be moved only while the pin is rotating, being pushed forward over the pin and lifted from it while the pin-vise is still in motion. If this should not be done, and when the pin has stopped revolving, the file should be still pushed forward, a flat surface would be produced

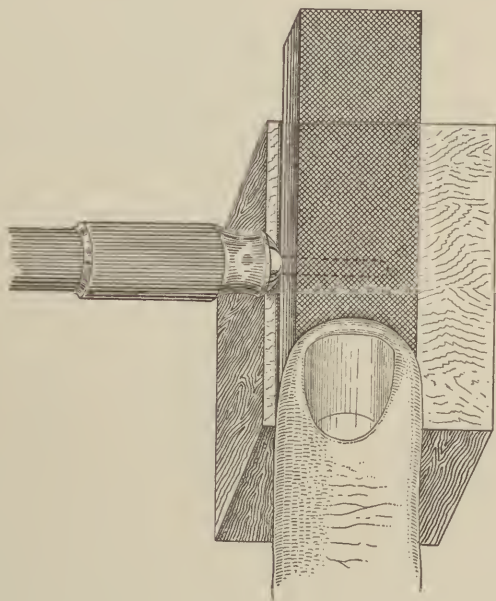


FIG. 587

at that point. As previously stated, the finger should rest over the middle of the pin which perhaps extends one-half or two-thirds of the way across the file (Fig. 587). If the finger is held at the outer edge of the file, there will be a greater pressure at this end of the pin than there should be, with the result that the pin will be made smaller at the outer end and the sides will not be parallel (Fig. 588).

If a very short pin is being filed, the finger should rest at the extreme inside edge of the file. The file should not be grasped as would be a baseball bat. If the file is held in the hand very firmly, the delicate sense of touch is lost and unconsciously a greater



pressure is placed on one or the other end of the pin, with the result that it cannot be made of a uniform diameter throughout its length. When the file is held very lightly, so that it will move freely with the slightest pressure of the forefinger, it will find its own level and keep the sides of the pin parallel from one end to the other.

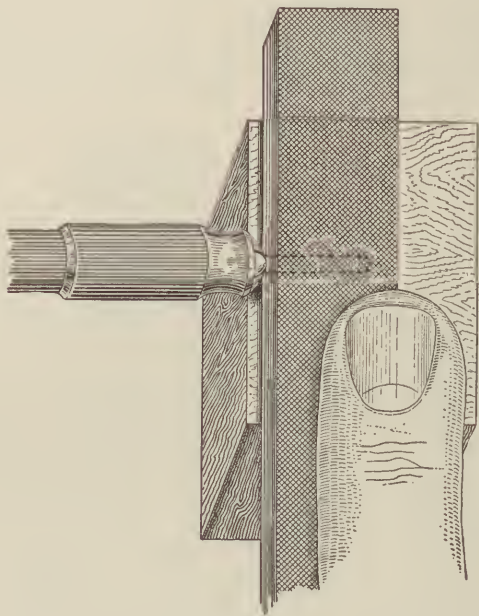


FIG. 588

When the pin has been roughed down with the coarse file to nearly the size that is desired, the final fitting and polishing should be done with the finest file that can be procured and afterward it is burnished. For the final finishing, a flat file about five inches in length is used, one side of which is at least as fine as a six cut, and better still if it be a seven or eight cut. The other side is not cut at all, but is perfectly smooth and polished for use as a burnisher.

With the cut side of the file, the pin is smoothed down until it is very nearly as it should be, fitting the tube snugly. It is then burnished with the smooth side until the pin becomes perfectly smooth, having a polished surface and fitting the tube easily throughout its entire length.

The burnishing is perhaps the most important part of the operation of making a split pin, for the reason that no matter how fine

the file which is used in fitting the pin may be, it leaves a surface which, under the microscope, will seem to be very rough, the serrations or fine ridges and grooves presenting the appearance of a very fine thread of a screw. If the pin should be used without any further finishing, these serrations, being so very fine, would wear smooth very quickly, thus reducing the size of the pin to that extent and rendering it loose in the tube and making what might incorrectly be termed an ill-fitting or loose-fitting pin.

Too much importance cannot be placed on the proper fitting of the pin into the tube. The pin should fit the tube easily. If it fits too tightly, it would be difficult when the bridge is waxed in position for soldering to remove the outer from the inner parts without springing or distorting it, and it would also require too much force to remove the bridge from the mouth. If the pin goes into the tube touching the sides for its entire length it may fit easily, so that it will slide out and in without any great effort to move it.



FIG. 589



FIG. 590



FIG. 591

If for any reason the tube is very long, necessitating a split pin of great length, the end of the pin can remain closed and if at any future time, it should be necessary to spread it in order to give the pin greater retentive power, it can be opened a little in the middle, thus making a long, narrow, elliptic spring (Fig. 589). If the pin is short, then it is filed open at the end and the end carefully rounded, polished and burnished.

In filing it open at the end, the file should follow the direction of the split until it is open (Fig. 590), and not across the split. The reason for this is that in filing across the split, as soon as the solid end is filed through, even if touched lightly and if a very fine file is being used, the farther half of the pin is forced away and a feather edge is turned over on the far side of both the inner and the outer half and some particles of the filings will be forced between the halves, thus spreading the pin and making it difficult or preventing

it from entering the tube (Fig. 591). This would necessitate still further filing and consequent weakening of the pin. The figure is of course exaggerated for the purpose of illustration.



FIG. 592

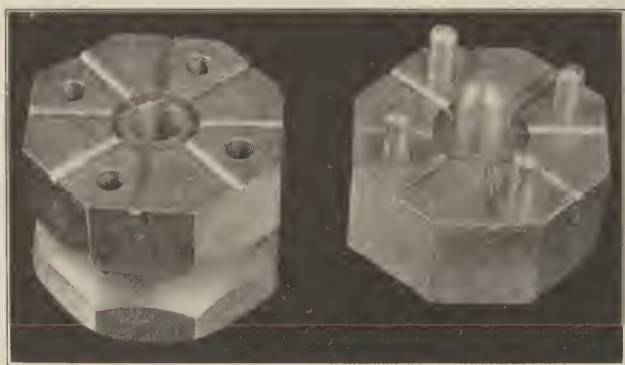


FIG. 593

**The Weinstein Devices for Making Split Pins.**—Mr. L. J. Weinstein, of New York, has invented a swaging device to assist in the making of split pins. It is of the utmost value, and by its use one is enabled to make a split pin more quickly and accurately than is possible by simply forging and filing (Fig. 592).

The device consists of a double anvil, octagonal in shape. The two halves are faced off so that there is perfect contact between

the two faces, and these are guided to, and held in their proper positions with dowels (Fig. 593). From each of the octagonal faces, a hole is drilled toward the center between the halves, leaving half-round grooves of equal size in each of the working surfaces. These have been reamed and polished and the sizes of the holes are a little more than one-one-thousandth of an inch larger than the mandrel corresponding in number to the number on the swager (Fig. 593).

The half-round wire used in making the split pins, when bent together, is a little more than one-one-thousandth of an inch larger than the hole in the swager in which it is to be finished. A draw plate comes with the outfit, the numbers corresponding with the numbers on the swager and the mandrels (Fig. 594).

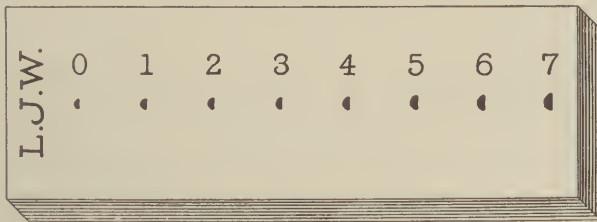


FIG. 594

Although the wire ("elastic" gold, Weinstein's formula) may be purchased in suitable sizes, thus avoiding the necessity of drawing, it is well to have the draw plate in case of emergency, as it is essential that the size of the wire used should correspond with the pin it is desired to make.

Fig. 595 shows a small drawing machine invented by Dr. C. F. C. Mehlig, of New York for drawing wire and tubes. It is a wonderful little machine, and is geared so that a heavy wire can be drawn down with almost no effort.

**Making the Split Pin.**—The wire, of a number corresponding to the number of the mandrel over which the tube has been finished is bent upon itself, brought in contact as shown in Figs. 580 and 581, and soldered with 21-carat solder or coin gold. The extending end is then grasped in the pin-vise, the looped end placed in the hole in the side of the anvil corresponding in number to the size of the wire, the flat side of the wire being parallel with the face of the anvil. One or two quick, sharp blows are then struck on the top of the anvil with a heavy round-faced fiber or a rawhide-faced hammer, and the two halves brought into perfect contact (Fig. 596).

After the pin is closed, it is annealed and cooled by laying it on the anvil or a file, but should not be cleansed in acid, and



FIG. 595



FIG. 596

swaged in the same hole with the heavy mallet, rotating the pin constantly until the two faces of the anvil are in contact. (See Fig. 596.) When the two faces of the swager are in contact, the pin is



quite round, the sides are parallel, and it is slightly larger than the tube, just enough to allow for finishing. It is then annealed again and finished with a fine file and a burnisher as has been described or it can be burnished on the lathe.



FIG. 597

**Finishing the Split Pin on the Lathe.**—It is necessary to have a chuck of suitable size and kind to grasp the pin firmly. It is then brought down with a very fine file until it will just enter the tube tightly. The filing can be done more easily and perfectly if the under surface is supported by a very fine file on an instrument with a smooth flat surface, as shown in Fig. 597. The burnishing is done with another device of Mr. Weinstein's, which consists of two hinged, hardened, and polished plates, one of which is grooved to receive the pin (Fig. 598). The two plates are brought together, the lathe run at full speed, the burnisher being moved outward and inward on the pin (Fig. 599), thus giving it a smooth and highly polished surface.

While still in the lathe chuck, it is polished with fine crocus cloth and reburnished. The pin is then opened at the end, and rounded in the manner already described (Fig. 590) or left closed in a long pin. (See Fig. 589.)

The split pin swager illustrated was originally made with eight



FIG. 598



FIG. 599

grooves between the two halves to provide for the six pins according to the stub steel mandrel sizes, .058 inch to .075 inch, and two extra grooves for the preliminary swaging (of No. 6 pin). It has been found advisable, however, to reduce the number of the grooves, mandrels, etc., for both the swaging device and paralleling device and the various accessories and the completed device, both for paralleling and swaging now furnished are standardized for four sizes, as follows: No. 1 equals 0.060 inch; No. 2, 0.064 inch; No. 3, 0.068 inch, and No. 4, 0.072 inch.

## CHAPTER XIV.

### SOLDERED SADDLE BRIDGES WITH ALL PORCELAIN CROWNS.

IN practically all removable bridge-work, whether upper or lower, anterior or posterior, saddles should be used to give additional support, and to take a part of the strain from the abutments. These saddles need not be large. As a general thing only sufficient to permit of using crowns which will be a reproduction of the entire natural tooth in size and shape, from the occlusal surface to the gum line. There are times where there has been a considerable amount of resorption when it may be necessary to make them considerably larger. Then too, in extension saddles, it is best to make them as broad as possible so as to get as great a bearing as the ridge will stand. In a bridge of this kind, the anchorages are all at the mesial end, the rest of the bridge being supported by the saddle resting on the ridge, and the greater bearing that it has, the greater are its chances of a long life.

The use of porcelain crowns in bridge-work in place of the facings or veneers which had heretofore been used to hide, or partially hide, the mass of gold of which the bridge proper was constructed, was a great step forward. It enabled the dentist to produce far greater artistic effects than was possible by the old methods, but it has not entirely taken the place of the metal and there are still many places where it is necessary to use gold to obtain the required strength.

The depth of the bite is a very essential factor in using porcelain crowns in bridge-work. This must be great enough to allow sufficient room for a good substantial base in order to give strength and stability to the bridge. An extremely close bite is not suitable for the use of crowns, as the strength of the porcelain is only in proportion to its bulk, and where we have this condition, it may be necessary to resort to the older methods in order to produce results which will be satisfactory and durable.

Porcelain crowns are especially applicable in the anterior part of the mouth, as all porcelain crowns present a much more life-like and natural appearance than does a facing which is backed with

metal, although there may be very exceptional cases where it is impossible to get shades which will answer the purpose. The incisal edges of the teeth, especially, are at times lacking in that clear translucency which is to be noticed in most of the natural teeth, and it might happen that on rare occasions, more satisfactory results could be obtained by resorting to the backed facings, when making restorations either in the anterior or in the posterior part of the mouth, but the bicuspid and molars are much more easily matched than are the incisors.

In making a bridge of this kind, the crowns of any of the different manufacturers which come nearest, in mould, shade, and texture, to the requirements of the case may be used, but as a general thing, more satisfactory results are probably secured by using trubyte teeth or those of a similar character. It should be remembered that there must be a sufficient depth of bite to allow of every crown having a base deep enough to give strength and permanence to the bridge.

It would be well to first consider a bridge for the anterior part of the mouth, restoring the six anterior teeth, using the cuspid roots as abutments.

The caps are made and the canals enlarged and made parallel with each other. Holes are made in the floors of the caps which are placed on the roots, the tubes placed in the canals and properly aligned, waxed to the caps, removed, invested and soldered.

After having been cleansed, they are replaced on the roots and a plaster impression taken of the ridge with the caps in place.



FIG. 600



FIG. 601

After removing, the caps are carefully replaced in the impression and waxed as shown in Figs 600 and 601. The model is now made and after it has hardened sufficiently, the caps are removed. The excess tubing is then cut away, the caps polished and the half caps with split pins made. They are then put together, replaced on the model and waxed carefully and evenly all around.

If a zinc and lead die and counter die are to be used, the model is prepared as shown in Fig. 624. If fusible metal dies and counter dies are to be used, the model is made, the cap put in place and



waxed, and the outline of the saddle is marked with a pencil. The pencil mark is then carefully followed with a sharp instrument, making a little groove all around (Fig. 602).

The model is now dusted with talcum powder and a modeling composition impression of the ridge taken, pressing it tightly to the model all around, and carrying it over the caps. When it is removed it will be found that the composition has been pressed into the groove, giving the exact desired outline for the saddle. The compound impression is then carefully trimmed with a sharp knife to

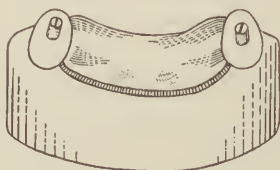


FIG. 602



FIG. 603

the outline, nearly at a right angle with the inside of the impression (Fig. 603). A model is now made from this, but it is not necessary that it be so deep as where a zinc and lead die and counter die are to be used. It is made symmetrical in shape (Fig. 604), and the sides about parallel, Fig. 605, being a cross section through middle. This is then placed in a paper tube, dusted with talcum powder and poured with fusible metal, which should be fairly thick. Immediately on pouring, a plug of plaster or wood which approxi-

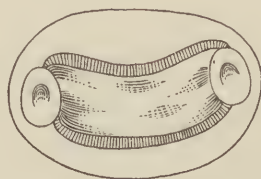


FIG. 604




FIG. 605

mately fits the paper tube, is pressed on the metal in the tube, thus compressing it and insuring a perfect die (Fig. 606). After the die has been well chilled, it is again placed in paper tube, dusted with talcum powder, and the counter die poured. In pouring the counter die, the fusible metal should be quite cool and very thick, almost so that it is necessary to push it out of the ladle with a spatula.

Ordinarily, a single die and counter die will be sufficient, as the metal of which the saddle is made is quite thin, but sometimes in

very large saddles it may be necessary to use two sets. These are very easily made, simply chilling the die and counter, putting them in separate paper tubes and pouring the thick fusible metal on them and the same way as described for pouring the counter die.

Where the lip is short or the bite is close and the patient shows the gums plainly, the saddle should extend only to about half or two-thirds of the way over the ridge labially, as at least one-third of the base of the crowns, labially, should be made to fit closely on the ridge, so that no metal will show. Where the bite is very long

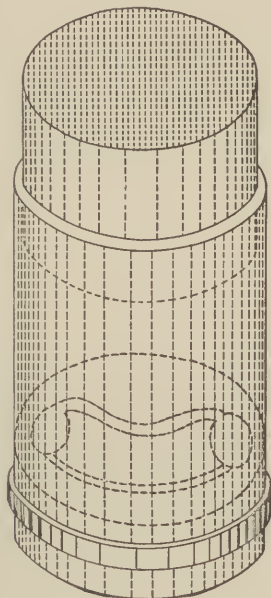


FIG. 606

or where there has been a great amount of resorption, the saddle should extend all the way over the ridge so as to restore the lost contour. The saddle is reinforced with coin gold, adjusted to the ridge and the relation of the saddle to the caps taken with the saddle under pressure.

The inner caps with the half caps in place are now put on the roots and the saddle carefully adjusted. It is then held firmly in position, being pressed tightly against the ridge, preferably with the fingers, in the same manner as shown in Figs. 631 and 632, and the impression taken, including both caps and saddle. When the im-

pression has been removed, the caps and saddle are replaced in it, carefully waxed and a model made.

When the model has been separated from the impression, the caps removed by heating slightly and the wax removed from the caps and the model. The caps are then replaced on the model and the ends of the saddle are carefully fitted to the lower edge of the half-band even with the gum line and waxed lightly to it. A heavy brass or iron wire is now fitted along the saddle and over the half-caps (Fig. 607) and waxed firmly to both caps and saddle with tough, hard, wax to prevent distortion in removing and investing.

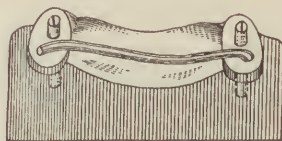


FIG. 607

When taken from the model, the inner caps are removed from the outer half caps, using great care so as not to disturb the relation of these caps to the saddle. It is then invested in the same position as shown in Fig. 607, the under side of the half-caps having been carefully filled with investment. The wax having been removed, it is heated up and the saddle and caps united strongly with 21-carat solder. After having been cleansed in acid and washed, it is put in the mouth with the inner caps in place and all is ready for the final impression and bite. These can be taken simultaneously in plaster, a squash bite and impression, including several of the adjoining teeth at either end, or a wax or modeling composition bite secured and a separate plaster impression taken of the upper and lower jaws.

The model is then prepared and the crowns are ground in position.

#### RESTORING LINGUAL CONTOUR TO ANTERIOR CROWNS.

In practically all of the bridges of this character, which are made for the anterior part of the mouth, it will be found that the lingual contour of the crowns, as they come from the dental depots, is not sufficient to give the necessary strength after they have been ground in position, and where such is the case, it is necessary to first build them up on the lingual sides before grinding (Fig. 608). This is true

of the crowns made by practically all of the manufacturers. If the bases of the crowns are ground away lingually as much as is necessary, it will leave practically no hold for the post, and very little



FIG. 608



FIG. 609

bulk of porcelain back of it to give the necessary strength to the crown, as will be seen in the illustration (Fig. 609). It will also decrease the labial-lingual depth of the base of the crown by about one-third. This will apply both to the cuspids and to the incisors, and it is very rarely that the writer uses these crowns without first building out the contour considerably in porcelain on the lingual side before grinding. Then, too, the shapes of the cuspid crowns are scarcely ever normal, the lingual surface being decidedly concave and more the shape of the incisors, while it should be thick and heavy, as shown in Fig. 610, indeed often being slightly convex on the labial side rather than concave.



FIG. 610

The enamel of the lingual side of the crown should be first ground away with a fine carborundum or an emery disk, as the roughened, unglazed surface affords a better attachment for the porcelain which is to be baked on. The porcelain is then built on heavily, as shown



FIG. 611



FIG. 612



FIG. 613

by the dotted line in Fig. 608, enough being added so that when the base of the crown is ground away, as in Figs. 611 and 612, the labial and lingual diameter is great enough to cover the entire cuspid cap, and in the incisors so that after grinding, the lingual side will be extended so that the pin will come up near the center of the crown

or, better still, a little labially, the bulk of the porcelain being on the lingual side. The most suitable porcelain body that can be used for this purpose, is the "Justi" or the "S. S. White." The entire contour can be built up with this body with one baking and it will not shrink or check.

The cuspid crowns should first be fitted and ground so as to touch the labial third of the floor of the outer caps, clearing enough lingually to afford a strong base (Fig. 611) and the lingual, mesial and distal sides are beveled, deepening the bevel mesially and distally a little at a point opposite the post holes or a little labially from them as shown in Fig. 613.

If the saddle extends only part way over the ridge, the model should be scraped somewhat on the labial side to allow of their setting closely against the gum when the bridge is completed, and the incisor crowns are ground in. They should fit the plaster model on the labial side, but should be ground so as to clear the saddle well lingually, in order to get a sufficient depth of metal for strength, as in Fig. 614. The crowns are now waxed to the saddle on the lingual side and a wall of plaster built up on the labial side as in Fig. 614. After the plaster has hardened, the crowns are removed and cleansed of the wax with boiling water or by placing them in chloroform.



FIG. 614

The lingual, mesial and distal sides of the base of the crowns are then beveled the same as have been the cuspid crowns, the bevel having been deepened mesially and distally as in Fig. 384. They should be ground symmetrically, each on a line with the other and to an equal distance from the incisal edge all along. After the crowns have been arranged in a satisfactory manner, they are waxed in place, the wall on the labial side insuring their being in their proper positions.



The labial wall is now removed and a wall of plaster is built over the incisal edges of the crowns, extending it so as to include the occlusal surfaces of two or three of the adjoining teeth on each side. It should extend down to nearly one-eighth of an inch from the tips of the crowns (Fig. 615).

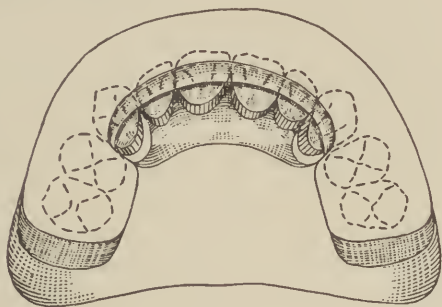


FIG. 615

After the crowns are properly ground, it will generally be found that the post holes are too shallow, and they should be deepened enough to allow of the use of a post of sufficient length to give ample retention and support. This can be done by using a copper drill in the engine and deepening the hole in the crown with carborundum. Carborundum and oil may be used, or what is still better powdered carborundum and glycerin, the glycerin forming a good vehicle for carrying the powder, and at the same time being much more easily washed away, as the glycerin, mixing freely with water, as it does, permits of the cavity being washed out quickly with clear water, while in using the oil for carrying the carborundum, which will cut no better than the glycerin mixture, it is necessary to wash thoroughly with a brush and soap and water.

**Making Copper Drills.**—The copper drills are easily made. A piece of wire of the same size and of about the same length as the shank of the engine burs is secured and one end filed or turned down, for about one-half an inch, to the size which the holes in the crown are intended to be (Fig. 616). They are then placed in the hand-piece and used in the same manner as an ordinary engine drill.

Another and an easy way to make these drills is to take a piece of copper wire of suitable size, about 15 or 16-gauge cut to the right



FIG. 616

length, about three-quarters of an inch, and screw it into the end of an old screw disk mandrel. It is then adjusted so that it will run perfectly true and the end filed flat.

The end of the copper drill is dipped into the carborundum and glycerin and entered into the hole in the crown and the engine run rapidly, the point of the drill being moved up and down so as to keep the carborundum and glycerin constantly in the bottom of the cavity. This should be continued until the cavity is of a sufficient depth. The end of the drill should be perfectly flat, or still better slightly countersunk, so that it is enabled to hold the grinding powder better. It can be countersunk by running it rapidly and holding the end against the end of a small drill or bur. A number of these drills may be made and kept on hand and recountersunk from time to time as the ends become rounded, for when the drills are so worn they do not work well, the carborundum and glycerin working up along the side rather than at the end of the drill. The drill can be flattened by filing it across the end or by holding it perpendicular on the face of a fairly coarse file while the engine is running rapidly and moving the drill lightly sidewise back and forth.

**Making the Bases.**—The bases of pure gold, No. 36-gauge, are now made in exactly the same manner as described in the chapter on "Porcelain Crowns with Soldered Base in Fixed Bridge-work."

The gold bases are carefully burnished and pressed into place. Steel burnishers and orangewood sticks can be used to advantage in doing this, but care must be exercised where there are thin margins. After they have been fitted, holes are made and platinized gold posts are put through the base, to the full depth of the hole in



FIG. 617

the crown, and waxed to it with hard sticky wax. The bases are then removed, invested bottom side up and each post soldered to its base with a little piece of coin gold (Fig. 388). When they have been removed from the investment and cleansed, they are replaced on the crowns and each one put in a strong napkin, or

piece of cloth, base down, and the napkin twisted tightly to bring the pure gold in close contact with the crown base at all points.

They are then put on the model with the labial wall in position to ensure their going properly into place, and if any of the pins are too long below the gold bases, they are trimmed so that they will clear the saddle.

The crowns being properly adjusted, the extreme upper edges

of the gold bases are tacked to the lingual sides of the crowns, far apart, with a little sticky wax (Fig. 618). The incisal ends of the crowns are inserted in the wall of plaster which was built over them and each one held firmly and the crowns waxed lightly to this wall labially and lingually (Fig. 619, *a* and *b*). Both sides of the ridge on the plaster model are given a coating of oil, so that any wax flowing through will not stick to it. The wall with the crowns attached is then put in place on the model, the extending plaster over the bicuspid at either end ensuring their being in perfect position. This is held pressed tightly to the model and the gold bases waxed firmly to the saddle and to the half caps, flowing the wax in quite hot at first so as to ensure its going entirely through from the lingual to the labial side and flushing it well lingually, carrying the wax well to the upper edge of the gold bases and down to back of the saddle (Fig. 620). After it has been chilled, the wax, near the tips of the crowns holding them to the wall is removed and the



FIG. 618

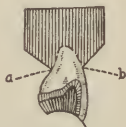


FIG. 619



FIG. 620

wall is lifted off. The wax holding the crowns in their bases is chipped away and the crowns are lifted out. It is then gone over very carefully with a small thin spatula, putting a little wax where needed and between the upper edges of the bases, so that none of the investment can get through and prevent the solder from filling in perfectly, and also around the distal sides of the cuspid bases and half caps. Great care must be used not to get any of the wax on the inside of the bases, but if any of it does it should be cleaned out. It is now taken from the model, the inner caps removed and it is ready for investing.

The investment must be quite thin labially and lingually as it will be necessary to solder from both sides, especially if the saddle extends all the way over the ridge. In this case it is essential that the investment be strengthened so that there will be little liability of its breaking during the soldering. This can be done by taking a piece of stove pipe wire and bending it carefully to the proper size

and shape. This is waxed tightly to the ends of the split pins and to one or two of the pins which go into the base of the crowns (Fig. 621). The investment is now mixed, the under side of the saddle and half caps, are carefully filled as are the upper sides of the crown bases under the wire. A part of the investment, which should be just a little stiff at this time, is put on the slab and the partly invested saddle and bases is pressed down into it and the rest of the investment is built up over the top, covering well the strengthening wire, and then left standing for a little time.

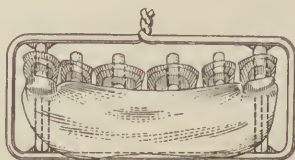


FIG. 621

When the investment has well set and is quite hard, it is carefully trimmed into shape. It is trimmed flush with the lower edge of the saddle and with the labial and lingual sides of the crown bases (Fig. 622)

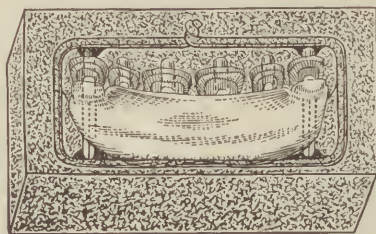


FIG. 622

The wax is then removed with a thin stream of boiling water and the piece is heated up for soldering.

It is placed on a coarse wire screen over a small Bunsen heater with a piece of tin or sheet iron between the flame and the screen until the investment is thoroughly dried out, and when dry, it is removed from the heater and left standing on the bench for a few minutes. It is then fluxed well with liquid flux at every point where it is desired that the solder should flow, and replaced on the heater directly over the flame, the tin having been first removed. It is heated up to a red heat.

The solder is 20-carat and is used in strips, first on the lingual side, keeping the piece and the solder well heated and drawing it well through to the labial side, filling full the space between the gold bases and the saddle and flushing it well on that side so as to leave the upper margins of the bases of a good thickness. The piece is then turned labial side up and the exposed surfaces are flushed with solder wherever necessary. A little of the investment is now broken away at each end so as to expose the outer sides of the cuspid half caps and bases and if it is needed, a little solder is flowed over to flush them out. When the piece has cooled, it is removed from the investment and boiled in the pickle to deoxidize it and dissolve the flux, and washed thoroughly and dried.

The bridge is finished in exactly the same way as the fixed bridge with porcelain crowns and soldered base. The surplus pure gold of the crown bases is roughly cut away and the bases are then carefully trimmed with a fine stone to the upper edge of the bevel, grinding from the inside outward. If a slight feather edge has been left on the inside from grinding, it is carefully removed with a small graver or other suitable instrument, after which, the crowns are carefully fitted and adjusted so that they go exactly into their proper positions. The bases are then ground, the crowns being held in place, and are finished very nearly flush with the crowns, leaving them a little full at the neck for the final finishing after the crowns have been cemented. The balance of the bridge is now properly carved, and finished with carborundum wheels, rubber and pumice polishing wheels, disks and finally on the lathe with pumice and rouge.

The edges of the saddle should be rounded and made perfectly smooth and even, and there should be no sharp edges at any part which might have a tendency to cut or irritate the soft tissues.

After washing thoroughly with soap and water and drying, it is ready for the cementing of the crowns.

A very careful and accurate description of the manner of cementing these crowns is given in Chapter XI, page 246, under the sub-heading of "Cementing the Crowns in Their Bases."

One thing should be remembered and that is, that the quality of any cement depends to a very great extent on the manner in which it is mixed. A good cement can be ruined by improper mixing. A poor cement thoroughly mixed may be better than a good cement not properly mixed. A little of the powder at a time is added to the liquid and thoroughly mixed before adding more, and with each



addition of the powder it is thoroughly spatulated until it is of the proper consistency and perfectly smooth and creamy.

### EXTENSION SADDLE BRIDGES AND SADDLE BRIDGES WITH ANCHORAGES AT EACH END, RESTORING POSTERIOR TEETH.

The technic to be followed in the making of these two bridges is identical and a description of one will answer for both.

The most particular piece of work which the crown and bridge specialist may be called upon to do, and the one which requires the greatest skill and accuracy in its accomplishment, is the making of a satisfactory extension saddle bridge for the lower jaw, restoring the lost molars or molars and bicuspid. A bridge of this character, if it is properly made, will prove as satisfactory as any piece of bridge-work which can be placed in the mouth. On the contrary, if it is not made, fitted and adjusted as it should be, it will prove most unsatisfactory and will ruin the abutment teeth more quickly than any other form of denture. Extension saddles should not be placed in the mouth excepting where the teeth have been out for a long time and the ridge has become well resorbed, and the tissues are well hardened. It is rarely that they should be used unless the teeth have been out for at least a year.

In almost every case in the lower mouth, there should be at least two anchorages, either two bicuspid, or a cuspid and bicuspid, although there have been cases where the alveolar ridge was very pronounced and very hard, especially where a partial plate had been worn for a long time, where a single anchorage has been sufficient and has carried a bridge satisfactorily for many years.




FIG. 623

When a mouth is in the proper condition for a bridge of this character, the top of the ridge is very hard, in fact there is but little thickness of soft tissue over the bone on the top of the ridge, and this hard ridge will not be much more than one-sixteenth of an inch broad at that point, the tissues thickening gradually on either side as they leave it, as in Fig. 623.

Next to the proper preparation of the abutment teeth or roots, and accuracy in the making and fitting of the abutment crowns, the success of a bridge of this kind depends upon the perfect adaptation of the saddle to the ridge.

It is always best to first make the abutment caps or crowns. If they are to be telescope crowns, then these crowns should be made and articulated, and also connected together, making sure that the abutments are parallel. If they are to be porcelain, or porcelain-faced crowns, the entire inner caps are made and paralleled, and the impression taken of these. A model is prepared and the outer half caps with the split pins are made and united together. These, or telescope crowns, whichever are to serve as the abutments, should be in position on the roots when the impression for the saddle is taken.

**Taking the Impression and Making the Dies and Counter Dies.**—The next step is to secure an accurate impression. The writer has obtained excellent results by the following method:

An impression of the ridge is first taken in modeling compound, using a sheet of the compound about one-quarter of an inch thick and not softened too much. This is passed well back over the abutment teeth and ridge and pressed down at the back and on each side with the fingers so as to secure as good an adaptation as is possible. It is then removed from the mouth and chilled. This modeling compound impression is used as a tray for taking the plaster impression. The plaster is mixed fairly stiff so that it will press hard on the soft tissues. This composition tray is filled with plaster in the usual manner, placed in position, pressed down firmly, and so held until the plaster has well hardened.

A good impression having been obtained, the model is then made from it. If a zinc die is to be used, it should be of good depth, at least one inch at the shallowest part, so that there will be no chance of the die springing or breaking in the middle when swaging the saddle (Fig. 624).

The model having been prepared, the outline for the saddle is marked upon it. The saddle should be broad, and should be carried well over the ridge both buccally and lingually, so as to have as wide a bearing on the ridge as it is possible to get, for the wider the bearing which the saddle has, the greater will be its usefulness to the wearer.

The edges of the saddle should be turned up somewhat, so that it will present a thick, rounded surface to the soft tissues, and

will not cut or injure them. A much broader saddle can be worn with comfort by having the edges well rounded, than would be possible if the edges were left fairly sharp. These edges, when the bridge is completed, should be at least as thick as a No. 16-gauge wire. In order to turn the edge of the saddle, the model is built up with wax as shown in Fig. 624, before the die and counter die are made. If the die and counter die are to be made of fusible metal, the outline of the saddle is marked on the model, and a modeling

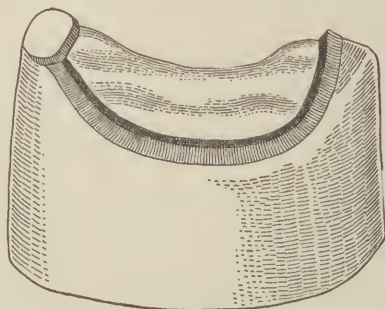


FIG. 624

compound impression taken. This is trimmed, a model made from it and the fusible metal poured directly on this model as described in the making of the die and counter die for swaging the saddle for the anterior bridge (page 350). The writer prefers the latter because of the absence of contraction on cooling, and also on account of the ease with which it is manipulated.

**The Saddle.**—The saddle is swaged of soft platinum of No. 36-gauge. Platinum is always preferred wherever a saddle is used, as the tissues take more kindly to this metal, and it will keep a clean polished surface even better than will pure gold. Then, too, higher grades of solder can be used than would be possible with pure gold. The saddle should be large enough to allow for the edge being turned up all around (Fig. 625). The little swaging mallet shown in Fig. 626 is very useful in working down the platinum saddles before swaging them between the die and counter. It has a rawhide peen and will not mar the platinum. The saddle is hammered over the die and can be brought down close enough for swaging easily and in a very short time. Sometimes a soft pine or cottonwood stick, notched at the end and used with a hammer, will help in bringing it down. During the swaging it should be frequently annealed,



FIG. 625

but should always be cleansed in nitric acid after swaging before trimming or heating it up again. After the final swaging, it is again cleansed in acid and fitted to the model.

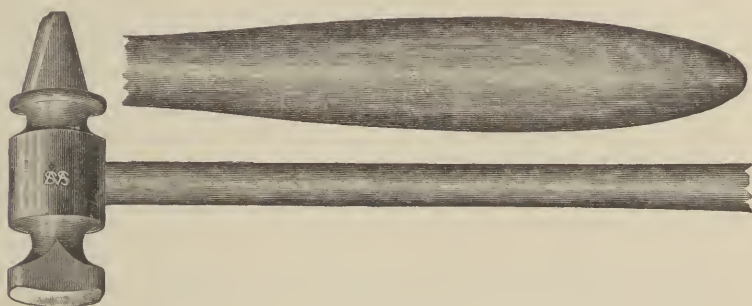


FIG. 626

The platinum being very soft is reinforced to strengthen and stiffen it and this is done with coin gold. The underside of the saddle is painted with an antflux or whiting at the top of the ridge back to within about one-eighth of an inch of the distal end and also at the front where it is turned up to meet the anchorage or abutment at that point to which it will be attached (Fig. 627). This is to prevent the gold from flowing over these places and the under side of the saddle. The coin gold is then flowed over the exposed parts of the saddle bringing it flush with the up-turned edges of the platinum and distributed as evenly as possible, as in Fig. 628. After-




FIG. 627



FIG. 628

ward it is made smooth with a carborundum wheel. The flowing of the coin gold over the platinum will have distorted it somewhat, so that it will be necessary to swage it again and after this has been done, it is again cleansed in the acid and is ready for adjustment in the mouth.

The teeth which are to serve as abutments having already been prepared, and the inner caps made, these are placed in position. The next step is that upon which the success of this form of denture entirely depends—the accurate adjustment of the saddle to the ridge.

**The Adjusting of the Saddle to the Ridge.**—The writer has tried various methods of adjusting the saddle so that it would rest comfortably, be firm and not rock, such as scraping the sides of the model, building up the top of the ridge, etc., but the results obtained have not proven to be anything like as satisfactory or accurate as have been secured by the following: The platinum of the front end of the saddle, which is to connect with the abutment cap, and which was not covered with coin gold is turned back a little so that it will clear the abutment when it is in place. It is now placed in the mouth with the forefinger of each hand resting on either side of the saddle, pressing it in place and is rocked from side to side. It will be found that it is resting on the top of the ridge (Fig. 629). It is riding on a little ridge of bone not over one-sixteenth of an inch wide, and is not bearing anywhere else. Should this condi-



FIG. 629



FIG. 630

tion not be remedied resorption would rapidly take place, allowing the piece to sag, and bringing the whole strain on the abutments, with the result that within a comparatively short time the roots would be loosened and lost.

The rocking of the saddle from side to side will give an idea as to the amount of correction which will be needed. The saddle is removed from the mouth and placed on the model or die. It is then raised off from the ridge a little and the sides pressed inward to it, the fingers grasping the lower edge of the saddle at points *a* and *a*, Fig. 630. It is then replaced in the mouth and tested again by rocking it. Should the saddle still rock a little, it is again removed and the sides pressed still further together. It is again placed in the mouth and tested, and this is repeated until the saddle sets perfectly solid without any rocking and rests comfortably on the



ridge. If it is found that the sides have been brought together too much, so that it presses too hard on either side of the ridge, it is again fitted to the die and the operation repeated until the saddle is perfectly comfortable and immovable under pressure.

**Securing the Relation of the Saddle to the Abutments.**—The front end of the saddle has been turned back so that it will clear the abutments. After it has been adjusted, it must be ascertained that it still clears the abutment, as should it touch it in the least, it may be pressing against the abutment much more heavily than would be suspected and so be forcing the saddle back out of position.

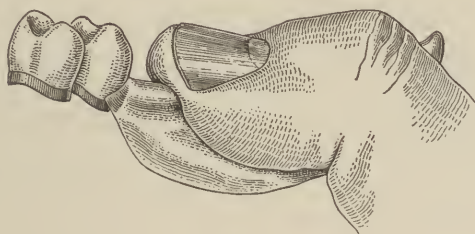


FIG. 631

The next step is to get an impression, securing accurately the relation of the saddle to the abutment caps. The saddle is pressed firmly into position on the ridge, and held tightly in place with as much pressure as can be brought to bear on it with the thumb or forefinger of the left hand. A saddle on the left side of the

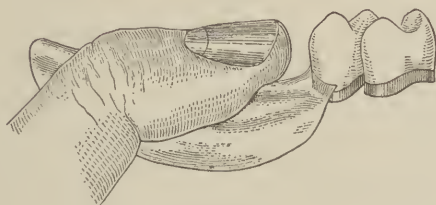


FIG. 632

mouth, is held down with the thumb, the fingers pressing the under side of the mandible (Fig. 631). Should the saddle be on the right side of the mouth, it is held in place with the forefinger of the left hand with the thumb pressing on the under side of the jaw (Fig. 632).

The plaster is then mixed in the same manner as for taking an

ordinary impression, but more of the potassium sulphate, or whatever may be used to hasten the setting, should be used, as the plaster for this purpose should set very quickly. The plaster is placed in the mouth with the spatula, covering the abutments, and the end of the thumb or forefinger which is holding the saddle in place and also covering the surface of the saddle wherever it is exposed. The saddle should be held very firmly and steadily until the plaster has thoroughly hardened. The impression is then removed from the mouth together with the saddle and abutment caps. These are replaced in the impression and attached firmly in their respective position with sticky wax. The inside of the inner caps are now given a thin coating of pink paraffin and wax so that they can be readily removed from the model after easting.

A small model not much more than the width of the saddle is then made. It should be of sufficient depth so that there will be no liability of the model being broken, and after it has sufficiently hardened the caps and saddle are removed and cleansed of the wax with chloroform or hot water.



FIG. 633



FIG. 634



FIG. 635

The abutment caps and saddle are then replaced on the model and the anterior part of the saddle, over which no coin gold has been flowed, is pressed over against the caps and trimmed so that it comes just about to the lower edge of the outer cap, should it be a telescope crown, as in Fig. 633, and labially and lingually not quite to the middle of the cap as *a a*, Fig. 634. Should the attachments be caps with tubes and split pins, where facings, or porcelain crowns are used the saddle should be fitted to the lower edge of the half-band and extend part way labially along the floor to *a a*, Fig. 635.

This end of the saddle is then tacked to the abutments with sticky wax and a piece of iron wire is bent over the occlusal surface or the floors of the caps and carried along the saddle and waxed firmly in position with hard, sticky wax (Figs. 636 and 637). This is to prevent the possibility of distortion when the inner caps are removed and the saddle is being invested. One or two small wire

clasps are placed across the under side of the saddle, grasping the lower edges on either side, to prevent its spreading and becoming distorted under heat. The inner caps are now removed and the



FIG. 636

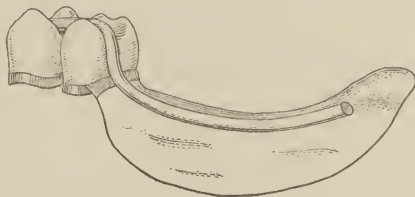


FIG. 637

saddle with the outer caps attached are invested. The outer caps are filled with investment which should cover the lower edges of the saddle; only a sufficient amount being used to hold the parts in position during the soldering (Fig. 638).



FIG. 638

It is then warmed up, the bulk of the wax removed and the whole heated until the remainder of the wax has burned away, or the wax can be melted out with a stream of boiling water, after which it is cooled slightly and fluxed well between the saddle and the caps. The whole is then heated up and the caps and saddle are united with 21-carat solder, using plenty of the solder and flowing it heavily over the platinum at the front of the saddle which has not been covered with the coin gold. After it has cooled, it is removed from the investment and cleansed in acid, and after it has been dried, it is replaced on the model, with the inner caps in place. It will frequently be found that when the caps are pressed in position on the model, that the saddle will be raised somewhat at the farther end (Fig. 639). This is due to the solder, of which a considerable

amount has been used, contracting on cooling and thus drawing up the end.

In order to make up for this contraction, it will be necessary to grasp the abutment caps, and raising the caps and saddle a little off the model, press the distal end of the saddle down, thus springing it back a little at a time until it assumes its proper position on the model. It is now ready for taking the articulation.

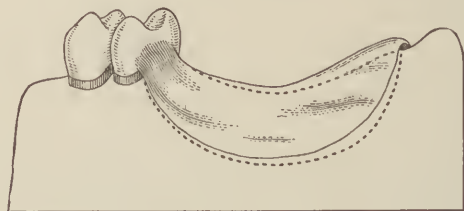


FIG. 639

**Taking the Articulation.**—The saddle, with the inner caps in position, is now placed in the mouth and carefully examined to see that the parts are in proper relation. When the caps are pressed in place the saddle should remain firmly seated on the ridge, and the appliance should be perfectly comfortable to the patient. In securing the articulation for this piece, wax or modeling compound may be used, as the appliance will probably come away with the impression and there will be little danger of distortion of the articulation as there might be if it had to be pressed back over a model.

The writer, however, prefers plaster in most cases, as in using plaster there is a certainty that a perfect articulation will have been secured. This is taken in the same manner as in other cases, the plaster covering the saddle well back, as well as the abutment caps, and taking in two or three of the teeth anterior to it. Some plaster is placed over the occluding teeth and the patient is instructed to close the jaws, the other teeth not included in the impression being examined to see that the bite is correct.

When the plaster has hardened, it is removed from the mouth, and the saddle, with the inner caps in place, are replaced in the impression. The inside of the inner caps are then given a coating of pink wax and the saddle and outer caps are waxed firmly in the impression, any under-cuts which may appear in the saddle which would prevent it from drawing freely from the model, being filled

out with pink wax so that the saddle can be easily removed after the model has been made. The model is prepared and articulated in the same manner as for an ordinary fixed bridge.

After the model has hardened, it is separated from the impression, the saddle is removed, cleansed of wax and is ready for the adjustment of the crowns.

There are different methods of finishing these bridges. Ordinary vulcanite plate teeth or diatoric teeth may be attached with vulcanite, crowns of various types may be used, tube teeth, or interchangeable teeth—now and again prove very satisfactory. The first to be described will be the soldered bridge with porcelain crowns throughout with burnished pure gold bases.

### BUILDING UP PORCELAIN BICUSPIDS AND MOLAR CROWNS.

It happens more often than not that crowns suitable in shade, shape or size cannot be secured for bridges in the back of the mouth, and it is necessary to build up some other crown or tooth for the purpose. At times a vulcanite pin tooth may be used by cutting out the pins and building up and very frequently a diatoric vulcanite tooth is used. In fact, up to within a short time, it was practically impossible to get any crowns suitable and the writer used the diatoric or trubite teeth almost exclusively. The trubite teeth have something of the outside shape, occlusally and buccally, of the old saddle backs, but have a large opening on the under side



FIG. 640



FIG. 641



FIG. 642

with a small hole extending into it from the mesial and distal side of the crown to give a strong attachment for the vulcanite (Fig. 640). The glaze is ground off the under side and lower edge of the crown and the sides notched, cutting to below the hole on the mesial and distal sides (Fig. 641). It is now built up heavily with the porcelain body, making it larger than it will eventually be to allow for shaping. A piece of a round wooden tooth-pick can be placed in the base and the body built around it (Fig. 642). It is then baked in the electric furnace to a temperature of about 2460 to 2480 degrees, or until it is well biscuited but not glazed. There will be practically



no shrinkage and the stick having burned out, leaves a hole for the post and saves the work of drilling one. The crown is then ground and carved to the desired shape and size and returned to the furnace for glazing which it does at about 2500 to 2520 degrees.

The porcelain bicuspid is ground and fitted to the abutment half caps the same as were the cuspid crowns in the anterior bridge, the buccal third resting on the floor as in Fig. 611. The molar crowns are ground to follow the outline of the saddle roughly leaving all of them a little long to allow for articulating.

After they are all properly arranged, they are roughly articulated, one at a time, beginning with the first bicuspid. They are not brought entirely down, but are left the least bit high, as the final articulating is done after the bridge is soldered.

The next step is the making of the occlusal wall and this is done as shown in Fig. 656, having a locking rest at each end so as to ensure of its going back into place exactly in its original position.

The mesial, distal and lingual sides of the bicuspid crown bases are now beveled in the manner described, deepening it a little mesially and distally as in Fig. 385.

The molar crowns are ground just to clear the saddle so that the solder can readily be drawn through from the buccal to the lingual side and are beveled as shown in Figs. 648 and 649.

If necessary, the holes in the bases of the crowns are deepened or enlarged.

The pure gold bases are made in exactly the same way as for the crowns in the anterior bridge, the posts are soldered in and after having been cleansed, are replaced on the crowns, placed base down in a napkin and twisted to ensure close adaptation. The upper edges of the bases are then tacked to the crowns at the buccal and lingual sides with a little sticky wax.

The crowns are then put in place in the occlusal wall, held tightly and tacked to it on the buccal and lingual sides with sticky wax. The wall, with the crowns attached, is put on the model and held firmly in position while being waxed. The bicuspid crowns are first attached, the wax being quite hot at first so that it will flow well through between the bases and floors of the half caps from the lingual side. The molar bases are then waxed to the saddle, carrying the wax well through to the buccal side and filling and flushing it full on the lingual side from the lower edge of the saddle and half caps to the upper edge of the bevel of the bases, after which it is filled in and flushed the same way on the buccal side. After it has

been thoroughly chilled, the wall is loosened from the crowns, by chipping away the wax, and taken off as are the crowns from the bases.

The bridge is then removed from the model, touched up with wax wherever necessary and it is ready for investing. A wire is shaped and waxed to the split pins and crown posts the same as for the anterior bridge (Fig. 621), and invested and soldered in the manner described (Fig. 622).

After it has been cleansed in the acid and dried, the surplus pure gold of the bases is cut away and the bridge is finished and polished as was the anterior bridge and the crowns are fitted and adjusted so that they go exactly into place and are perfectly seated.

After they are all perfectly adjusted the final touch is given to the articulation. This is a most important step in the making of any bridge-work either fixed or removable. It must be made so that it will function perfectly without any undue strain on any of the teeth or abutments and at the same time the normal occlusal surfaces of the teeth must be preserved in order that the patient may masticate thoroughly.

The crowns are articulated with extreme care one at a time, beginning with the first bicuspid. Small fine stones are used together with articulating paper and the crown is touched at the necessary points until the articulator can be moved in any direction without there being the slightest strain on the crown. When this has been completed, it is fastened in place with sticky wax and the second bicuspid is gone over in the same way, and then the first and second molar, each being fastened in place as it is completed.

After they are all completed, the occlusal surfaces of the crowns are carved and the fissures are deepened to reproduce as nearly as possible the cusps and fissures of a normal tooth. Small, fine knife-edge carborundum stones, of which the Miller stones are probably the best, and a diamond graver are most suitable for this purpose.

The carving having been completed the occlusal surfaces are stained and afterward the crowns are cemented as described in Chapter XI, pages 246, 247.

### EXTENSION SADDLES CONNECTED BY LINGUAL BAR.

Where the posterior teeth have been lost on each side in the lower jaw, if the teeth or roots that are to serve as abutments are in a somewhat weakened condition, or if there is but a single available

abutment on one side, and two on the other, or one on each side of the mouth, it is best that the two saddles be connected by a lingual bar. This will add greatly to the strength of both pieces, each side supporting the other against lateral stress. If the abutments have been accurately paralleled, the roots are held firmly in place and an abutment which has been quite loose, will in nearly every case, become firm in a comparatively short time.

The saddles are struck up of soft platinum as described, only instead of rounding them up to the distolingual sides of the bicuspid half caps they are left broad, the upper edges are fitted to the lingual sides of the half bands and the lower edges are carried as far forward as the mesial sides of the stumps as in Fig. 643, *a a*.

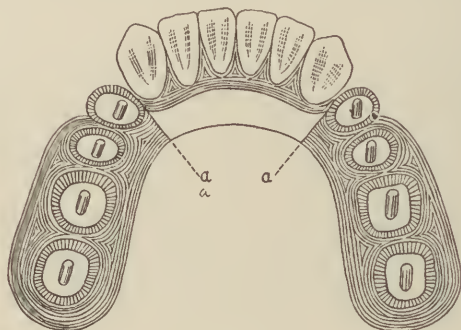


FIG. 643

They are then flushed with coin gold, making it thick and heavy opposite the stumps where they are to be connected to the lingual bar (Fig. 643, *a a*).

The saddles are now adjusted to the ridges in the mouth and the relation of the saddles, with caps in place, is taken with saddles under pressure in the manner previously described. The models are then made, the mesial ends of the saddles fitted carefully to the caps and half bands, waxed, removed, invested and soldered with 21-carat solder. After having been cleansed, they are again placed in the mouth and a modeling composition or wax bite is taken. The impression is taken in plaster with a tray, with the saddles and caps still in place. Care should be taken to get an accurate impression of the anterior teeth, especially on the lingual side, and of the gum well down between the ends of the saddles.

The model is now made and nearly articulated, the crowns are ground in and the saddles are made and finished except at the

anterior ends. These are ground and filed straight across, leaving the edge thick and flat. They are then placed on the model and the outline for the lingual bar scratched in the plaster. It should be carried low enough to clear the necks of the teeth well (Fig. 643).

A modeling compound impression is next taken of this between the extending ends of the saddles and the outline of the bar will show up plainly. This is trimmed the same as shown in Fig. 603. A model is now made and the dies and counter dies poured as in Fig. 606. The matrix for the bar is struck up of soft platinum and is filled in with coin gold, or a piece of platinized gold wire can be bent to lay in the bottom of this platinum matrix and the coin gold filled in around it. The latter way makes it a little stronger and the bar can be made a little lighter. It is ground to shape and finished, making the upper side oval and rounding the corners so that it will not irritate the gum (Fig. 644), after which the ends are accurately fitted to the ends of the saddles. A piece of thick tissue paper is now placed under the bar, to raise it a very little so that it will not press too tightly on the gum, and the ends are waxed to the saddle. A heavy wire is shaped and waxed heavily to the saddles and bar to prevent distortion while removing the inner caps and investing. The saddles and bar are united with 20-carat solder, after which it is finished and polished. The final touches are now given to the articulation, the occlusal surfaces are carved and stained and the crowns are cemented and it is ready for the mouth.



FIG. 644

It has for some years been the practice of the writer when making saddles for both sides in the lower mouth, even where there are two perfectly good anchorages on each side, to parallel all of the abutments the same as though the two saddles were to be connected and made into one piece at that time. This is simply a precautionary measure. If at any future time any of the roots of either side should show any tendency toward weakening, an impression could be taken with the saddles in place, the model prepared and the lingual bar made and connected to the saddles with the certainty that the piece would go into place exactly as it should. If the two sides are not made parallel and at some future time it might be desirable to connect them, it would perhaps necessitate the making over the abutments of one side before they could be united so that they would go in the mouth properly. If the saddles are properly made and there is perfect occlusion in the first place, it is very rarely that any change is necessary, even after they have been worn for many years.



### EXTENSION SADDLES IN THE UPPER MOUTH.

Extension saddles in the upper jaw are frequently indicated and if used only where they should be used, and under proper conditions, they will prove as satisfactory as any bridge-work that can be placed in the mouth. The number and arrangement of the abutments are very important factors in a fixture of this kind. An arrangement of abutments, which in the lower jaw would be ideal, in the upper jaw might prove to be altogether unsuitable. The weight of a piece of this kind is not objectionable in the lower jaw, but in the upper jaw it is a positive detriment.

Where the molars on one side of the upper jaw are missing, the cuspid and two bicuspids would form ideal supports for a bridge of this kind, but the two bicuspids alone would not be sufficient and the weight of the extension would have a tendency to drag on the abutments and loosen them. If the first bicuspid is missing however, the cuspid and second bicuspid would safely carry the first bicuspid dummy and the extending saddle with the two molars. The weight of a bridge of this kind must be distributed to the best advantage and the farther separated the anchorages are, the greater are its chances for long years of service.

Where the molars on both sides of the mouth have been lost, if the work is properly constructed, the two bicuspids on each side will carry it. In fact, there have been cases that have held up for years supported by but a single tooth on each side of the mouth, the two cuspids or bicuspids. Of course, there have been an untold number of failures, but by far the greater number of these failures have been due to faulty construction.

The manner in which a very large majority of these extensions are made is a mechanical impossibility, and the structure is doomed, even before it is started, together with the abutments. One case will serve as an illustration of a denture of this type.

The two bicuspids on either side are crowned and the saddles are made and connected with them. Impressions are then taken with these in place and the model made and articulated. A heavy bar or broad band of gold is then made to run across the palate and is connected with the saddles near the distal ends or at the middle. Often bars will extend from the abutments back to this and connect with it to give stability to the piece (Fig. 645).

As stated before, in a case of this kind the weight must be judiciously distributed, but here, in addition to the weight of the saddles,



an extra mass of gold is carried back beyond the line of the abutments, thus greatly increasing the weight and the downward drag which will surely eventuate in the ruin and loss of the bridge together with the anchorages.

Very often these saddles with the connecting bars are cast, thus increasing the weight and making the structure still more dangerous.

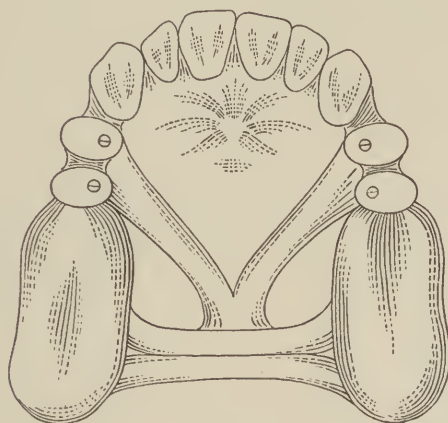


FIG. 645

An appliance can be made for a case of this kind that will be practical and give good service for many years. It is made after the plan of the lower saddles connected with a lingual bar.

The abutment caps are completed, both outer and inner, and put in the mouth and impressions for the saddles taken. The models are made, and the dies and counter dies run. The platinum saddles are struck up and should extend down on the palatal side of the outer cap of the second bicuspid for about one-eighth or three-sixteenths of an inch, but the distance should increase opposite the first bicuspid (Fig. 646). The saddles are covered with coin gold and are made thick at the sides and at the mesial ends. They are then adjusted to the ridges and the relation of the caps and saddles, secured in plaster with the saddles under pressure. The models are made, the mesial ends fitted to the floors and lower edge of the half bands, waxed, removed, invested and soldered with 21-carat solder. After cleansing they are replaced in the mouth and the bite and impression taken and afterward the models are made and articulated. The two bridges are constructed and polished except

the mesial end where they are to be united and the crowns are nearly articulated, but not cemented. The mesial ends of the saddles are filed flat, straight across and replaced on the model. The outline of the connecting bar is now marked on the model, as shown in Fig. 643, only much broader proportionately than in the lower. The modeling compound impression is taken and trimmed, the model, die and counter die prepared and the platinum bar matrix swaged and filled as described. The bar is then finished, fitted to the ends of the saddles, held tightly in place against the model and wired, waxed, invested, soldered and finished (Fig. 646). The crowns are finally articulated, carved and stained and cemented.

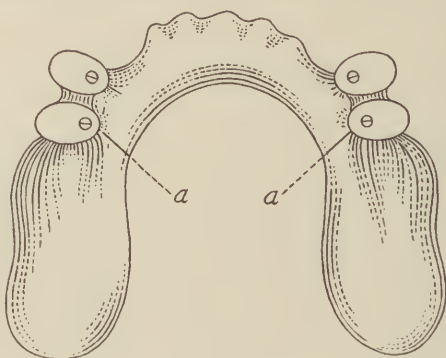


FIG. 646

In this case, the crowns should be ground quite close to the saddles so as to use a minimum amount of solder, as all upper extension saddles should be made as light in weight as possible, consistent with strength.

In the appliance made in this way, the weight of the piece is more evenly distributed and there is no likelihood of the distal ends of the saddles sagging, as they will do if made in the manner first described. The heavy connecting bar, extending as it does far forward beyond the abutments, acts as a counterpoise to the weight of the saddles and the pull is more directly downward.

Then too, the connecting bar being broad and resting as it does firmly against the tissues anterior to the abutments renders it impossible for the saddles to sag and tilt the anchorages forward, as any downward pull at the distal end would press the anterior bar more firmly against the tissues.

An appliance of this kind will give perfect satisfaction and will last a great many years.

## CHAPTER XV.

### METHODS OF USING PORCELAIN CROWNS WITH CAST BASES IN REMOVABLE BRIDGE-WORK. FACINGS WITH GOLD OCCLUSAL SURFACE.

WITH the advent of the casting process, came the still more general use of all porcelain crowns for bridge-work.

The casting process, however, has its limitations, and is very far from being a "cure-all" for everything. There are far fewer cases where this process is really indicated than many seem to think. Those who expected to use it to the exclusion of every other method have doubtless found themselves badly mistaken.

In long bridges, where great strength and stability are essential, the casting process is not indicated, as the cast bridge is far inferior in strength to a soldered bridge, and the shrinkage of a large piece in casting is such as to render it unsuitable where great accuracy is required. In some instances, it is much more suitable for fixed bridges than removable, and then again, the reverse may be true. Good judgment must be used in its application, and it must be used only where indicated to avoid disappointment.

In a large number of instances, the casting process may be used for certain parts of the work, but it is very rarely that it should be used throughout the whole operation.

The principle use which the writer has found for the casting process in bridge-work, has been in the making of bases for the crowns. In the beginning he used it quite extensively, but has been discarding it gradually in favor of the swaged, or burnished pure gold base.

The greatest difficulty with which the operator has to contend in making these bases is due to the contraction of the cast metal on cooling. The result is that the crowns do not fit as they should, and there is more or less cutting, trimming and fitting to do, before they will go into place, and not infrequently it is even necessary to do the work over again, and perhaps even then the desired result will not be attained.

The method has been tried of first burnishing or swaging pure gold over the bases of the crowns and then waxing up and casting on to the pure gold. This has perhaps improved the matter some-

what, but still it is very rarely that it has been possible to secure anything like a perfectly-fitting base, especially if the crowns are of any considerable size, for with the larger castings there is a proportionately greater amount of shrinkage.

One method of overcoming this difficulty is that of building out, or enlarging, the base of the crown before waxing, in order to make up for the shrinkage of gold. After some experimenting, a plan was devised, which, while not entirely overcoming the difficulty in every instance, probably due to faulty technic, has, in the majority of cases reduced the trouble to a minimum. The method does not do away with the shrinkage of the gold, for that is an inherent property which nothing can overcome, but by it the operator may counteract or make allowance for this contraction of the metal on cooling.



FIG. 647

The method of procedure is as follows: Tin foil, of varying thicknesses, according to the size of the crown which is to be used, is burnished or swaged over the crown base, in reality first making a base of this metal, letting it extend just a little above the beveled edge of the crown, as in Figs. 647 and 657.

The tin foil base is then lubricated with cacao-butter, and the wax base is built over the tin foil, the lubricated surface allowing of its easy removal. The size of the base of the crown has, of course, been increased by the amount of the thickness of the tin. Allowance for the shrinkage has thus been made so that when the crown is placed in the casting it fits very closely, and if the technic has been carefully carried out there will be little or no trimming to be done after casting. The thickness of the tin foil is varied according to the size of the crown, the largest of course requiring the heaviest foil. Several sizes may be used, running from two- or three-one-thousandths to five- or at times even six-one-thousandths of an inch in thickness. The burnishing of the foil over the bases is very quickly and easily done. The lighter foil can be pressed nearly to place with a piece of soft rubber and the wrinkles at the edges smoothed out with the thumb nail or a piece of orangewood. With the heavier foils a piece of orangewood and a small burnisher are all that are required to secure the close adaptation which is necessary to ensure a perfect-fitting base.

In making the bases for a series of crowns for a bridge, it is not always advisable to cast them together in one piece. The obvious reason for this is that if the bridge be of an considerable length,

the shrinkage would be proportionately greater in that direction, so that it would be necessary to grind the crowns on their approximal surfaces, before they would go into position on their bases. This would result in shortening the body of the bridge, and leaving a space at the extremities between the crowns and the adjoining teeth or the abutments. The best method is to cast the bases separately, and only in very rare instances should more than two bases be cast together. The casting of each base separately, and afterward uniting them does away with the shrinkage which would otherwise take place.

The casting of the bases for abutment crowns may be done directly on the caps, or they may be cast separately and afterward soldered to the caps, and the operator may choose which ever manner he wishes, although the latter method is perhaps preferable at times in removable work, as there is less danger of disturbing the accuracy of adjustment between the outer and the inner caps.



FIG. 648



FIG. 649



FIG. 650




FIG. 651

The same method of procedure obtains where a saddle is used as an auxiliary support to the abutments and the crowns are mounted on this saddle. If the saddle is small, as it would be in the case of a restoration of a single tooth, and if there is not great depth between the occluding teeth and the saddle, the crowns are ground so as to leave sufficient space for the base (Fig. 648) and then beveled as shown in Figs. 648 and 649. The crowns are tinned and lubricated in the manner described, but the saddle is left perfectly dry and clean. The wax is then flowed between the bases and the saddle and carefully carved to represent the gum contour. The sprue wire is attached to the lingual side, and the crowns are removed from their bases as in Figs. 650 and 651. A little space on the sides of the saddle is left exposed and free from wax so that it may be caught and held firmly in the investment for casting. After investing, it is cast in the usual manner with coin gold.

After the casting has been made and cleansed, it is waxed to the abutment cap or caps, as the case may be, and invested prepara-



tory to soldering the base and saddle to the caps. The piece is then heated up and soldered with 20- or 21-carat solder. Where the bases are cast separately and afterward soldered to the saddle or the caps, both the saddle or caps and the tinned base of the crowns are first lubricated. A little of the inlay wax is then pressed into the hole in the base of the crown to serve as a post and trimmed off so that it is only a little more than flush with the base.

The crown is held in position on the model by the wall which is made for this purpose, and the inlay wax is flowed over the caps and the saddle between it and the crown. The wax should be used quite hot so that it will attach itself to the wax post in the base. The space between the cap and base is well filled in, leaving it perhaps a little more than flush with the sides of the crown, covering the beveled edges well. It is then carved and the sprue wire attached to the lingual side. The crown is then carefully lifted away from the wax base and the wax base removed from the cap or saddle.



FIG. 652



FIG. 653



FIG. 654

Before waxing, it is well to make a couple of little pits or slight grooves at different parts on the cap or saddle so that when the base is cast, it will be positively seated in its proper place (Fig. 652). On the cap a slight countersink with a bur or drill may be made in the top of the post and another at some point near to it and on the saddle at any place where the platinum has been covered with coin gold. After the bases have been cast and cleansed, they are adjusted in position on the saddle or caps, waxed and invested, being held in place by a little wire clamp. The top of the post being slightly counter-sunk the end of the wire clamp is pointed.

In the case of a saddle, the wire clamp extends from the top of the post to the under part of the saddle directly beneath it, just clearing it on the buccal or lingual side, as shown in Fig. 653. Where the base is to be soldered to the half cap, the wire extends from the

top of the post to the under part of the floor, and as nearly on a line with the crown post as possible, as shown in Fig. 654.

The investment should be very light and just fill the under side of the cap or saddle, having only enough to hold the parts in position, leaving the whole of the upper parts exposed. This facilitates the thorough heating-up of the piece and the solder is easily drawn through from the lingual side, uniting the bases to the saddle and to each other. The crown side of the bases should be well coated with whiting or some antflux, so that there is no danger of the solder flowing over this surface.

The solder is used in strips, and is fed from points *a* in Figs. 653 and 654. The invested pieces are heated up very highly and the solder drawn entirely through from these points. It may be flushed over the lingual sides as much as is required. Twenty or 21-carat solder is used for this purpose, but the 21-carat is to be preferred, as it is not likely to be disturbed when a lower carat is used in a subsequent soldering operation.

**Deep Saddle.**—Where there has been a considerable amount of resorption and there is a great depth between the occluding teeth and the ridge, it would make these bridges unnecessarily and undesirably heavy to build solid bases extending from the crowns to the saddle. This will apply where there is to be an abutment at each end of the bridge, and also in extension saddles which are anchored only at one end, as in the lower jaw where the molars are missing.



FIG. 655

The bases may be made in the form of a ring, covering the beveled edge and extending only far enough underneath to form a positive seat for the crown, as in Fig. 655.

After the crowns have been ground in place, they are fastened in position with sticky wax and plaster is flowed over the occlusal surfaces extending over the buccal and lingual sides for a short distance and engaging the plaster teeth or model at either end, as in Fig. 656. The lower edges of the crowns are beveled, as Figs. 648 and 649, so that the bases may extend over the gingival edges, gripping them tightly, thereby affording a firm seat and minimizing the possibility of a fracture. They should be beveled so that the line of the bevel on the buccal and lingual sides will follow the natural curve of the occlusal surfaces so as to present a symmetrical appearance which would not be the case if they were beveled carelessly, one being shorter than the other. This can be done very easily, as the occlusal ends of the crowns resting in the plaster, expose the

entire body of the crown, the operator can plainly see what he is doing and nothing is left to guess work.

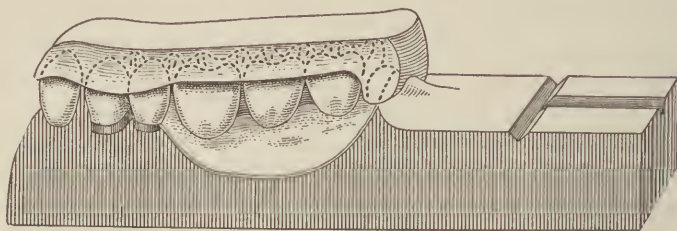


FIG. 656

The bases of the crowns are then tinned in the manner already described and should be made so they will barely touch mesially and distally and are caught with very little sticky wax on the buccal and lingual sides (Fig. 657, *a* and *b*). If there is a porcelain crown on the mesial abutment, the base of this should be first made and attached to the cap. The other bases are then built on in wax, being waxed against the base on the anterior abutment, but between each of the others, a thin piece of oiled paper should first be placed, completing the base over the first crown, then smoothing the distal side, placing in the waxed paper and then making the wax base for the



FIG. 657



FIG. 658

second crown. When this has been completed, the distal side is smoothed off and another piece of the waxed paper is put in and the third base completed. These bases are all beveled inward, as shown in the illustration, Fig. 658, the reason of which will be seen later.

The sprue wire is now attached to either the buccal or lingual sides, as in Fig. 659, and each of the bases are cast separately in coin gold. After casting, they are cleaned in hydrofluoric acid. They are now fitted to the crowns and it is rarely that it will be found necessary to do any trimming in order that the crowns may be properly seated, except to cut out any little bits of the metal

which may be there owing to small bubbles in the investment, but this is seldom necessary if the technic has been carefully followed throughout.

The buccal and lingual sides are then smoothed by beveling downward and inward, as already stated. The occlusal surfaces of the crowns are pressed into the plaster impression and are tacked lightly on the buccal and lingual sides with sticky wax. The cast ring bases are then placed on the crowns and are pressed tightly in place and waxed together with sticky wax, after which they are removed, invested and united with 21-carat solder. These united bases are then placed back on the crowns and tacked lightly with wax, the whole being suspended from the plaster impression extending over the occlusal surfaces, as in Fig. 656. They are then placed on the model and the bases are attached firmly to the abutment caps at either end or where there is an extension saddle mesially to the base of the crown serving as an abutment and distally to the saddle on which the last ring should rest, as in Fig. 660.

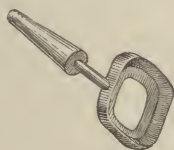


FIG. 659

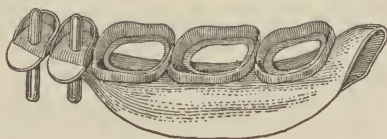


FIG. 660

The crowns are then removed, one or two small clasps placed across the under side of the saddle and it is invested for soldering. The under side of the saddle and abutment cap, or caps, are filled with the investment and the remaining investment is placed on the slab and smoothed off, leaving it about one-half an inch in depth. The saddle is then settled lightly in place to the depth of about one-eighth of an inch and some of the investment brought over the saddle at the middle part and under and over the middle ring, but not coming near the mesial or distal ends which are to be united to the abutments or the saddle, as shown in Fig. 661, *a* and *b*. The inside of the exposed rings and the inside of the base on the abutment caps are well coated with anti-flux and the investment is heated up and soldered with 21-carat solder, enough of the solder being used to unite the rings firmly.

The saddle is then cleansed and thoroughly dried and all the crowns placed in their proper positions preparatory to the final step in the making of the bridge.



The space between the saddle and the ring bases of the crowns is now filled with pink paraffin and wax both on the buccal and lingual sides. The wax is then carefully carved so as to restore the natural contour of the gum. About one-eighth of an inch of the edge of the saddle is left exposed and the wax carried up to about midway on the labial and lingual sides of the ring bases, as shown in Fig. 658. It is then carefully smoothed and polished.



FIG. 661

Plaster impressions are now taken of the carved surfaces, and if fusible metal dies and counters are being used, the dies can be poured directly into these as already described, but if zinc and lead are to be used, the model is made by pouring into this impression. The face of the model should extend from well up on the sides of the crowns to at least one-sixteenth of an inch below the lower edge of the saddle. (See Fig. 677.)

The dies and counter dies are made and plates of No. 28- or No. 30-gauge coin gold struck up and carefully fitted and adjusted to the saddle. The dies should be perfectly smooth and, if necessary, the surfaces should be polished before swaging-up the plates. One of the plates is carefully adjusted in position and held in place with a clamp over the edge of the saddle, and the piece placed in the investment, open side down, leaving the side on which the plate is to be soldered exposed, as in Fig. 662. The investment is dried out and the inside of the ring bases, the under side of the saddle and the plate, to within about one-thirty-second of an inch of its edge all around, coated heavily with whiting or other antifix.



FIG. 662

It is then well fluxed between the plate and the saddle and also between it and the rings, and the parts thoroughly united with solder. The solder is best used in strips and should be 20-carat. The plate is first united to the ring bases, flushing it from the



upper edge of the plate to the top edge of the ring, as in point *a*, Fig. 662.

After this has been soldered, the plate is united to the lower edge of the saddle at point *b*, Fig. 662. The solder is used in a strip and is fed in along the edge of the saddle between the two surfaces until it has thoroughly drawn through at all points throughout the length of the saddle, uniting the saddle and plate firmly. These extension saddles should not be chilled quickly, as should this be done there is a liability of their springing and becoming distorted. They should be allowed to cool slowly and are then removed from the investment and cleansed.

The plate for the opposite side is next clamped in position and invested in the same way as for the plate already united. It is then soldered in exactly the same manner as the first, uniting the plate to the ring and afterward to the saddle and after cleansing and drying is ready for finishing. The only points which need to be touched with the stone are at points *a a*, Fig. 663, where the plate is united to the ring and it should be necessary only to smooth this over but a very little unless an excess of solder has been used. The edge of the plate and saddle at points *b b*, Fig. 663, should be smoothed and rounded. It will not be necessary to touch the face of the plate with the wheels if the dies have been smooth, as the whitening or antilux which has been placed over the face should prevent any solder from flowing down over it. The bridge is polished as already described, following the carborundum wheels with fine emery and cuttle-fish disks and afterward touching lightly with pumice and then finishing with the rouge. The bridge is now ready for the cementing of the crowns.



FIG. 663

The object in making a saddle bridge in this manner, instead of casting what might be called the entire shell, and then uniting it to the saddle, is that the rolled coin-gold plates present a perfectly dense homogeneous mass, the surface of which can be easily polished, and which takes and retains a very high finish, while the surface of a casting is always more or less porous and will not take as high a polish. The swaged plates also make the bridge much lighter and stronger than it could possibly be made by casting.

The crowns are fitted with posts which extend through the opening in the bases into the body of the saddle. These posts may be made from discarded platinized gold split pins, the lower ends of

which are spread a little, as shown in Fig. 663. These posts are first cemented into the crowns. The hollow body of the saddle is next filled with cement, and the crowns put in place and held there under pressure until the cement has hardened (Fig. 663), after which the excess cement is cleaned away and the bridge is ready for the mouth.

A saddle bridge made in this way presents a most beautiful appearance and does away entirely with the showing of the gold. At the same time a maximum amount of strength with a minimum amount of weight has been obtained.



FIG. 664

**Vulcanite Attachment.**—Where a vulcanite attachment is used, the attachment of the saddle to the abutment caps must be reinforced. If telescope crowns have been used, round or half round platinized gold clasp wire may be attached near the occlusal end of the outer caps and passed down to the saddle with three or four loops along its length, to firmly secure the vulcanite to the saddle, as in Fig. 664.

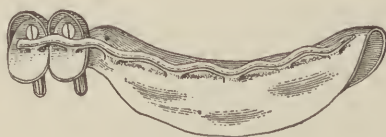


FIG. 665

Where caps, with tubes and split pins, are used as abutments, a loop of the half-round clasp wire may be run across the caps and back and over the saddle, as in the other case (Fig. 665). In either case, in using half-round wire, the rounded side of the wire should be next to the saddle and caps.

For the attachment of the vulcanite to the sides of the saddle, the coin gold covering is well stippled. This will make a very strong attachment and one which will hold as well as any that could be used, and it should be well and deeply stippled in both directions.

This will make a very strong union, so that the vulcanite cannot be torn away. This will apply where the ordinary vulcanite pin teeth or the diatoric teeth are used.

### FACINGS USED WITH A GOLD OCCLUSAL SURFACE.

In making the bridge where facings are used with a gold occlusal surface, it is better that the facings should not be ground to fit the saddle exactly, but should stand away from it for from one-thirty-second to one-sixteenth of an inch, as in Fig. 666. The object of this will be seen later. It is impossible to grind the facings so that they will fit the saddle so perfectly as to prevent foodstuffs or saliva from working in beneath them. It makes no difference how much time is spent doing it, and even though the joints are made very close, they will not be so after soldering. The tips of the facings should be high enough to touch the lingual surfaces of the buccal cusps of the occluding teeth, as in Fig. 666 *a*.

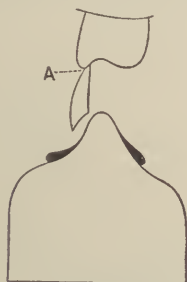


FIG. 666

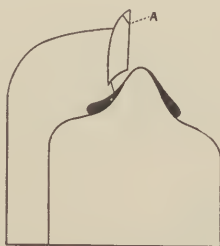


FIG. 667

After the facings have been ground, they are held in place with wax on the lingual side, and a wall of plaster built up on the buccal side nearly to the occlusal ends of the facings, so as to retain them in position after the wax has been removed (Fig. 667). The facings are then removed and the occlusal ends ground off at an angle of about forty-five degrees with the backs or lingual side, as in Fig. 667 *a*, leaving them of sufficient length so that they will clear the occluding teeth by about from one-sixty-fourth to one-thirty-second of an inch. This angle should be the same on all the facings, and the line on which they are ground should be continuous, one following the other as though they had all been attached together and then ground (Fig. 668). It will spoil the appearance of the piece if they are ground unevenly, so that the tip of one is higher than

the other, one standing up and the other down and it will look as though the piece had been thrown together haphazard, without care for artistic effect (Fig. 669).

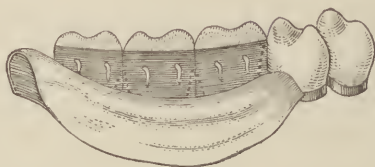


FIG. 668

The facings are then backed with thin platinum, the backings touching or overlapping each other slightly and extending from the beginning of the bevel at the occlusal end to the saddle, which they should touch closely all along, being carried straight down on a line with the backs of the facings (Figs. 668, 670). The pins are then flattened and bent upward or downward, pressing on the backings to hold them tightly against the facings.

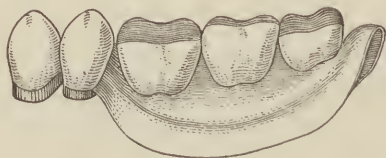


FIG. 669



FIG. 670

The facings are then waxed firmly to the saddle with hard sticky wax, the wax being carried high enough to support and hold the cusps but not flush with the lingual side of the cusps (Figs. 670).

**Cusps.**—Solid gold cusps are used, and they are selected and made in the same manner as are the cusps for a shell or telescope crown. The buccal side of the cusps are ground, or filed to a bevel to fit the bevel of the facings (Fig. 670). As each one is fitted, it is waxed lightly in place until they are all in position.

They are then ground or filed away on the lingual side so as to even them and not have one cusp broader or standing further lingually than the other. They should also be filed on a slight angle so as to follow the line of the lingual side as it will be when it is completed. This will give a broad point of contact for the lingual plate when in position and in finishing there will be no danger of grinding through into the hollow space on the inside of

the bridge (Fig. 671). If the cusps were not beveled in this manner, the edge of the cusp coming down as it does to a sharp angle, it can be seen in the illustration (Fig. 672) that the point of contact would be but slight and if it were ground off a very little in finishing it would break through into this hollow space beneath. If the cusps were over-beveled, or cut under, the effect would be practically the same (Fig. 673).



FIG. 671



FIG. 672



FIG. 673

After they have been ground and fitted, they are attached firmly with hard, sticky wax, but the wax should not extend to the lingual edge of the cusps. After they have been attached, the small end of the wax spatula is heated a little and passed under the cusp and raised slightly (Fig. 670 *a*), lifting the cusp on the lingual side so that on the buccal side the beveled edge of the cusp and facing will touch lightly at the tip, but there will not be actual contact at the lower or inner side of the bevel. The buccal and lingual sides of the bridge are now ready to be finished.



FIG. 674




FIG. 675

**Waxing and Carving for the Plates.**—The buccal and lingual sides are covered with wax, making the lingual side more than flush with the lingual side of the cusps so as to have plenty of stock for carving. The pink paraffin and wax is preferable, as it is fairly hard, is not sticky, and carves nicely. Both sides are then carved to represent the natural gums. On the buccal side it should be carried a little above the lower edge of the facings and well up between them, as in Fig. 674. On the lingual side, the carving is made continuous with the lingual angle of the cusp, as in Fig. 675, and the carving should correspond in depth and breadth to the facings on the buccal side.



The carving should be carefully done and the surface of the wax made perfectly smooth, in order to ensure the obtaining of a clean die so that when the plates are struck up they will be perfectly smooth and when the bridge is completed, they will require no finishing other than with the pumice and rouge.



FIG. 676



FIG. 677

An impression is then taken of each side separately, the plaster being carried from below the saddle to above the gum line and over the heel on the buccal side, as in Fig. 676. On the lingual side, the plaster is carried above the cusps and below the edge of the saddle (Fig. 677) and far enough over the heel to meet or overlap the impression from the buccal side.

If zinc and lead dies and counter dies are to be used, a model should be poured into the plaster impression, as owing to the shrinkage of the zinc it is desirable that the face of the die should present the face of the carved facings and not the reverse side. If, however, fusible metal is used for the die and counter, the dies and counter dies can be prepared as described on pages 349 to 352 or the impression may be made deep enough to serve as a model, as with this metal there is practically no shrinkage and it will make no difference whether the face of the die presents the cameo or intaglio (Fig. 677). These models should be at least one inch in depth so that there will be no sagging or springing of the die in swaging.

Where fusible metal is used, the sides of the model should be made nearly parallel so that the dies will be of that shape. The mould may be made of sand, or preferably of Dr. Gritman's calcar,<sup>1</sup> and the fusible metal poured in this. It will only be necessary to get one die for each side from a calcar mould, as all the other dies and counter dies which are needed can be secured from the original casting.

<sup>1</sup> Marble dust, moistened with glycerin and water, is cleanly, and takes the place of moulding sand.

The metal should be poured in the mould when it is not in a very liquid state, but it should be hot enough to allow it to pour fairly freely. This die is then chilled and wrapped in paper and a gum band placed around it, as in Fig. 678. The sides of the die being parallel makes it of a good shape for pouring the counter die. The die is then dusted with talcum powder and the counter die poured. In pouring the counter die, the metal should be as cold as it is possible to pour it. It is poured into the paper on the die until it is about the same depth as the die itself.

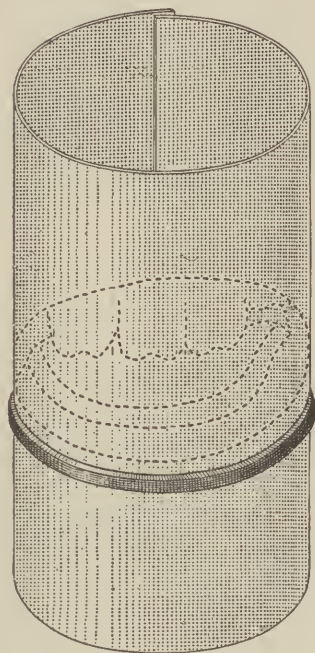


FIG. 678

After it has become chilled, it is readily separated and another counter poured from each of these. By wrapping in paper and dusting with talcum powder, in the same manner as in the first operation, any number of dies and counter dies can be secured and everyone will be an exact duplicate of those just made.

If the die is chilled and the counter die poured as cold as it can be made to flow, they will not stick, but will readily separate. As a rule, two dies and counter dies will be sufficient for swaging the plate, especially the buccal which is thinner than the lingual plate,

but for the lingual side it is sometimes well to use three as a sharper outline will be obtained in the plate than if only two had been used.

The dies and counter dies made, the buccal plate is struck up from No. 30-gauge coin gold, festooned carefully to fit around the facings accurately and carried over the heel of the saddle to about two-thirds the width of the cusp from the buccal side. The lingual plate is struck from No. 28-gauge coin gold and carefully fitted, the part going over the heel being brought in contact with that from the buccal side. The plates should be cleansed in nitric acid after each swaging and before they are trimmed or annealed, otherwise one heating after swaging, would entirely destroy them.

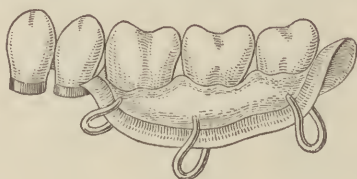


FIG. 679

After the final swaging, and when the plates have been thoroughly cleansed in acid and fitted, the pink wax is removed from around the facings and the saddle on the buccal side. The buccal plate is placed in position and held with small iron clamps, as in Fig. 679, two or three clamps being sufficient for the purpose. The saddle is then held over a small alcohol flame for a moment, or a hot instrument is held beneath it, to loosen the wax from the plate, and the teeth, with the body of the wax, are removed and laid carefully aside (Figs. 680 and 681).



FIG. 680



FIG. 681



FIG. 682

**Investing the Saddle.**—The inner caps are removed and the saddle is invested, lingual side down, only enough of the investment being used to keep it from springing (Fig. 682). The inside of the caps are filled with investment, care being used not to allow the investment material to come over the part which is to be soldered.

The investment should then be thoroughly dried out, the piece

well fluxed between the plate and the saddle and some pieces of 18-carat solder dropped in where the saddle and the plate are to be united (Fig. 682, *a*). The investment is then well heated-up and when it has reached a red heat, the blow-pipe flame is thrown on the under side of the saddle next to the investment and the solder drawn through from the inside all around.

As the solder begins melting at one point, the flame of the blow-pipe is moved along slowly from end to end until the solder shows all along the outer edge, giving a perfect union between the plate and the saddle. Twenty-carat coin solder may be used for this purpose, but as the coin solder has a much higher fusing point than the 18-carat, a great deal more care is required in using, otherwise the buccal plate may be burned. In using the 20-carat solder, it is fed along and drawn in from the outer edge, using the solder in a strip. However, as the solder will not show at this place, it is safest to use the 18-carat.

After the investment has been allowed to cool the saddle is removed, cleansed in acid and dried. The saddle is then warmed slightly and the body of the bridge (Fig. 680) is pressed back into place until the fitting of the lingual plate shows that it is in its correct position. The bridge is now ready for the final soldering.

**Soldering the Body of the Bridge and the Lingual Plate.**—In all soldering operations, cleanliness is absolutely essential, and there is no greater enemy to the free flowing of solder than is plaster of Paris. Cleanliness is especially needful in soldering a bridge of this character, as such a high degree of heat is required to make the solder flow in places which are deep down in the body of the bridge, that, unless perfect cleanliness is obtained, there is a great liability of burning the exposed parts. All of the parts which are to be soldered should be covered with wax before investing. The investment having been mixed it is placed on the slab to the depth of about one-half of an inch. The bridge is laid buccal side down on this and worked into it for perhaps one-eighth of an inch by using a slight pressure on the lingual side, agitating it slightly, and keeping the edges of the cusp and the lower edge of the saddle on a level.

With a small instrument (the curved end of the small wax spatula is suitable) the investment is worked up so as to cover a little more than one-half of the cusps and over the labial side of the saddle so as to cover about one-half of it, leaving the lingual half of the saddle and the lingual third of the cusps exposed, as shown in Fig. 683, *a a*.



Before the investment has thoroughly hardened, it is trimmed to the proper size and should be kept as small as possible, and still give support to the bridge. All of the trimming should be done at this time, before removing any of the wax. All the parts which are to be covered with solder should be cleansed, the plaster scraped off, and the nearby parts rubbed off with a damp cloth, or washed so that no plaster will remain. After the investment has hardened, it is warmed a little, to slightly soften the wax in contact with the different parts, and the bulk of the wax is lifted out, and the remainder can be washed out with boiling water.

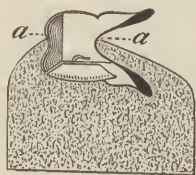


FIG. 683



FIG. 684

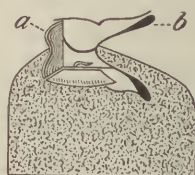


FIG. 685

It should then be dried out thoroughly with a gentle heat and a little powdered calcined borax sprinkled inside the body of the bridge. The piece is then heated up slowly until it is of a bright red heat and it is ready to solder.

Twenty-carat solder is first used at the mesial end to unite the saddle and cusps firmly to the abutments and then at the distal end, should there be an anchorage at that end, or the last cusp to the distal end of the saddle should it be an extension saddle. The solder is then flowed over the backings of the teeth and over the saddle and up to, and between the cusps so that all the exposed parts will show nothing but 20-carat solder. The backings of the facings should be covered to the depth of perhaps one-thirty-second of an inch or sufficient to cover the pins of the facings and coming up on the saddle and the under side of the cusps, as shown in the drawing (Fig. 684). It is not necessary, nor is it desirable, that this space be entirely filled, as that would make the bridge entirely too heavy, but only enough solder is used to give the necessary strength to the piece. After this has been finished, the soldering of the lingual plate may be undertaken. The under surface of the plate at the upper and lower edges is well fluxed, using the liquid flux and applying a little at a time and passing it through the flame to dry it off. The lower edge of the saddle



and also the lingual sides of the cusps at point *a* and *a*, in Fig. 684, are then fluxed and a little 18-carat solder is flowed over these points throughout the length of the bridge. Solder is best used in a strip in applying it to these points.

The piece is then well heated-up and the lingual plate placed carefully in position (Fig. 685). The whole bridge is brought to a bright red heat, a brush flame being used until the solder begins to melt, when a pointed flame should be used, passing it along the upper side, throwing the flame on the cusps (Fig. 685, *a*), and moving from one end of the bridge to the other until the solder has drawn through at every point and the plate united firmly to the cusps. If there are any points where the plate has not quite dropped into position, a pair of pliers may be used, one beak grasping the plate where it is not in exact contact, the other beak being on the under side of the investment, as in Fig. 686, *a*, and as the solder flows, the plate can be pressed in contact with the cusps, as it will bend very easily under heat.

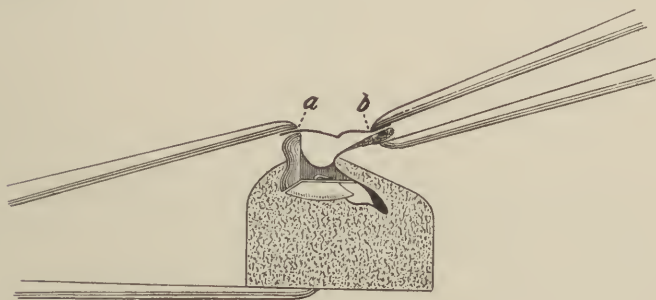


FIG. 686

The occlusal side of the plate being properly attached, the operator's attention is next turned to the lower side. The piece is reversed so as to bring the lower edge of the saddle toward the operator, and the flame is thrown on the under part of the saddle (Fig. 685, *b*), which is heated until the solder draws freely from the inside and has flowed along the entire length of the saddle. If it stands away at any point, it should be brought together with the pliers while the solder is molten, until it is in perfect contact all around (Fig. 686, *b*). Over the heel of the saddle, where the buccal and lingual plates come in contact, a little solder should be flowed until the two plates are perfectly united.

Twenty-carat solder may be used for soldering on the lingual plate

by first fluxing the cusps and the lower edge of the saddle and then placing the lingual plate in position. The solder is used in a strip and a small amount placed at a point of contact of the plate with the cusps, tacking it a little at first, and then feeding the solder in and moving it along slowly from one end of the bridge to the other. The lower side of the plate is now attached to the saddle in the same manner, feeding in the solder in a strip, and gradually drawing it through from one end to the other, after which the ends of the buccal and lingual plates, which come together over the heel of the saddle, are soldered.

The 20-carat solder has a fusing point so much higher than that of the 18-carat that it is safer to use the 18-carat unless the operator is an expert in the use of the blow-pipe. If, however, the plate has been carefully fitted, the line of solder at the point of union of the cusp with the plate is so fine that the difference in the color will not be noticeable. The greatest care must be used in soldering on this plate and the pointed flame should not touch it as the piece is necessarily brought to such a very high heat that the lingual plate can be burned in an instant, thus destroying it, and necessitating making a new one.

After the bridge has cooled it is removed from the investment, boiled in dilute sulphuric acid and washed in a solution of bicarbonate of soda and then rinsed in clear water. It is next dried as well as possible and then dipped in alcohol, or alcohol poured over it, and then again dried thoroughly, so that before any finishing is undertaken, there will be no moisture in any part, as should there be any moisture present, the dust of the grinding will work in the crevices and the spaces between the plate and facings, leaving dark lines which will present a very disagreeable appearance. This applies to the finishing of all bridges or crowns.

The bridge is then finished, first using fine carborundum wheels and grinding away any edges of the cusps, which may overhang the facings, until they are perfectly flush with the facing.

In grinding the cusps the grinding should always be done from the gold to the porcelain, thus burnishing the gold over the facing and making perfect joints. By so doing there will be no danger of fracturing the thin edge of the facing. On the contrary, if the grinding is from the porcelain to the gold, the fine edge of porcelain at that point will be shivered, making it rough, and impairing the beauty of the work.

On the other side, the lingual plate is ground flush with the

cusps and the lower edge of the saddle on both buccal and lingual sides are smoothed and rounded. It should not be necessary to touch either the lingual or buccal plates with the stone, if care has been used in obtaining smooth dies, and the plates have not been marred in swaging. The heel of the plate is finished with carborundum stones and afterward all of the parts which have been ground are smoothed off with sandpaper, or emery disks, and then cuttlefish, so that there will be very little finishing to do on the lathe.

The piece is now placed on the model and articulated and the cusps are carved as desired.

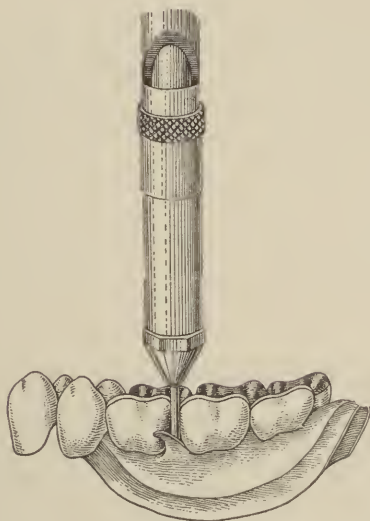


FIG. 687

**Filling Beneath the Buccal Plate with Cement.**—The next step, before the final polishing of the piece, is to fill the buccal side with cement. One of the points of the buccal plate, which has extended up between the facings, the point most nearly central should be used, is thrown out from between the teeth a little, sufficient to allow of the insertion of the point of a cement syringe (Fig. 687), and oxyphosphate of zinc, mixed fairly soft, should be forced in between the plate and the saddle and facings, filling the space. The cement should be forced in until it can be seen working its way out at both the mesial and distal ends around the necks, between the facings and the plate. While the cement is still soft

the point which has been thrown out to allow for the entering of the syringe point, is pushed back into place between the facings.

After the cement has hardened, the excess should be cleaned away from around and between the teeth. The spaces between the teeth are now partially filled in with gold, a plastic gold will be found best for this purpose, and carried over the points of the plate which extend up between the facings. The spaces should be filled so as to enable them to be smoothed nicely and also to obliterate any crevices or spaces which might serve as a lodgment for foodstuffs. The fillings are then smoothed and the bridge is finally polished.

**Polishing the Bridge.**—A felt wheel with pumice may be used over the surfaces, which it has been necessary to grind, but over the buccal and lingual plates a fine brush wheel, with a little fine pumice, may be used for just a moment. Small leather wheels mounted and used in the engine can be used in the small places, but the rubber wheels with pumice incorporated are more convenient. After the bridge has been washed, the rouge is applied. This can be used over the larger part of the bridge on a felt wheel, but over the fluted and uneven surfaces of the plates and the fillings between the teeth, the rouge should be used on a fine brush wheel, and the whole polished until the surface is smooth and highly finished.

### **SADDLE BRIDGES. ABUTMENTS AT BOTH ENDS.**

Where there is an abutment at each end of the saddle, the bridge is made in practically the same manner as the extension bridges.

In the anterior part of the mouth, the saddles are struck up and the relation, as in the case already described, of the saddle with the abutments, is secured with the saddle under pressure. Where it is possible to do so, the facings are ground flush with the gum, the saddle coming only to the lingual side (Fig. 688), but where there is great depth from the gum to the incisal edge of the teeth and where the lip is long and it is not possible to see the gum, or where greater fulness is desired, the saddle may be extended over the ridge and made in practically the same way as the extension saddle already described, a labial plate being swaged and fitted around the teeth and connected to the saddle as are the buccal plates to the saddle previously described (Fig. 689).

The facings are then backed and soldered in the usual manner, and the lingual sides carved and finished as desired.

There may be cases where there has been great recession and

shrinkage of the process and tissues, when it might be desirable to use single gum teeth, and in these cases the teeth are ground in the usual manner, the saddle coming in contact with the lingual sides of the teeth.



FIG. 688



FIG. 689

In other cases, detachable facings may be indicated, the gum contour can be restored by building out with porcelain gum body, and the whole cemented after the bridge has been soldered and completed, but no rule can be laid down covering the adaptation of these different styles of work, each must be decided by the individual requirements of the case.



## CHAPTER XVI.

### RETAINING MEDIA.

THE zinc oxyphosphate employed in the setting of crowns or bridges should possess the characteristics which would recommend the specimens to be used as filling material, and should be what is known as a hydraulic cement. It should, however, flow freely, and, as the difficulty of maintaining dryness is increased, it should set promptly and yet with sufficient deliberation to permit of the accurate adaptation of the crowns.

The operator should be familiar with the peculiarities of the particular cement he is using, as specimens of the different makes of oxyphosphate differ so markedly in their behavior, that it is unsafe to use them for this purpose without having first tested them.

The value of a cement depends as much, perhaps, upon the manner in which it is mixed as upon the kind of cement which is used. The cement should always be thoroughly spatulated. A little of the powder should be first well worked into the liquid, a very little of it being dissolved during the process. The powder is then added a little at a time, mixing it well until enough has been incorporated to give it the desired consistency and the whole mass is perfectly smooth and creamy.

The spatulas used should be strong, but not so heavy but what there is a considerable amount of spring to the blade, and of ample size to do the work thoroughly. Fig. 690 shows a spatula suitable for single crowns or small bridges, but for large bridges, with several abutments, where a large mix is required, a spatula such as shown in Fig. 691 or one even larger, is indicated. In this case a large slab should be used. A piece of plate glass about four and a half inches by six inches will answer nicely and is none too large.

**Setting Crowns with Oxyphosphate of Zinc.**—It is advisable to set all pin crowns so that they can be taken off without mutilation, if at some future time it should be desirable to do so for the purpose of repairing them, or in case the roots should be needed as anchorages for a bridge. An excellent method of setting them so that they will be perfectly rigid and at the same time be more easily detach-

able, is first to give the pin and the inside of the band a thin coating of chlora percha. A convenient way to do this if a solution is not at hand, is to take a fine camel-hair pencil, dip it in chloroform and then rub it on base-plate gutta percha and paint the cap and pin with this extemporized chlora percha. The solution will dry very quickly and the crown is then set in the regular way, with oxyphosphate of zinc. If at any time it is desired to remove the crown, it can be easily done with a pair of heated forceps or pliers.

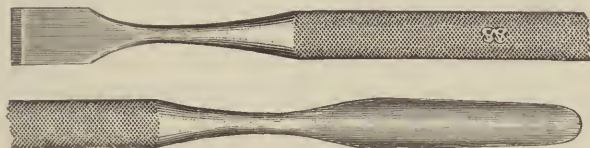


FIG. 690

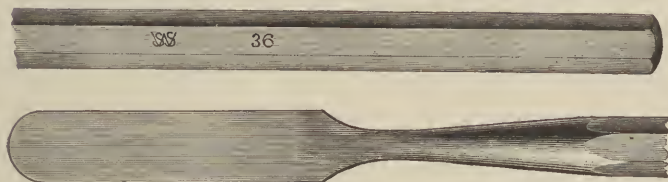


FIG. 691

### CEMENTING BRIDGES IN THE MOUTH.

In practically every case, whether a bridge be fixed or removable, it is better that it be worn in the mouth without cementing for at least from twenty-four to forty-eight hours. This will allow it to adjust itself and settle in place and render the cementing of the piece easier.

**Cementing Fixed Bridges.**—After the bridge has been worn for a time and removed from the mouth, it is first thoroughly cleansed. After washing well with soap and water and a brush, it is dried and the inside of the abutment caps washed with nitric acid, after which it is again washed with water and dried with alcohol.

The abutments in the mouth are then cleansed and it is a good plan, especially if the piece has been worn for some time without cementing, to clean them first with pumice, using a small brush on the engine, and afterward rinsing the mouth well. In keeping the mouth dry, napkins or cotton rolls will serve, but greater care must be exercised in using the latter as they are so fibrous that there is

danger that some of the fibers might make their way over the abutments and when the caps are cemented, a few of the fibers might allow for the entrance of moisture and so eventually cause trouble.

The napkins or rolls are placed so as to keep the field of operations as dry as possible. The teeth and canals are first thoroughly sterilized by washing and repeated applications of a solution of bichloride of mercury and peroxide of hydrogen and then dried. If there is any tendency to bleeding, the gums may be wiped with adrenalin choride. They are then washed with alcohol and thoroughly dried again with hot air or a root drier. An electric root drier accompanies practically all of the dental electrical outfits and is very satisfactory.



FIG. 692

Fig. 692 shows the Evans root drier. It consists of a copper bulb through which is passed a silver or copper point. A handle is screwed into this holding the point firmly in place. The copper bulb is heated in the flame and the heat is transmitted to the end of the point which is placed in the canal, drying the root out quickly. A fine point is used when the entire canal is to be filled, but a heavy one can be used to dry out the canal where a crown is to be placed on the root.

The cement is now mixed and if the canals are to receive a post these are first filled, a cement syringe is here indicated, and then the caps on the bridge are filled full of cement and the bridge is pressed firmly in position in the mouth. The napkin or roll is then removed and the patient is instructed to close the teeth, and the mouth is carefully examined to ascertain that the bridge is in its proper position. If everything is all right, the patient is told to keep the teeth closed without the slightest movement of the jaws and this position should be kept for at least ten minutes. Sometimes it will make it easier for the patient if the operator or his assistant holds his hand under the chin, pressing it upward during the setting of the cement. It will hasten the setting of the cement if water,

as hot as the patient can bear, is held in the mouth. At the end of from twenty minutes to one-half hour, the excess cement can be removed from around the edges of the caps, the gums wiped off with some soothing preparation and the patient dismissed.<sup>1</sup> Another appointment should be made for twenty-four or forty-eight hours later when the mouth should again be carefully examined to see that everything is as it should be. The patient may again be seen a couple of times at intervals of a few days before being finally dismissed.

**Cementing Removable Bridges.**—In cementing removable bridges, the work is done in practically the same manner as in the case of a fixed bridge. The piece is worn for a time and when removed is thoroughly cleansed, the inner caps being removed and cleansed in nitric acid. After cleansing and drying, the inner caps are put back in place in the bridge and film of pink paraffin and wax run around the edge of the outer caps where they overlap the inner caps. It should be run on quite hot so that it will stick well, and on the anterior, where porcelain crowns or facings have been used, the line between the half-band and inner caps should be well covered and also on the labial side between the outer and inner floors. Great care must be used not to get any of the wax on the inside of the inner caps. If this happens, it must be carefully removed before cementing. The object of waxing the bridge so carefully in this manner is to prevent the possibility of any cement working in between the outer and inner caps and so making a fixed bridge out of a removable one.

The bridge being thus prepared, the remainder of the work of cementing is done in exactly the same manner as for a fixed bridge, always being sure to sterilize the roots and canals well. After cementing, the teeth are kept firmly closed for fifteen or twenty minutes, or until the cement is fairly hard, and then the bulk of the excess is removed, but it is not removed from around the gum margin at the edge of the caps at this time. The patient is dismissed and another appointment made for the following day or several hours later the same day when the bridge is removed, the inner caps remaining firmly cemented to the abutments. The wax and excess cement is now carefully removed from around the caps and from beneath the gum and the gum wiped with campho-phenique or iodine.

<sup>1</sup> Campho-phenique is excellent for this purpose.

The patient is instructed in removing and replacing the bridge and dismissed with instructions to remove the work at stated times for cleansing. The patient should be seen frequently for the first few weeks to see that everything is all right. They should always report at intervals of from four to six months for examination and by so doing, the work can be watched and kept in perfect condition for many years.

**Cementing Inlays for Removable Bridges.**—Where inlay retaining abutments are used as attachments for removable bridges, the inlays are cemented separately. This is the only instance in removable work where the parts are not assembled and the whole treated as a fixed bridge. The bridge is worn for a time without cementing and then the inlay is removed and thoroughly cleansed and cemented in place, being held under pressure until the cement has hardened. The excess cement is then trimmed away and the inlay finished and polished. The balance of the bridge is then treated the same as a fixed bridge. Wax flowed between the outer and inner caps and everything cemented in place.

The reason the inlay of a bridge of this kind is set separately is that there is only one way for it to go, and that is the right way. If it should happen to be twisted the least bit one way or another, it would clear the margins of the cavity at certain points, thus leaving a line of cement exposed, but if it is set separately, this can never happen. If some time has elapsed between the taking of the impressions and the putting in of the bridge, the tooth may have rotated or shifted its position to a slight extent. If this is the case, the inlay would not be perfectly seated, but if the inlay is cemented and the bridge put in place, it will draw a little at first, but it will bring the tooth to its normal position in a few days.

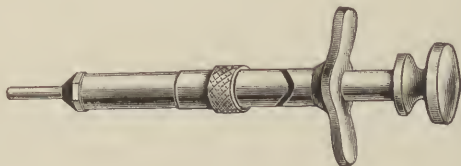


FIG. 693.—About two-thirds actual size.

The cement syringe shown in Fig. 693, is a most useful aid in cementing crowns or bridges, especially where several pin crowns, either single or as abutment pieces, are to be set at one time. The syringe consists of a nickel-plated brass cylinder or barrel with a



nickle-plated brass plunger and a hollow needle or tube at the opposite end, small enough to enter the enlarged canal. There is an opening in the side of the cylinder for the introduction of the cement. The root is thoroughly dried and the cement mixed to the consistence of thick cream and placed in the cylinder. The piston is then put in the barrel and the end of the needle carried to the end of the canal and the cement forced into it, at the same time withdrawing the needle slowly. In this way, the apical extremity of the canal is filled first. A number of roots may be filled in this manner in a few seconds and there will be ample time to put the crowns or bridge in place before the cement has set.

As soon as the piece is in place, the syringe is plunged into a basin of cold water and the piston worked back and forth to free it from the remaining cement while this is still soft. It is also well to rinse it afterward with a solution of bicarbonate of soda so that any remaining particles of cement may be easily removed. If the cement is too hard to be forced out, it may be removed with the drill which comes with the syringe for this purpose.

### SETTING CROWNS WITH GUTTA PERCHA.

When gutta percha is to be employed, it is necessary that the several parts shall be at a temperature which will permit the deliberate and accurate adjustment of the crown and gutta percha to the root.

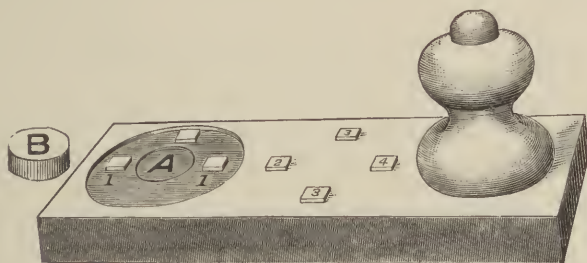


FIG. 694

The crown is laid upon a gutta-percha heater. Dr. How's steatite slab is useful for the purpose (Fig. 694), or in the absence of this appliance, it may be heated over a small alcohol flame. A piece of base-plate gutta percha is also laid on the slab, or heated over the flame of the lamp, and when soft is pressed out between the fingers into a thin sheet, which is wrapped around the heated post.

The canal is moistened so that the crown may easily be removed and the crown forced on to the root as far as possible. It is then removed and the surplus gutta percha, which has been squeezed out around the edge of the band, is removed, after which the canal is again moistened and the crown heated and pressed into place. This is repeated until the crown goes up to its normal position. It is then removed and cleansed and dried with alcohol and a very slight excess of gutta percha is placed around the pin. A napkin or cotton roll is now placed in position to keep the field of operation dry and the canal is dried thoroughly and then wiped out very lightly with one of the essential oils, preferably eucalyptus. The crown is now again heated and forced up into place. Any excess of gutta percha which may have been squeezed out over the margins of the crown is removed, and the work is completed.

If the above instructions have been carefully carried out, a crown set in the manner described will be as permanent, and give practically as good results as though set with oxyphosphate of zinc and at the same time possesses the advantage of easy removal, should this be desired.

## CHAPTER XVII.

### REPAIRING CROWNS AND REPLACING BROKEN FACINGS.

**Removing Shell Crowns.**—When, for any reason, it may be found necessary to remove a full gold crown from a tooth, if the crown has been properly fitted and cemented, it will generally be necessary to cut the band in order to get it off. This may be easily done with one of the crown slitters which are made for the purpose, as illustrated in Fig. 695. With one beak resting on the cusp and the other caught under the gingival edge of the crown, the forceps are closed, dividing the band all of the way to the cusp, when by giving a slight rocking movement, the crown can generally be easily lifted off. Should this not be the case, an instrument is passed under the flap and worked around the tooth to loosen the cement and the band gradually worked free (Fig. 697). A hatchet-shaped excavator can often be used to do the cutting when the band is very thin, the blade being repeatedly drawn from the cervical edge to the cusp, until the band is divided. A small wheel bur will do the work, cutting from the cervix to the cusp in the same way as with the excavator.

One of the best instruments for use as a crown splitter is one which was not designed for the purpose. This instrument is the old Physick forceps, used in the extraction of lower third molars (Fig. 696). The edges at the end of these beaks should first be sharpened and it is then ready for use. It is almost universal in its application and either beak is used for cutting. One of the beaks is placed on the occlusal surface of the crown and the other over the gingival edge and the band is split by closing the forceps.

**Repairing of the Shell Crown.**—In repairing the shell crowns, the cement is first thoroughly removed and if it should happen to be one made by the operator and a sweated crown throughout, the edges can be brought together, a small strip of coin gold placed over it and melted in place. In making a repair of this character, the crown should be placed on a piece of charcoal with the cusp toward the operator. The flame of the blow-pipe is then thrown

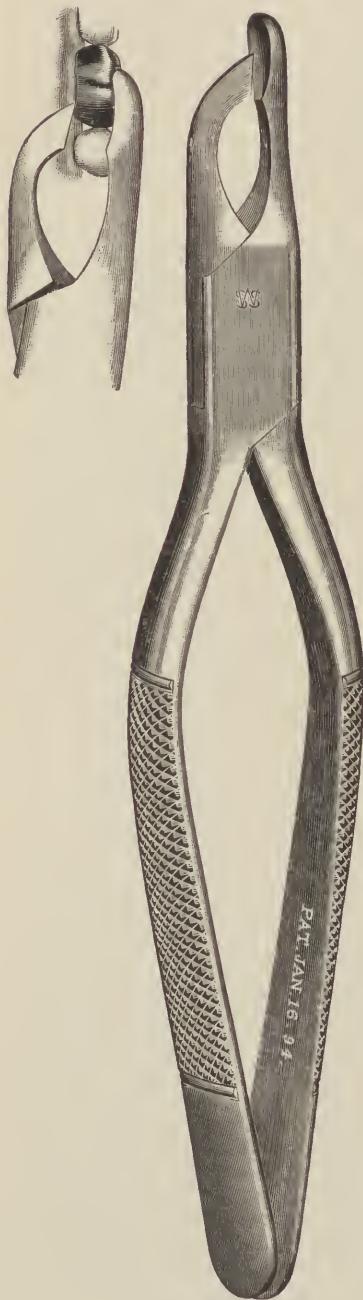


FIG. 695

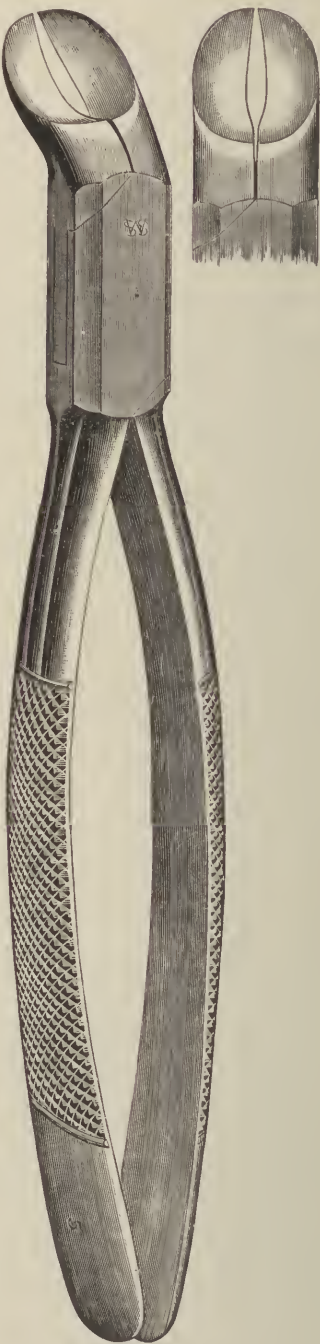


FIG. 696

on the cusp until the whole crown is entirely heated-up nearly to the fusing point, when the flame is flashed across the break and the coin gold melted over it (Fig. 698).



FIG. 697

If it is a soldered crown and there is no loss of material, the edges are simply brought in contact and solder flown over it. If

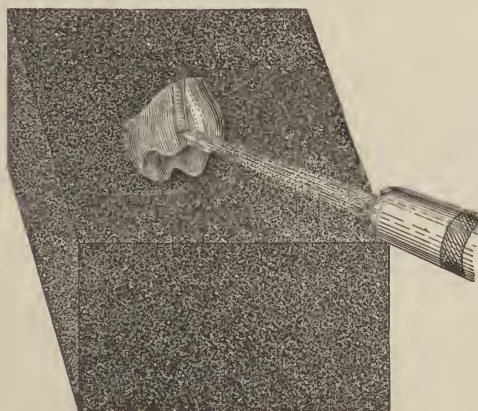


FIG. 698

there has been much loss of material at the sides of the cut, a narrow strip of thin platinum or of pure gold is waxed over the line of division on the inner side of the cap which is then filled with investment material, dried out and the broken part covered with solder (Fig. 699).

Fig. 700 shows an instrument which has been devised to assist in removing crowns or bridges from the mouth. It consists of a steel rod, over which slides a heavy hammer. To one end of the rod a ball is attached and to the other a tool holder, all of hardened steel. The tool is of heavy steel with a broad hook at the end.

The hook is passed over the edge of the band of a crown, or at the most convenient point of a bridge nearest to an abutment and the hammer is driven down repeatedly against the ball at the oppo-



FIG. 699



site end of the rod. This often results in jarring the abutments loose, even when they have been quite firmly cemented.

Of course good judgment must be exercised in using this instrument, as if a crown or a bridge is very firmly set, too much hammering might injure the root without accomplishing the desired result. It is, however, a most valuable instrument and if judiciously used, is almost indispensable.

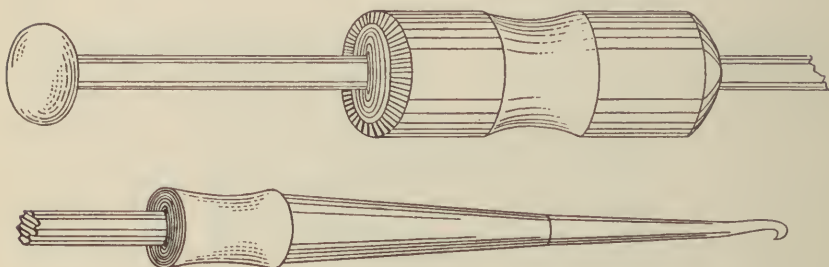


FIG. 700

**Removing Porcelain or Porcelain-faced Crowns.**—The removal and repairing of a porcelain-faced crown is a more difficult operation than of a shell crown. If the crown has been set with gutta percha, or if the post and inside of the band have been coated with chlora percha before cementing, it can be removed by grasping it with a heated pair of pliers, or forceps, having first protected the lips and gums of

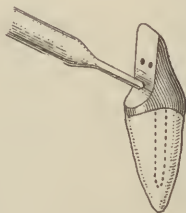


FIG. 701

the patient with napkins. It is well to try this method first on a chance of gutta percha having been used. If it has been set with oxyphosphate of zinc, much more trouble will be experienced in getting it off. It will be necessary first to separate the cap from the pin, which may be done by passing a small spear-pointed drill from the labial side through the base of the backing at its junction

with the floor of the cap to one side of the pin and then cutting the pin through with a very small fissure bur, after which the cap is easily pried off (Fig. 701).

**Removal of Post.**—There is on the market an instrument designed for removing a post from the root, consisting of a pair of jaws which grasp the post, while another pair rests against the end of the root. When the pin is tightly clamped, a screw at the end of the instrument is turned, and if the post is not very long or has not been well cemented it can be removed without difficulty (Fig. 702). Where, however, the pin is long and has been well cemented, it will be necessary first to cut away the cement from around it until it has become somewhat loosened, then the instrument may be used to remove it.



FIG. 702.—Little giant post-puller.

In the absence of one of these instruments, the work can generally be done within a short time by other means. The cement is first loosened from around the pin with a very fine spear-pointed drill. The shank of one of the finest burs or of a Gates-Glidden drill, flattened on two sides and then ground to a spear point makes an excellent drill for the purpose, being smaller than any obtainable at the dental depots. The cement is drilled away close to the pin all around, inclining the drill toward the post at all times so as to lessen the danger of a perforation or a possible weakening of the root by cutting into it (Fig. 703, *a* and *b*).

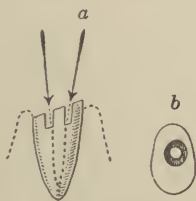


FIG. 703




FIG. 704

From time to time an effort may be made to loosen the pin by grasping it with a pair of strong, narrow-nosed pliers and trying

to rotate it. The pin roughing and bending pliers may be used for the purpose. Very often the nose of the pliers is somewhat blunt, but it may be easily reduced by grinding (Fig. 704).

If the pin does not loosen, the drilling should be carried deeper until it can be removed. The remainder of the cement is then removed from the canal with a reamer and a new pin fitted to it. The palatal portion of the crown with the backing should then be cut away the cap placed on the root and a new pin waxed in place. The cap and pin are now removed, invested and soldered, after which the facing is ground, backed and the crown soldered.

### REPLACING BROKEN FACINGS ON FIXED CROWNS OR BRIDGES WITHOUT REMOVING THE APPLIANCE FROM THE MOUTH.

There are several different methods of replacing a facing without removing the cap and pin from the root. A good way, and one which makes one of the strongest repairs that can be made, where the remaining metal portion of the crown is of sufficient thickness, is as follows: The remnants of the tooth pins are first removed and ground flush with the backing, and an impression taken covering the backing and floor of the cap, and a model made of plaster, cement or Spence metal. A hole is then cut in that face of the



FIG. 705

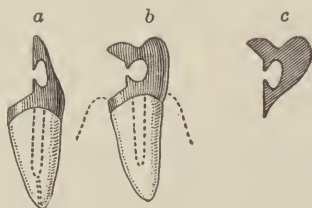


FIG. 706



FIG. 707

model representing the backing, against which the new facings are to be fitted, large enough for the pins to enter freely (Fig. 705). The facing is selected and ground to fit the model accurately. The backing of the crown in the mouth is then cut out to accommodate the pins, care being used not to break through on the lingual side. The cavity is then deeply undercut all around, making it strongly retentive in shape (Fig. 706, *a*, *b* and *c*). Fig. 707, *a*, being a horizontal cross-section of the backs. The pins of the facing are flattened at the ends and bent at right angles, one being cut a

little shorter than the other so that when the long pin is inserted and the facing pressed as far to that side as it will go, the short pin will pass through the opening in the backing (Fig. 707, *b*). The facing is now removed and the cavity filled with cement, and the backing and floor covered. The long pin is first introduced, the facing carried to that side until the shorter one will enter. It is then pressed tightly in place and forced back until the sides of the facing are even with the backing. This will bring the ends of both the short and long pins under the ledge of the cavity and when the cement has hardened, the facing will be so firmly held that it would be impossible to remove it except by breaking it (Fig. 708).



FIG. 708

Another method of repair without removal from the mouth is that of riveting the facing to the backing. This is one of the oldest methods, and also one of the best if it is carefully done. The pins are cut from the backing, an impression taken and a model prepared as in Fig. 705. The new facing is ground to fit the model. A backing of heavy tinfoil or paper is fitted to it and trimmed carefully to the edge of the facing all around. This backing is then removed and fastened in position over the gold backing of the crown in the mouth (Fig. 709). The holes in the backing will show the exact position of the pins of the facing, and the holes should be drilled with a small spear-pointed drill nearly the size of the pins, just large enough so that the pins of the facing replacing the one lost will pass through the holes easily. The holes are then counter-sunk from the palatal side and the pins cut off so that they will project only a slight distance through the backing (Fig. 710).



FIG. 709



FIG. 710



FIG. 711



FIG. 712

The riveting is done with a plate punch. The facing is removed and the backing and floor of the cap covered with cement of about the same consistence as that used in setting a crown and the facing placed in position. A piece of lead or a thickly folded napkin is placed over the facing. With the die side of the punch resting on

this, and while the cement is yet soft, the pin is riveted by rubbing and burnishing with the punch end of the forceps until the counter-sink is entirely filled (Fig. 711). After riveting, any excess platinum of the pin may be ground away and the back polished. If the pins are carefully riveted, and the holes are not too large, this makes as strong a repair as can be made by any method. If the cement has been allowed to harden before the riveting is done it will be broken and will crumble away, and the repair will not be as satisfactory.



FIG. 713



FIG. 714



FIG. 715



FIG. 716

Another method of repair is as follows: The headed pins are left in the backing (Fig. 712) and the pins of the facing, which is to replace the one broken, are ground out and the holes dovetailed. This can be done with very simple and easily made instruments. The first requisite is a trephine for grinding out the pins. This can be made by using the shank of a bur, and filing it down at the end until the point is slightly larger than the tooth pin (see Fig. 713). On this is fitted a tube about one-half inch long, made of ordinary brush copper, No. 36-gauge. The copper is cut about one-half an inch wide, and rolled around a pin or mandrel about the size of the tooth-pin. It is rolled around twice so as to form a tube with sides double the thickness of the metal (Fig. 714, *a*). The end of the bur shank is then inserted into one end of this tube, and the whole fluxed with zinc chloride and soldered with ordinary tinner's solder (see Fig. 714, *b*).

Carborundum and glycerin should be used for grinding. The instrument is placed in the engine and the tube dipped in the carborundum and glycerin, and then placed over the pin and the



engine started (Fig. 715). The instrument is raised and lowered, on the facing, as it revolves, allowing the abrasive powder and liquid to constantly work under it. This is kept up until the pin is entirely ground out. After the pins are ground out, the hole is dove-tailed, which may be done by using an old wheel or inverted cone bur from which the temper has been drawn. This is dipped in the carborundum and glycerin and then placed in the hole and the engine running rapidly until the hole is well undercut all around (Fig. 716). The powder is then well washed out and the holes filled with cement. The backing of the tooth, which has previously been well dried, is covered with cement and the facing pressed into place and held there until the cement has hardened (Fig. 717).



FIG. 717

This makes a quick and easy repair, but where great strength is required, it is not as good as those already mentioned, as the facing has been weakened to a certain extent by enlarging the pin-holes.

Dr. Emory A. Bryant has a novel method of attaching a new facing. A tap and die, the size of the tooth-pins are necessary, together with a special countersinking tool and a screw-driver. The pins are cut from the old backing and holes the size of the pins of the new facing are drilled in proper positions. With the countersinking tool held in a right-angle hand-piece, the holes are counter-sunk on the lingual side nearly to the outer wall of the backing. The nuts are made to correspond in size and taper with the counter-sink. By means of the oiled die, a thread is cut on each pin of the facing, and continued to the back of the facing, exercising great care that the pins are not twisted or strained. The backing is covered with cement, the facing set in position and each nut is loosely adjusted, then alternately screwed into place drawing the facing close to the backing. The protruding portions of nuts and pins are then ground flush with the backing and polished.

This method of replacing broken facings is very ingenious and

will answer where there is little or no strain on the facing, but the cutting of a thread, on such a small pin, will weaken it to such an extent as to render it of little value where much strength is required. It is better if the full strength of the pin can be preserved.

FORMULAS.

THESIENE. LOCAL ANESTHETIC.

Acid, carbolic . . . . .	10 grs.
Cocaine hydrochloride . . . . .	10 “
Atropia sulphate (2 per cent solution) . . . . .	10 min.
Nitroglycerin (1 per cent solution) . . . . .	10 “
Adrenalin chloride . . . . .	10 “
Distilled water . . . . .	2 oz.

Can be used wherever a local anesthetic is indicated.

BICHLORIDE SOLUTION.

One and three-quarter ( $1\frac{3}{4}$ ) grains of bichloride of mercury to two ounces of peroxide of hydrogen. (Marchand's preferred).

COLORING SOLUTION FOR COLORING PLASTER IMPRESSIONS.

Dissolve one-quarter of an ounce of carmine in two ounces of strong ammonia, leave bottle unstoppered until ammonia fumes nearly disappear, then close.

Add about one-quarter of an ounce of this solution to four ounces of cologne.

The cologne must have an alkaline reaction, if acid, it will precipitate the carmine.

HARD, STICKY WAX.

Pure white beeswax . . . . .	16 oz.
Pure white resin (powdered) . . . . .	3 “
Gum damar (powdered) . . . . .	3 “

Melt in order given and stir well until the powdered resin and gum damar are thoroughly incorporated with the wax. It can be poured in cups or moulds, or rolled into sticks of any desired size.

SOLDERS.

20-carat solder.	
U. S. coin gold . . . . .	24 grs.
18-carat solder (Ney's preferred) . . . . .	10 “
C. P. copper . . . . .	2 $\frac{1}{4}$ “

Melt coin gold, then add the copper. When copper is melted, add 18-carat solder. Pour in ingot mould, then roll to 27 gauge B. & S. Use plenty of flux in melting.

*21-carat solder.*

Melt equal parts of coin gold and the above 20-carat solder together and roll to 27 gauge B. & S., using plenty of flux.

#### FUSIBLE METAL, RICHMOND'S FORMULA.

Tin . . . . .	20 parts
Lead . . . . .	19 "
Cadmium . . . . .	13 "
Bismuth . . . . .	48 "
	<hr/>
	100

Melt in order named, *not in order of fusibility*. A new crucible, or one in which only this metal has been made before, should be used for the purpose. When tin is melted, add the lead, when the lead is melted, add the cadmium, when the cadmium is melted, take off fire and stir in bismuth a pine stick. If the crucible is left on the fire while the bismuth is being added, the fusing point is lowered so rapidly that the metal will burn and become worthless.

#### SOLDERING FLUID.

A saturated solution of borax and boracic acid. Equal parts of borax and boracic acid, one pound of each, dissolved in one gallon of water. Filter, and if desirable, tint slightly with carmine.

## CHAPTER XVIII.

### DENTAL METALLURGY.<sup>1</sup>

#### GOLD AND ITS ALLOYS, INCLUDING REFRACTORY MATERIALS AND FLUXES.

BY LOUIS J. WEINSTEIN.

IN the preparation of this contribution, it has been the aim of the author to present a brief and practical, rather than an academic discussion of the subject.

In addition to a consideration of the gold alloys, it was found advisable to include a section on the closely-allied and important subjects of refractory materials and fluxes used in connection with gold, during soldering or casting operations.

The series of investigations, upon which this contribution is based, was started during the year 1908, when in attempting to use the coin gold and modifications of same in the form of solders, he was seriously handicapped by the comparatively low melting point of the coin gold, and the inadequacy of the other gold alloys usually obtainable, which, to the man of exceptional ability, is not so apparent as to one of average, or even less than average skill.

In view of the well-known fact that platinum is a metal that could be alloyed with gold to increase the melting point of the latter, a number of experiments were made to produce a formula for a gold alloy sufficiently high in melting point, so that the general practitioner could use it as a substitute for coin gold, and thereby eliminate the process of "sweating," and instead, solder the resultant high-fusing gold with other gold of a melting point equal to that of 24- or 22-K. and thus obtain a strong union that would withstand the subsequent, and often numerous, soldering operations required for the completion of the case.

The alloys finally developed were found so satisfactory, that it is not too much to say that even in the hands of the skilled operator these alloys will prove of considerable value, if for no other reason than the very great difference in the melting point

<sup>1</sup> Copyright 1916, by Louis J. Weinstein. All rights reserved.

between the highest and lowest fusing alloys in the series, and the consequent increased facility and safety during the necessary subsequent soldering operations.

In the author's efforts to obtain information from which to formulate alloys, he was greatly handicapped, inasmuch as there were no dental publications bearing to any extent on the subject. After a thorough study of the then recently revised books on dental metallurgy, a number of experiments were made, the results of which did not appear to correspond with the data in the text-books. A number of works on general metallurgy were consulted, and found to differ materially with the dental text-books in a great many instances, particularly on data concerning the behavior of the binary alloys of gold and silver, gold and platinum, etc. In order to establish a definite foundation upon which to base further researches, the author proceeded to make a series of binary alloys, and from the resultant data was enabled to proceed with the development of more complex alloys.

The resultant formulæ given herein have been in practical use for a period ranging from three to six years, and while the author does not claim that his is by any means the last word on the subject, he trusts that the results of his research will prove of some immediate benefit to both advanced students and practitioners.

The author takes this opportunity of thanking Drs. Edwin W. Harlan, Frederic A. Peeso, James H. Prothero, William S. Prensky, Mr. Harry C. Ney and other friends for their kind encouragement and aid.



TABLE No. I.—THE MELTING POINTS<sup>1</sup> AND DENSITIES OF METALS.

	Name of metal.	Symbol.	Melting point, ° F.	Melting point, ° C.	Density.
	GOLD	Au	1945	1063	19.3
GROUP	I.—Silver	Ag	1761	960	10.5
	Copper	Cu	1981	1083	8.9
	Platinum	Pt	3190	1755	21.5
	Palladium	Pd	2820	1550	11.4
GROUP	II.—Iridium	Ir	4170	2300	22.5
	Osmium	Os	4900	2700	22.5
	Rhodium	Rh	3525	1940	12.1
GROUP	III.—Zinc	Zn	787	420	7.1
	Cadmium	Cd	610	321	8.6
	Tin	Sn	450	232	7.3
	Aluminum	Al	1218	658	2.7
GROUP	IV.—Nickel	Ni	2646	1452	8.9
	Cobalt	Co	2714	1490	8.7
	Manganese	Mn	2237	1225	7.4
	Chromium	Cr	2750	1510	6.9
	Tantalum	Ta	5160	2850	14.5
	Tungsten	W	5430	3000	18.7
	Molybdenum	Mo	4500	2500	8.6
	Vanadium	V	3150	1730	6.1
	Titanium	Ti	3450	1900	4.5

The elements following gold have been divided into four groups. This division is an arbitrary one, and made solely for the purpose of facilitating future references.

<sup>1</sup> The melting points are according to the latest data published by the U. S. Bureau Standards.

## BINARY ALLOYS.

It is a well-known fact that pure gold has but a limited use in the construction of various dental appliances, and that it is necessary to alloy it with various other metals, in order to increase its durability, hardness, and tenacity, and to vary the melting point above or below that of pure gold, as may be required. The metals in common use for this purpose have been copper, silver, and platinum, the latter to a limited extent, also zinc, cadmium, etc., for solders, which, of course, require a considerably lower melting point than the gold upon which they are to be used.

A thorough knowledge of the properties of the simple binary alloys is of paramount importance, because these properties almost invariably give an indication of what may be expected from more complex alloys.

It is generally accepted by metallurgists that binary alloys of gold and silver, copper, platinum, or palladium, form solid solutions, that is, solutions of one metal in another, if in proportions within certain limits. Such binary alloys as will be discussed, form solid homogeneous solutions, except when otherwise noted.

It is unnecessary to enter into an academic discussion of the possible molecular affinity existing among various elements or of eutectics, formed between the metals in the binary alloys that will be considered, because such compounds or mixtures do not occur in such alloys as may be considered fit for use in the mouth. For example, alloys of gold and copper in the proportion of 82 per cent gold to 18 per cent copper form a eutectic which is the lowest fusing of the gold copper series, and when more than 18 per cent copper is present, the copper is not in uniform solution and segregates. As the alloys containing over 15 per cent copper are extremely brittle and ununiform, no binary alloys containing more than 10 to 12 per cent copper will be considered. In other words, alloys of gold and copper, where copper does not exceed 12 or 13 per cent, do not form any compounds with special characteristics.

To simplify the references to ternary, quaternary, or more complex combinations of metals, alloys of two metals will be termed, as is customary, "binary," but the alloys composed of three or more metals will be termed "complex" alloys.

**Gold and Silver.**—Silver is commonly utilized as an alloying element with gold. It is used, to a considerable extent, as part of

the alloy in dental golds, and, as will be shown later, principally as a cheapening agent.

There seems to prevail generally an erroneous opinion regarding the properties of silver-gold alloys. It has been stated<sup>1</sup> that silver is used to harden and lower the melting point of gold. This deduction is distinctly contrary to the results obtained by the author. After making a number of binary alloys, it was proved that even the maximum percentage that may be used in dental work, say 25 per cent of silver to 75 per cent of gold, does not confer any perceptible hardness upon the gold, neither does it lower the melting point to such an extent that the difference could be measured with a pyrometer.

Practically the only effect silver (even if present to the extent of 25 per cent) has upon gold, is to discolor the gold, making it greenish, and lower the specific gravity, thus increasing the volume. It will thus be seen that silver confers no special benefit upon gold, except cheapening it and acting as a color modifying agent. On the other hand, it may prove detrimental, as a considerable proportion of *silver may interfere with the action of other alloying elements* when attempting to produce a complex gold alloy, and also on account of the strong affinity that oxygen and other gases possess for silver. It will thus be readily seen that small percentages may sometimes be used to advantage as a color-modifying agent, but a large percentage of silver is distinctly contraindicated.

Silver, in such proportions as may be needed for dental golds, alloys uniformly and without difficulty, and may be depended upon to remain in uniform distribution.

The author has found that gold alloys, with a high percentage of silver, when remelted and cast, show in the casting a considerable variation of the silver content which indicates that a partial separation takes place. This has not been investigated further for the reason, that castings of gold with a high percentage of silver have no practical application. As stated before, small percentages of silver have practically no effect upon the gold and this fact has been taken advantage of, for a considerable period of time, by at least one manufacturer, who alloys pure gold with from 1 to 2 per cent of silver, and sells it as 24-K. This alloy appears so similar to pure gold that the ordinary eye is deceived and the unprincipled manufacturer is the gainer.


<sup>1</sup> Essig's Metallurgy (Koenig's revision), p. 163; Hodgen's Metallurgy (Milberry's revision), p. 278.

Fig. 718 illustrates the melting point curve of gold silver alloys.

Practically the same determination appears in very recent works on metallurgy.<sup>1</sup>

Silver-platinum alloys have been used, to a considerable extent, for crown posts, dowels, backings, etc. As a rule, alloys of this character (20 to 30 per cent Pt.) are extremely unsatisfactory, both during their manipulation, and in ultimate service, and their use should be avoided. They are somewhat improved with higher

FIG. 718.—MELTING POINTS OF ALLOYS OF GOLD AND SILVER.

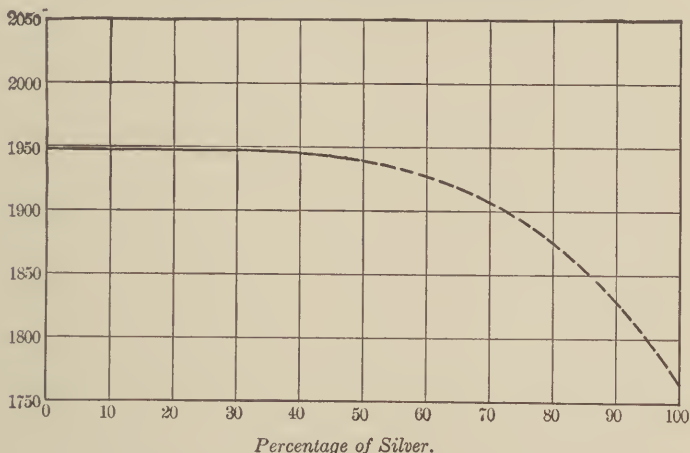

5 per cent.	Ag,	melting point	1945° F.,	1063° C.
10	"	Ag,	"	" 1945° F., 1063° C.
15	"	Ag,	"	" 1943° F., 1062° C.
30	"	Ag,	"	" 1942° F., 1061° C.


percentages of platinum or palladium, but the alloys are extremely ununiform and still quite soluble in acids and apt to discolor and corrode. The cost with more platinum is considerably higher and even then the alloys are not equal to a fair grade of alloyed gold, either in usefulness, or economy.

**Gold and Copper.**—Copper is one of the most commonly used and most useful alloying elements. It confers hardness and elasticity upon gold, but is detrimental when used in large proportions, on account of its great tendency to lower the melting point of the alloy, and the strong oxidation and brittleness of the alloys. The copper is in high proportion. It is, however, a most useful,

<sup>1</sup> Fenchel's Metallurgy.

and in fact an *indispensable* alloying element, if employed judiciously. Alloys of gold and copper, such as U. S. coin gold (Au. 90- Cu. 10), have been used with most satisfactory results both from the standpoint of durability and resistance against the oral fluids. An alloy of this character is ideal for crown work, except for the disadvantage of its low melting point, which is caused by the copper content and its range of usefulness is therefore limited,

FIG. 719.—MELTING POINTS OF ALLOYS OF GOLD AND COPPER.

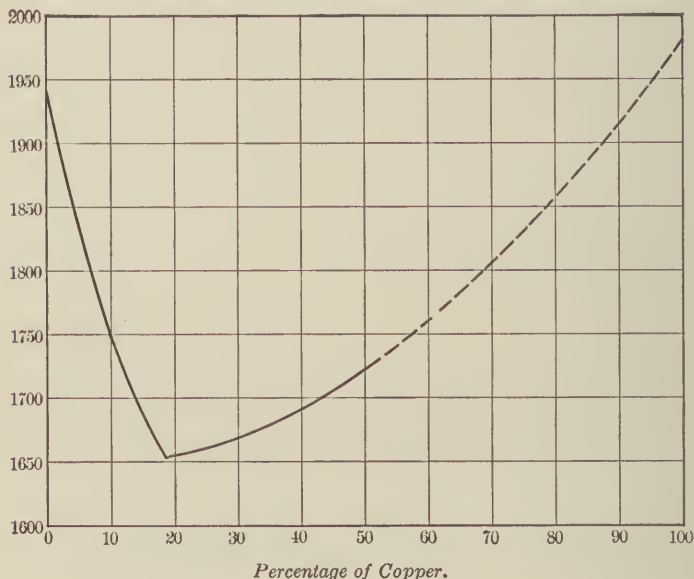

5 per cent.	Cu,	melting point	1840° F.,	1004° C.
10	"	Cu,	"	1735° F., 946° C.
15	"	Cu,	"	1690° F., 921° C.
18	"	Cu,	"	1661° F., 905° C.

even in the hands of the skilled operator. This inadequacy, as will be shown later, can be corrected by substituting platinum, etc., for some of the copper, thus raising the melting point, and reducing oxidation, without changing the valuable properties the coin gold possesses; namely, strength and durability.

Fig. 719 illustrates the melting point curve of gold-copper alloys. As will be seen from the chart, the melting point of pure gold drops rapidly upon the addition of copper; 5 per cent copper lowers the melting point about 100° F.; 10 per cent copper lowers the melting



point of gold about 200° F.; 15 per cent copper lowers the melting point about 250° F.; and 18 per cent causes a drop in melting point of about 300° F. As will be seen from the illustration, the lowest melting point between gold and copper is when 18 per cent cu. is present. The addition of more than 18 per cent cu. causes a rise in melting point until the melting point of copper, 1980° F. is reached.

As mentioned previously, it is advisable to limit the total copper content to 10 or 12 per cent. Consequently, if the melting point of an alloy of gold and copper of requisite strength and hardness is too low, it is necessary to use platinum or palladium to bring it to the point desired.

The valuable properties of copper as a hardening agent have apparently been underestimated, and not given sufficient consideration by writers, but taken advantage of by manufacturers, as will be noted in the composition of commercial clasp metals.

**Gold and Platinum.**—Platinum is being used to some extent as an alloying element with gold, principally for clasp metal, etc. It has been stated that platinum confers great elasticity and hardness upon gold, which appears correct only to a limited extent. The author's experiments have indicated that platinum has comparatively little effect as a hardening agent upon gold. It does, however, raise the melting point considerably, as will be shown later.

Platinum is much inferior to copper as a hardening agent. This is readily proven upon an examination of a binary alloy of gold and copper containing 10 per cent copper, and a binary alloy of gold and platinum containing 25 per cent platinum (so-called platinum solder). A comparison of two pieces of equal dimension will show that the gold-copper alloy, with 10 per cent copper is quite as hard and elastic as the gold alloy with 25 per cent platinum, and more uniform. It is therefore evident that platinum is not the most suitable hardening agent, and its range of usefulness as an alloying element is therefore limited.


Platinum, however, is an excellent adjunct to copper, as it tends to raise the melting point, which is lowered sensibly by any considerable percentage of copper.

Fig. 720 illustrates the melting point curve of gold-platinum alloys.

Large percentages of platinum cannot be alloyed uniformly with gold, and in order to insure a uniform alloy, it is not advisable to

use more than 5 to 10 per cent in a binary alloy and 10 to 15 per cent in a complex alloy. In the latter, the *other alloying elements help to hold the platinum in uniform distribution*. If it is desired to raise the melting point of an au.-cu. alloy higher than 5 to 10

FIG. 720.—MELTING POINTS OF ALLOYS OF GOLD AND PLATINUM.

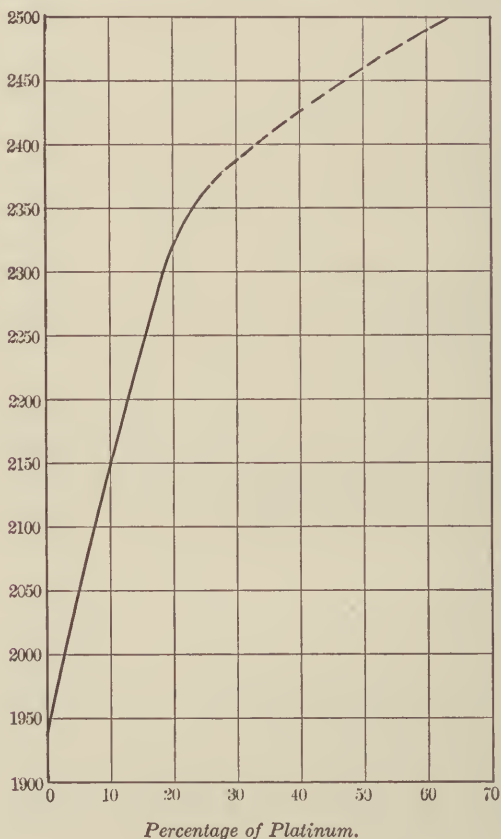


5	per cent.	Pt,	melting point	2015° F., 1102° C.
10	"	Pt,	"	2080° F., 1141° C.
15	"	Pt,	"	2165° F., 1165° C.
20	"	Pt,	"	2260° F., 1228° C.

per cent platinum makes possible, it is advisable to use *palladium*, which *combines perfectly* in both the binary and complex alloys that will be considered.

**Gold and Palladium.**—Palladium is as yet a comparatively rare metal. It has been used to some extent in the industries and arts, but practically to no extent in dental golds. Palladium is a metal very similar to platinum except for its specific gravity, 11.4, which

FIG. 721.—MELTING POINTS OF ALLOYS OF GOLD AND PALLADIUM.

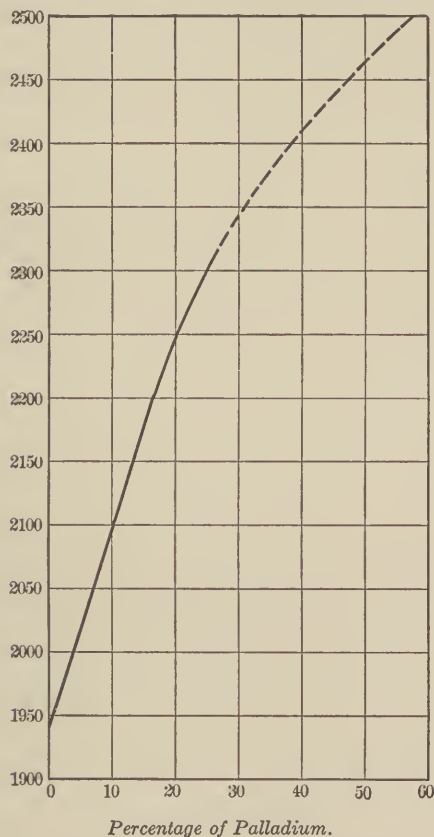

5 per cent.	Pd,	melting point	2060° F., 1127° C.
10	" Pd,	" "	2145° F., 1174° C.
15	" Pd,	" "	2250° F., 1232° C.
20	" Pd,	" "	2340° F., 1282° C.

is considerably lower than platinum, and its melting point, which is also considerably lower than that of platinum.

It has been stated that palladium makes gold brittle. This is contrary to the author's findings. More than twenty-five different

alloys were made containing from 1 to 30 per cent palladium. All of them appeared quite uniform and remarkably malleable, ductile and tenacious.

Palladium also forms excellent uniform alloys with copper, silver, etc., and it is a very valuable adjunct to platinum in complex gold alloys. Its use, however, is limited, on account of the fact that it exerts a strong decolorizing action upon gold, 3 to 5 per cent turning gold sensibly lighter, and 15 to 20 per cent almost white (platinum color).

Fig. 721 illustrates the melting point curve of gold-palladium alloys.

Another remarkable and most valuable property that palladium possesses, is the fact that although the melting point, 2820° F. (1550° C.), is considerably lower than that of platinum, a given percentage of palladium (by weight) will increase the melting point of gold more than an equal amount of platinum, and in view of the fact that platinum in considerable percentages does not alloy uniformly with gold, it is well to use palladium, as it alloys uniformly with gold in all proportions. Therefore in alloys where color is no object palladium may be incorporated to very great advantage.





**Gold and Metals in Group 2.—Iridium.**—Iridio-platinum is usually employed in place of pure platinum on account of its greater hardness and durability. When experimenting with the series of binary alloys previously discussed, it naturally suggested itself to the author, that gold alloyed with iridio-platinum, instead of pure platinum, would prove superior. A number of alloys were attempted and the results obtained were found invariably inferior to alloys of gold and pure platinum. The unsatisfactory results should have been anticipated because it is well known that iridium will not alloy with gold uniformly, but segregates on account of its extremely high melting point and high specific gravity. It is quite certain that in attempting to make the alloy, the following occurred: When the iridio-platinum was brought into the gold, the heat used was sufficient to melt the platinum and set free the particles of iridium which did not go into solution with the gold platinum mixture, but suspended, and then segregated practically in the same way as if free iridium were added to gold without the presence of the platinum.

The experimental alloys were made of pure gold and 15 per cent iridio-platinum, and compared with alloys made of pure gold and 15 per cent platinum. On rolling both to equal gauge, polishing and etching, the gold-platinum alloy was found quite uniform, whereas some sections of the gold iridio-platinum alloy were harder and higher fusing, while other sections were softer and lower fusing than the gold-platinum alloy. In addition, all the gold-platinum-iridium mixtures appeared streaky and ununiform, even to the naked eye, while the gold-platinum alloys appeared almost perfect even under the microscope.

Numerous other experiments were made, along these lines, and in spite of the fact that some have advocated the use of iridio-platinum instead of pure platinum in alloys, it is the author's conclusion that pure platinum is far superior to iridio-platinum as an alloying element with gold.

**Osmium.**—No attempts have yet been made to form alloys with osmium, as it is even higher fusing than iridium and therefore poor results may be anticipated. The author expects, however, to experiment with osmium shortly, to determine if there is any possible benefit to be derived from it, because alloys of Os-Pt are claimed to be superior to alloys of Ir-Pt.<sup>1</sup>

<sup>1</sup> F. Zimmerman, Alloy of Platinum and Osmium, U. S. Patent No. 1055, 119.

**Rhodium.**—Rhodium is another metal of the platinum group that will prove of considerable benefit if sufficient of it could be obtained at a moderate cost. It is quite similar to palladium. It also has a low specific gravity, 12.1, and is considerably higher fusing than platinum (according to U. S. Bureau of Standards).

The author has not experimented with it in the pure state, but procured a quantity of it in the form of platinum containing 10 per cent rhodium. This platinum-rhodium alloy was used for a considerable time instead of pure platinum. The alloys were quite satisfactory, but the advantages over pure platinum as an alloying agent are so slight, and the cost so high, that it appeared advisable to discontinue its use at the time.

**Gold and Metals in Group 3.**—(See under Gold Solders.)

**Gold and Metals in Group 4.**—Sometime after the introduction of the casting process, it became apparent that in order to utilize the casting process to advantage, alloys other than ordinarily obtainable would have to be made in order to insure satisfactory results. The ordinary plate golds obtainable, when cast in small bulk, were too soft and frail, and the sections had to be cast larger and heavier than normal, and were therefore objectionable.

A number of experiments were made in attempting to cast the various clasp metals, and the results obtained were very unsatisfactory. At this time began to appear literature regarding industrial alloys both ferrous and non-ferrous, with the so-called rare, or little known, metals, such as nickel, cobalt, manganese, tungsten, vanadium, etc., enumerated in the table of elements under Group 4.

Some remarkable results were obtained in various industrial steels, brasses, and bronzes, and it was not unreasonable to expect that some of these rare metals could be utilized to advantage in the formation of gold alloys for casting purposes.

In view of the fact that there was no precedent to follow and no literature obtainable on the relation of these metals to gold, it can readily be understood that the author's attempts to alloy these rare metals with gold were more or less empirical, and the results obtained were no better than should have been anticipated. Meeting with such poor success, the author proceeded with the series of researches into both the binary and complex alloys of gold with the elements in groups one, two and three and the resultant formulæ developed are given herein in the following pages.

Since then, a number of experiments have been made by other investigators, in attempting to utilize some of the rare metals such

as nickel, tungsten, molybdenum, titanium, etc., as substitutes for iridio-platinum. The results so far have not proved successful.

This non-success will not appear strange to those familiar with both the chemical and physical characteristics of the elements mentioned. Unless some radical method of handling these metals is evolved iridio-platinum will continue to retain the position it occupies (see elastic gold under clasp metals).

*The author has not by any means given up hope of the possible utilization of some of the rare elements in connection with alloys for casting. He is now engaged in a series of experiments which have already shown promising results and he hopes to have data of importance available for publication in the near future.*

### A NEW SERIES OF ALLOYS.

From the preceding data on the properties of the binary alloys of gold with the metals in Group 1, certain conclusions may be drawn and data obtained, and it then becomes a comparatively simple matter to form complex alloys for our requirements. Before proceeding to formulate a complex alloy, it will be well to consider again the hardness conferred upon gold by the metals in Group 1.

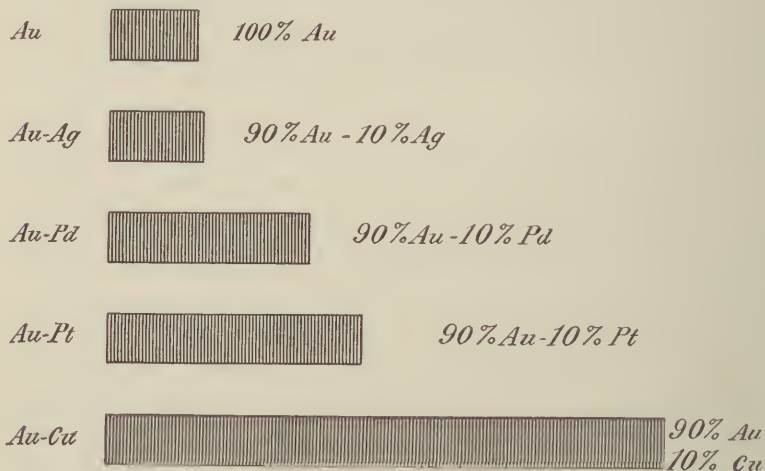


FIG. 722.—Comparative hardness of binary alloys.

As will be seen from Fig. 722, pure silver has practically no effect on gold as far as increasing its hardness. Palladium has some hardening properties, and it is well to bear that in mind when for-

mulating an alloy. Platinum has considerably more hardening power than palladium and is a factor, but copper is the most valuable agent of them all, and in proceeding to formulate the complex alloys, we must consider the copper as the principal hardening agent and the others as adjuncts.

**Gold for Crown, Bridge and Plate Work.**—Gold Plate No. 1.—Bearing in mind the hardening power, and the effect on melting point produced by the alloying elements, let us consider such a formula as the following:

FORMULA OF GOLD PLATE No. 1.		Per cent.
Gold . . . . .		88.0
Platinum . . . . .		7.5
Palladium . . . . .		2.5
Silver . . . . .		2.0
Total . . . . .		100.0
MELTING POINT 2075° F., 1135° C.		

This alloy is equivalent in hardness to ordinary 22-K. gold, containing 91.6 per cent gold, 3.5 to 4 per cent copper and 4.5 to 5 per cent silver. Now, as the copper is the active hardening agent in the 22-K. gold and as we know from the preceding data that platinum and palladium exert somewhat less than half of the hardening influence of copper, it will be seen that the total of 10 parts platinum and palladium are about equal in hardening power to the 3.5 to 4 parts of copper usually present in 22-K. gold; and thus we get an alloy equivalent in hardness to the ordinary 22-K. plate.

The silver content, 2 parts, is no factor whatever, except as a color-modifying agent, because it is an object to adhere to a certain standard of color throughout the whole series of alloys. As there is no copper whatever present in this alloy, it is absolutely non-oxidizable, but the great advantage that an alloy of this character possesses over an ordinary 22-K. plate is the fact that its melting point is much above that of ordinary 22-K. gold, approximately 225° F. to 250° F. higher, and instead of sweating a band and floor, it may be very easily soldered with pure gold or 22-K. plate and resoldered with the same or lower-grade plate gold innumerable times, without any danger of burning or blistering.

Any, or all, of the alloys in the series following plate No. 2, may be safely used as solders on plate No. 1, thus permitting many soldering operations *without danger of burning the gold*, as may occur in swcating, or the danger of the solder (if poor quality) burning

into and alloying with the gold, as often occurs when using the so-called "easy-flowing" solders. It is evident, therefore, that this alloy offers a great many advantages over the ordinary 22-K. plate gold.

**Gold Plate No. 2.**—As has been impressed by Dr. Pceso, it is absolutely essential to use for removable bridge-work, a hard, durable gold, such as U. S. coin gold. It may be well, at this time, to state that U. S. coin gold contains 90 per cent pure gold and 10 per cent copper, whereas the so-called coin gold obtainable from most supply houses contains, as a rule, some silver, which softens it and makes it *work more easily*, it therefore does not possess the strength and durability required.

The following formula replaces coin gold most satisfactorily:

FORMULA OF GOLD PLATE No. 2.		Per cent.
Gold . . . . .		84.5
Platinum . . . . .		8.5
Palladium . . . . .		2.0
Silver . . . . .		0.5
Copper . . . . .		4.5
Total . . . . .		100.0
MELTING POINT 1975° F., 1080° C.		

In this formula, in order to obtain the equivalent hardness of coin gold, it is necessary to use copper. We can again readily see just how the hardening properties of the alloying elements are utilized. We have 4.5 per cent copper, and the platinum and palladium replace the rest of the copper, thus giving us an alloy equal to U. S. coin gold. This oxidizes, of course, to a slight extent, but the oxidation is not objectionable, and this alloy can be used to replace coin gold practically for every purpose, and may be soldered with other alloys in the series which have the same color. When soldered with casting gold, B or C, the attachment of the floor to a band cannot open up during the final soldering unless deliberately abused, because the soldered junctions are actually higher in melting point than ordinary gold plate.

The fusing point of this alloy is approximately 225° F. higher than coin gold, and it possesses all the advantages over coin that the No. 1 formula has over 22-K. gold.

These alloys, Nos. 1 and 2, can be utilized to great advantage in the construction of swaged plates, both full and partial, especially where it is desired to make the plates of two or three thin layers, on account of the high melting point of the alloys, which permits



of thorough soldering of the laminæ without danger of burning. When used in conjunction with the other alloys in the series, these golds enable the operator to produce dentures far superior to those made from the golds ordinarily employed, on account of increased strength, minimized bulk, and perfect color harmony, throughout the whole structure.

It should be borne in mind that high fusing golds, such as these, cannot be "sweated" advantageously. This is a characteristic of all gold alloys high in platinum metals.

**Alloys for Prosthetic Castings.**—As has been previously stated, in order to cast sections of bridge-work, saddles, partial plates, etc., it is essential to have alloys that are rigid in the cast form, to obviate the necessity for increased bulk. Again, the value of the hardening properties of the alloying elements becomes apparent, as in the following:

FORMULA OF CASTING GOLD "B."		Per cent.
Gold . . . . .		80.0
Platinum . . . . .		9.5
Palladium . . . . .		2.5
Silver . . . . .		1.0
Copper . . . . .		7.0
Total . . . . .		100.0

MELTING POINT 1975° F., 1080° C.

We have here 7 per cent copper and a total of 12 per cent of the platinum metals, which makes an alloy considerably harder than coin gold. When cast, this alloy is about midway in hardness between rolled coin gold and clasp metal. The melting point of this alloy is about 50° F. below pure gold. It is intended for use with the nitrous oxide blow-pipe and should be melted with same, if a considerable quantity of gold is to be cast. Sufficient quantities for small castings can be melted with the ordinary blow-pipe. The copper content being comparatively low permits of the use of the nitrous-oxide blow-pipe without any material change or deterioration of the alloy, if a suitable reducing flux is used in connection with it.

This alloy corresponds in color with plate No. 1 or No. 2, and may be used to cast cusps or cusps and contours directly to bands of either plate No. 1 or plate No. 2. It makes a particularly suitable gold for cast oclusal surfaces on account of its hardness and durability.

The next formula is a modification of "B" and brings out an

interesting point in connection with the effect of copper and the platinum metals on the decrease and increase of melting points.

#### FORMULA OF CASTING GOLD "C."

	Per cent.
Gold . . . . .	80.5
Platinum . . . . .	6.5
Palladium . . . . .	2.0
Silver . . . . .	2.0
Copper . . . . .	9.0

Total . . 100.0

MELTING POINT 1800° F., 980° C.

We note in this formula an increase of two parts of copper and a decrease of a total of 3.5 parts platinum and palladium, the consequence being that the melting point is dropped by the increase of copper and by the decrease of the platinum metals. The melting point is dropped about 100° F. and brought down to approximately that of 22-K. gold. This lowering of the melting point permits this alloy to be melted readily for large or small casting with an efficient illuminating gas and air blow-pipe. It is identical in strength, hardness, color, etc., with casting gold "B" except the fusing point and resistance to the nitrous oxide blow-pipe flame. If the latter is used, caution must be taken to use a reducing flux and not superheat the metal. This applies to coin gold, too, if same is east. *Excessive heat, if applied with the nitrous oxide blow-pipe, and lack of a suitable reducing flux, will permit the oxidation of considerable copper and the dissemination of oxide throughout the casting.*

**Gold for Inlay Casting.**—Since the introduction of the casting process, pure gold has been generally advocated for cast fillings, etc., on account of its supposed minimum shrinkage, softness and malleability, and consequent ease with which the margins could be burnished to eliminate the cement line of an inlay.

A good many operators have failed to cast pure gold satisfactorily and claim that they can cast inlays with scrap gold and produce better and sharper margins. To those who have not experienced this difficulty, it may appear very strange, but, nevertheless, it is a fact that alloyed gold, when properly alloyed, and under fair-casting conditions, invariably casts with sharp, true margins, whereas pure gold has very often failed to accomplish the purpose, both at the hands of the author and many others.

It may be well to consider that the casting of scrap gold of indefi-

nite composition is rather a hazardous and usually unsatisfactory procedure and a great many operators recognizing that fact, are using 22-K. gold, coin gold, etc., with better results than they have been able to obtain with pure gold.

It is a well-known fact that pure platinum, pure palladium and pure silver absorb hydrogen, oxygen and other gases, while in the molten state, and retain some of the gases upon solidification. It is not generally known, but nevertheless true, that pure gold absorbs nitrogen, hydrogen and oxygen, and retains a considerable percentage of one or more of the absorbed gases upon solidification.<sup>1</sup> This tendency, on the part of the metals mentioned, to absorb gases, is minimized and sometimes entirely eliminated by alloying and a small percentage of copper, palladium or platinum will materially alter the behavior of pure gold upon solidification. Castings made with a slightly-alloyed, pure gold, will be found to possess sharp margins and practically equal pure gold in color, ductility, and facility of burnishing, and to be comparatively free from cavities or blow-holes, such as are often found in unalloyed gold castings.

A number of cases under observation have shown that fillings of slightly-alloyed gold do not, after a period of wear, present the same pitted surface so characteristic of cast pure gold fillings under the same conditions.

The rounding of the margins in cast pure gold fillings is usually accompanied by a separation of the residue button from the casting which takes place just prior to the completion of solidification. This occurs particularly when a comparatively large sprue is used, and more especially when a large residue button is used at the same time. An explanation of this occurrence may reasonably be attributed to the following: If the sprue is quite large, and the gold residue button large, the residue remains fluid for a considerable period of time after the casting pressure has been applied, and there appears to be a tendency for the large button to draw to it the gold of the casting through the medium of the large gate (the sprue). A large button of gold very often draws only part of the sprue to it, thus separating the connection between the residue button and the casting, and arresting the exercise of the casting pressure which would otherwise be transmitted from the button to the sprue and then to the casting proper. For those who wish to use pure gold for casting, it is suggested that the quantity of gold used

<sup>1</sup> Roberts-Austen, Introduction to the Study of Metallurgy.

in the casting operation should not exceed more than three penny-weights above the amount actually required for the casting proper, and also that the sprue be no larger than 16 gauge B. and S. This will serve to lessen the area of connection between the casting and residue button, so that this area (the sprue) may solidify more rapidly, and in conjunction with the smaller button, which naturally freezes more rapidly, tend to prevent the separation previously discussed.

Another point that is well to consider, is the fact that alloying of gold reduces the surface tension and cohesion of the molecules while in a molten state, and increases the fluidity, thus facilitating the flow of the metal, requiring less pressure to force the gold into the mould, and consequently, lessening the danger of *distorting the mould*. (See investment compounds for casting.)

#### FORMULA OF CASTING GOLD "A."

	Per cent.
Gold . . . . .	97.0
Platinum . . . . .	1.5
Palladium . . . . .	0.3
Silver . . . . .	0.3
Copper . . . . .	0.9
Total . . . . .	100.0

MELTING POINT 1945° F., 1063° C.

This alloy makes an efficient substitute for pure gold, as the comparatively small amount of alloy does not harden the gold sufficiently to prevent burnishing, nor does it affect the color perceptibly. Copper is the most suitable agent for increasing the fluidity, and the small percentage used does not materially harden the gold. The drop in melting point is compensated for by the platinum, and the small percentage of silver counteracts the coloring effect of the copper on the gold, the consequent alloy possessing practically the same melting point as pure gold, and producing, almost invariably, *sound castings, without the special precaution* which must be taken when pure gold is used.

This alloy will be found suitable for use in teeth close to others, with fillings or inlays made of pure gold, in order to maintain color harmony.

As all the alloys in the series, excepting the casting gold A and the elastic alloy described later, are practically of a uniform color and somewhat lighter (grayish red) and less conspicuous than pure gold or coin gold, it has been found advisable to also formulate an alloy for casting inlays to harmonize in color with the rest of the series.

## FORMULA FOR CASTING GOLD "D."

	Per cent.
Gold . . . . .	95.0
Palladium . . . . .	3.3
Silver . . . . .	0.4
Copper . . . . .	1.3

---

Total . . . . . 100.0

MELTING POINT 1945° F., 1063° C.

In this alloy, the palladium decolorizes the pure gold, and raises the melting point. The copper brings it back to the pure gold standard, and by the addition of the small percentage of silver to counteract the reddening effect of the copper, a color effect is obtained in perfect harmony with the rest of the series.

This gold is quite soft and malleable and may be burnished with practically the same facility as pure gold. This question of burnishing margins of inlays is rather a more or less indefinite procedure. It is the author's opinion that very little effective burnishing (spinning) can be done on inlay margins, and that only after the margins are stoned down to an extremely thin edge. Experience has shown that it is advisable to use hard and durable alloys for inlays, especially those intended to aid in supporting bridge-work, and then only when supplemented with posts or dowels.

This alloy, D, can be combined with B or C, to obtain harder alloys, with no difficulty and no change in color, thus enabling the operator to obtain practically any degree of hardness for special requirements in inlay casting.

## CLASP METALS.

As previously stated, the alloys known as clasp metal, or platinumized gold, as ordinarily obtainable, have been used, with poor results, for casting sections of bridge-work, etc., and are being used to a large extent, and with but mediocre results, as a substitute for iridio-platinum for crown posts, dowels, etc. The ordinary clasp metal is also used to a considerable extent for posts or dowels in the construction of cast base crowns, with usually poor results, on account of its brittleness, especially after it has been cast against. There appear to be about four distinct types of clasp metal obtainable at the supply houses.

The following formulæ are nearly exact and type one and two readily indicate the particular rôle that copper plays as a hardening agent:



TABLE III.—COMPOSITION OF CLASP METALS.

CONSTITUENT METALS.	Type 1.*	Type 2.*	Type 3.*	Type 4.**	Elastic gold.
Gold . . . . .	63	65	63	65	64.0
Silver . . . . .	14	15	17	6	1.5
Copper . . . . .	21	13	7	7	7.0
Platinum . . . . .	2	7	13	18	11.0
Palladium . . . . .	..	..	..	4	16.5
Comparative Melting Point	1600° F. 870° C.	1725° F. 940° C.	1860° F. 1015° C.	1960° F. 1070° C.	2100° F. 1150° C.

\* From analysis. \*\* Is known commercially as "high fusing" clasp metal.

Type 1 represents a class of clasp metals of which there are several on the market. They contain a trace of platinum, so that they may legally be called platinized gold, and a very high percentage of copper. The copper content confers a high degree of hardness and elasticity upon the alloy, but during subsequent heating (soldering and annealing) and working, the alloy softens considerably and loses a good deal of the original elasticity, and sometimes becomes very brittle, especially when over-heated.<sup>1</sup> As the melting point is quite low, soldering with even a comparatively low fusing solder is apt to endanger the integrity of the alloy more often than not.

Type 2 represents a class of clasp metals which contain a larger percentage of platinum and less copper. This alloy, while not quite as elastic before annealing, retains its elasticity after annealing or soldering, better than type one, and makes a quite satisfactory material for clasps for vulcanite work, etc., if not excessively heated and otherwise abused.

Neither of the two alloys are suitable for work requiring repeated soldering operations. Posts or dowels made of these alloys and cast against, usually show a partial fusion and although this fusion is not always evident, the posts if cast against break away (at the junction) ultimately. These alloys are absolutely unfit for the making of split pins.

Type 3 offers a much better material. It contains still less copper, and more platinum, but has not sufficient strength and elasticity. For want of a better material, it has been used for the

<sup>1</sup> Gold-silver-copper alloys containing over 15 per cent copper are quite brittle, very ununiform, and variable in behavior upon annealing.

construction of split pins for a number of years. In addition, the fusing point, although higher than that of types one and two, is too low, and when attempting to solder the solid portion of a split pin with coin gold, the metal is apt to fuse partly, becoming granular and brittle, and the finished pin is apt to give out in use. The type three clasp metal has been cast against with fair results, but the danger of burning it is imminent.

In the three types of clasp metals under discussion is demonstrated the value of copper, and its superiority over platinum as a hardening agent, and the value of platinum, in raising the melting point lowered by the copper.

A number of experiments were made to improve the type three clasp metal, and it can readily be seen from formula of type four, how comparatively simple it was to do so, having established the properties of the binary alloys as a foundation. By raising the platinum to 18 points, the melting point and the elasticity were increased somewhat. Even at this stage, the advance in melting point appeared insufficient, and, as it was deemed advisable to avoid more platinum on account of the danger of its not alloying uniformly, palladium which alloys readily was added, and the melting point increased to a total of app. 100° F. above type three. No more palladium was used on account of its decolorizing action. With the comparatively small content (4 per cent), the color of the alloy is still quite gold-like. This alloy has been used with uniformly good results. It may be soldered safely with coin gold (for split pins), and may be cast against safely if a comparatively heavy gauge of wire (above 16 g. B & S) is used.

In view of the fact that for split pins, dowels for cast base crowns, etc., color is no object, it was deemed advisable to raise the melting point even above that of type four and the elastic gold was formulated, using a considerable percentage of palladium. The palladium, of course, decolorized the alloy completely, but raised the melting point very considerably, and, in conjunction with the copper and the considerable percentage of platinum, produced an elasticity even beyond that of type four, and a melting point very considerably higher.

This alloy can be soldered with perfect safety with pure gold or anything below that in melting point. It may be cast against with perfect safety (except very thin wire), and retains its strength and elasticity after any reasonable number of soldering operations that it may necessarily be subjected to. *It may be soldered very*

*readily and with better union than iridio-platinum. It is much more rigid than ordinary iridio-platinum, and possesses elasticity that is practically absent in all of the iridio-platinum alloys and it may therefore replace the latter and ordinary clasp metal for a great many purposes.*

In the making of split posts of the elastic gold, it is advisable to solder the area that is intended should remain solid with coin gold, as it offers a strong color contrast to the comparatively white elastic gold.

The line of demarkation between the solid and the split portions of the post, will be then readily distinguished. As the coin gold is of sufficiently high melting point, it will not reflow during later soldering operations.

The comparative hardness and the elasticity of the four types of clasp metals and the "elastic" gold is approximately as illustrated in the following:

COMPARATIVE ELASTICITY AFTER ROLLING AND  
ANNEALING ONCE.

Type 1.	Type 2.	Type 3.	Type 4.	"Elastic" Gold.
10	9	8	9+	10+

COMPARATIVE LOSS OF ELASTICITY AFTER SOLDERING AND  
ANNEALING THREE TIMES.

Type 1.	Type 2.	Type 3.	Type 4.	"Elastic" Gold.
2-3	1-2	1+	1	.5-1

Types one and two become very brittle if overheated during soldering. Type three is subject to same to a lesser degree and type four only occasionally. The "elastic" gold appears practically immune to temperatures below the melting point of pure gold.

Clasp metal should always be annealed before use, as manufacturers often neglect to do so after the rolling or drawing operations.

### GOLD SOLDERS.

In order to obtain the desirable uniformity of color in a denture without subsequent gold "washing," as advocated by some, it was necessary to formulate solders to correspond in color with the other alloys. Incidentally, it is well to consider the imposition that has been practiced upon the profession by some of the unscrupulous manufacturers of gold solders.

For many years, a great many in the profession have been under the impression that gold solders stamped 18-K. were actually 18-K. (75 per cent gold) in fineness. This was not so and a number of the manufacturers were producing, and are still producing, solders marked 18-K., etc., anywhere from two to six karats below the mark. In addition, the solders mentioned are not only deficient in gold content, but contain many deleterious alloying elements, such as high percentages of cadmium, iron, etc., in order to complete the required total content of base metals in the solders.

On the other hand, the reputable manufacturers have consistently stated that their solders were approximately two karats below the mark, and intended for use on that karat of plate. The reputable manufacturers have recently started to stamp the actual fineness on their solders and the others have followed suit; but some manufacturers still persist in the practice of misrepresentation by not actually furnishing the gold content indicated by the fineness stamp on the product.

**Alloys of Gold with Metals in Group 3.**—Besides zinc, the other three metals in Group 3, namely, cadmium, tin and aluminum, are being used to a very large extent as alloying elements in making gold solders. Cadmium, if used in large percentages, debases the alloy very considerably and renders it practically unfit for use in the mouth.

Tin is also used to a considerable extent, as it lowers the melting point of gold very considerably, but it renders the gold quite brittle and aids materially in the tendency of solder to burn into the work, which property is characteristic of all the so-called easy flowing solders. The term "easy-flowing" is undoubtedly a misnomer. Rather, these solders melt "easy," but do not flow "easily." They ball up and stick, and if the heat is forced to induce flow, they burn into the work with consequences too well known to require further discussion.

The value of aluminum, as a constituent of gold solders, is yet to be proved. It is a constituent of most of the patent commercial alloys used by jewelers in compounding their solders.

Solders made according to the following formulæ will be found satisfactory in color, strength, and fusing point, although higher in fusing point than the so-called easy-flowing solders, for which there seems to be a "popular" demand. They will be found to flow readily if the work on which they are to be used is brought up to the proper temperature.

## FORMULAS FOR GOLD SOLDERS.

SOLDER No. 84.		Per cent.
Gold . . . . .		84.0
Copper . . . . .		7.5
Silver . . . . .		5.5
Zinc . . . . .		3.0
M. P. 1650° F., 900° C. (20-Karat fine).		

---

SOLDER No. 76.		
Gold . . . . .		76.0
Copper . . . . .		11.5
Silver . . . . .		8.5
Zinc . . . . .		4.0
M. P. 1550° F., 840° C. (18-Karat fine).		

---

SOLDER No. 68.		
Gold . . . . .		68.0
Copper . . . . .		14.5
Silver . . . . .		12.5
Zinc . . . . .		5.0
M. P. 1450° F., 785° C. (16½-Karat fine).		

The first and second, 84 and 76, will be found sufficiently low in melting point for all ordinary operations where Dr. Peeso recommends the use of his No. 21 and No. 19 solder. The number 68 solder, although higher in actual gold content than the best so-called 18-K. solder obtainable, is still too low a grade to be used in general work, especially in fixed bridge-work, but may be used in connection with removable bridge-work or plate work because in that work or repair work there is required at times a lower-fusing solder.

## COMPOUNDING OF GOLD ALLOYS.

Although the new series of alloys, made with practically no deviation from the formulæ which are given herein, may be purchased from the supply houses,<sup>1</sup> the author considers it well to give a number of directions to those who may desire to compound the various alloys.

It is not practical to make a small quantity, especially if for plate gold or solder which is to be poured into an ingot mould and rolled. The higher the melting point of the alloy, the more necessary it is to have a comparatively large quantity, and it is well not to attempt less than five ounces for plate gold and three ounces for solder. The elastic alloy should be made in even larger quantity as it freezes very rapidly.

<sup>1</sup> Manufactured by the J. M. Ney Company, Hartford, Conn.



It is practically impossible to alloy platinum or palladium with gold in the small blast furnace which the practitioner is likely to have in his laboratory. For all alloys with platinum metals (made on the small scale previously mentioned) it is well to alloy the gold and the platinum metals (rolled very thin), first on a charcoal block, using the nitrous oxide and illuminating gas blow-pipe, or preferably the oxygen and illuminating gas blow-pipe. A number of the alloyed nuggets can then be placed in a crucible on top of the required silver and copper content, covered with a suitable reducing flux and melted, poured into an ingot mould and rolled or drawn.

When copper is to be used, it is essential that same be chemically pure and especial precaution must be exercised to prevent oxidation as far as possible, which latter can be accomplished by the use of a strong reducing flux. (See under Fluxes.)

A slight excess of copper should always be added to allow for some loss which invariably occurs.

If the alloy that it is intended to make is to be used for casting purposes, the procedure is the same as previously described, excepting that the metal, when properly molten, can be poured into a pail of water and thus granulated. This procedure saves the labor of rolling the ingot and the granulated form of gold is as convenient to use for casting as any other.

In all cases, just before pouring the contents, the crucible should be well shaken to insure a thorough admixture of the metals.

Some writers advocate the preparation of alloys for casting in the following manner: Melt the gold, feed the platinum (very thin) into the molten gold and then add copper, etc. It is impossible to make a uniform alloy in this manner, especially if copper is used, because a considerable amount of the copper is oxidized on account of direct contact with the blow-pipe flame. In the author's hands the directions previously given have been found to work out admirably.

In compounding solders where zinc and copper are the constituents it has been advocated that brass which contains copper and zinc be used in order to prevent the loss of zinc through oxidation and volatilization. This is a very dangerous practice, and the results are very unsatisfactory because it is impossible to obtain a commercial brass that does not contain a considerable percentage of lead, tin, and traces of antimony, etc., which are all very harmful substances and invariably tend to make the solder

brittle. It is therefore necessary to first make an alloy of chemically pure zinc and chemically pure copper in a proportion of say one part zinc and two parts copper. This alloy, when properly melted, is granulated by pouring into water, and then, if carefully gathered, dried and weighed, the loss of zinc can be determined. The necessary additional copper to make the required alloy is then calculated and added when compounding the solder.

It is well, of course, to make a considerable quantity of the copper zinc alloy, as the cost is slight and the prepared alloy is then available when wanted. It has been stated that zinc volatilizes very readily from solders. This is quite contrary to the author's findings. The small percentage of zinc as given in the formulæ herein is quite stable after remelting several times. The authors who claim this strong volatilization of zinc may have been dealing with a solder of unknown constitution in which they suspected zinc but which probably contained a percentage of cadmium which volatilizes quite readily.

#### REFRACTORY MATERIALS. INVESTMENT COMPOUNDS FOR SOLDERING.

The normal contraction of gold from the molten to solid state is approximately 2 per cent. The contraction of gold solder is practically the same, although some of the constituents have a higher contraction than gold, but when combined in an alloy the movement is practically the same.

While possibly there may be a slight difference between the contraction of solder and gold, a considerable contraction occurs nevertheless, and is the cause of a great deal of trouble.

A number of soldering investment compounds on the market are claimed by the manufacturers to possess *neither expansion nor contraction, and therefore perfect*. Granting, for the sake of the argument, that such is the case, we still have the contraction of solder to contend with, and how are we to produce a soldered bridge or denture that will fit and go into place accurately, when a number of the units in the work have been drawn together by the contraction of the solder?

Unfortunately, we have not merely the contraction of the solder to contend with, but we have a much more prolific cause of disaster. For example, we have a number of completed sections, such as castings, to join together where but a very small quantity of solder

is to be used, and yet, after soldering, we find that the finished piece is contracted and distorted and will not go into position. The fact of the matter is that practically all the commercial compounds shrink upon heating, when brought up to the proper temperature for soldering.

In some commercial investment compounds the shrinkage is extremely high, fully 6 or 7 per cent, so it is evident that the *principal cause of the trouble lies not so much in the actual contraction of the solder, as it does in the great contraction of the average investment, even before the case is quite hot enough to apply the solder.*

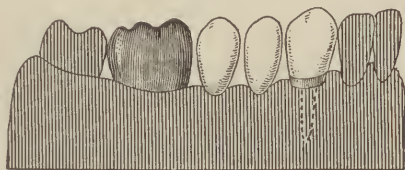


FIG. 723

Fig. 723 shows an ordinary simple bridge assembled and ready for investment. The porcelain facings are spaced as per instructions from time immemorial. Fig. 724 shows the case invested and the distinct spacing of the backings.

The case is then heated, and if an examination of the investment is made with a magnifying glass, just before placing it on the sol-

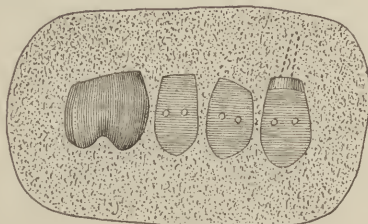


FIG. 724

dering block, it will be noticed that the *units have been drawn together*, as in Fig. 725, and when the case is soldered and cooled, the facings are very apt to be checked, on account of having been brought together into very strong contact.

When attempting to place back on the cast, difficulty is encountered, but as the plaster yields, the bridge is forced down and then becomes evident the loss of the contact points, as illustrated in Fig. 726.

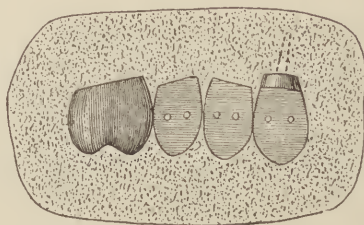


FIG. 725

This discrepancy will not be considered by some operators as a serious factor. In fact those who solder directly on the cast destroy the evidence for the time being. If it is a fixed bridge, it is forced home some way or other and let go at that, but on the other hand, if a removable bridge, even as small in dimension as the one illustrated, it is practically impossible to place it in position, and the matter is a most serious one, as a good many operators have found.

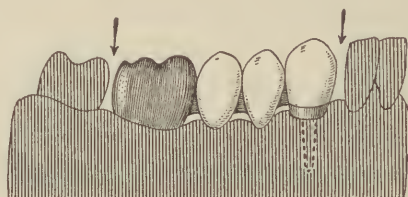


FIG. 726

Some writers advocate completing the dummies and then placing them in perfect contact to prevent the shrinkage of the solder used to unite the sections. This is practically impossible, because the metallic units are infinitely stronger than the investment, and expanding under heat will invariably split the investment (see Fig. 727) and thus often cause a serious distortion in the soldered piece.

There seems to have been, as a search of the literature has shown, absolutely no consideration given to the movement of the refractory mass that holds the parts *in situ* during the preliminary heating and final soldering operations.

The author's aim in experimenting has been not merely to produce an investment compound that would merely not shrink, but one that would *actually expand*, move in unison with the solid invested metal and *spread the units* sufficiently so that when a reasonable amount of solder is flowed to connect the units, the *contraction of the total piece would be neutralized by the expansion of the investment*.

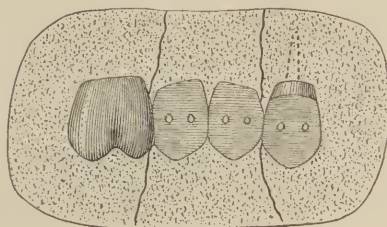


FIG. 727

Before attempting to formulate an investment compound possessing such properties, it is necessary to consider the chemical and physical properties of refractory materials that may be employed in the compounding of investment materials.

In one of the most "popular" books on crown and bridge-work,<sup>1</sup> the following appears:

"Many substances may be used in combination with plaster of Paris, which is necessarily the basis because imparting the property of crystallization, and which must be incorporated to the extent of at least 50 per cent.

"The remaining proportion may be then composed of such materials as will, by virtue of their characteristics and physical properties, meet such requirements. The following are serviceable:

Powdered silex,  
Fine asbestos,  
Beach sand,  
Marble dust,

Pulverized pipe clay,  
Powdered fire brick,  
Magnesium oxide,  
Pumice stone.

"A combination of any of these ingredients in varying proportions with the proper quantity of plaster will usually possess the necessary qualities, etc."

Before even considering a compound of *expanding properties*, it is well to thoroughly understand the properties of plaster of Paris

<sup>1</sup> Goslee's Principles and Practice of Crown and Bridge-work, pp. 36-37.



and the other materials enumerated in the list of suitable refractories, in order to see if it is possible to even produce an investment compound that will *at least not shrink under heat*.

**Plaster of Paris.**—Plaster of Paris,  $\text{CaSO}_4$  (calcium sulphate) is made by burning gypsum rock. In the process of burning, most of the water is driven off. The phenomena of recombining with water and crystallizing is well known and need not be discussed here. It is universally used as the binder for all investment compounds used both for soldering and casting. It *shrinks very considerably upon heating*, but for want of a better material must be employed.

The *more plaster* used in an investment compound, the harder the resultant mass will be, and the *more shrinkage* will take place. As will be shown subsequently, *any such proportion as the 50 per cent mentioned by the author quoted is absolutely out of question* because it has been found, so far, impossible to compensate for the contraction of the binder, by the addition of any other material, even if possessing the property of expansion.

**Powdered Silix.**—Silix is the commercial term applied to silicic acid ( $\text{SiO}_2$ ) which is the main constituent of rocks, stones, clays and many other minerals. A great deal of it is also found in a free state and in the form of quartz, rock crystal, flint, opal, chaledony, etc. The so-called silix is often practically pure  $\text{SiO}_2$ . However, different varieties of silicic acid exist, and although all of a similar chemical composition, they possess varying physical properties.

Silica obtained from quartz or rock crystal, consists of sharp crystalline particles and possesses a high specific gravity, 2.6 to 2.8. It expands considerably upon heating, but loses this property gradually upon reheating frequently or fusing completely.<sup>1</sup> The melting point of pure silica is approximately 3200° F.

Another variety of silica that exists quite as frequently as the crystalline, is an amorphous form which possesses a lower specific gravity, 2.2 to 2.4. It has very little expansion upon heating, and some varieties of the same type do not expand at all.

Still a third variety exists in a tabular form and is extremely light and porous. It is known as diatomaceous earth or kieselguhr. Its specific gravity is 1.6 to 1.8. It is mined in very great quantities

<sup>1</sup> Utensils made of fused silica are replacing platinum ware to a great extent in chemical work. As the coefficient of expansion is very small (0.00000054 per ° C.) it is possible to subject crucibles, casseroles, etc., to rapid changes of temperature without danger of breakage. Apparatus suitable for dental purposes is manufactured by the Thermal Syndicate Ltd., of New York.

and used very extensively as a heat-insulating agent, but contracts very strongly, and therefore is totally unfit for use as part of a dental refractory compound.

As stated before, these various forms of silica can be obtained in almost a pure state and are alike chemically, but the term "powdered sillex," means nothing unless a particular type is specified, and the individual, who is not conversant with the matter, is as likely as not to purchase and use a grade of least expansion. *The crystalline variety, of high specific gravity, expands under heat considerably, and in this fact lies the solution of the whole problem.*

A mixture of 50 per cent plaster of Paris and 50 per cent silica, even if the latter is of the variety possessing the highest expanding properties, contracts very considerably when brought up to the temperature required for soldering or casting operations.

In order to be brief, the author will state that all the other items in the list of suitable materials have a positive shrinkage, with the exception of beach sand. The objection to the latter, is the fact that it is often quite impure and the iron and alkalies that form the major portion of the impurities usually act as a flux, and thus lower the melting point.

It is well to state that magnesium oxide and marble dust, which latter is of course calcium carbonate, are subject to a particularly strong contraction under heat.

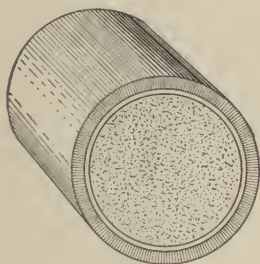


FIG. 728

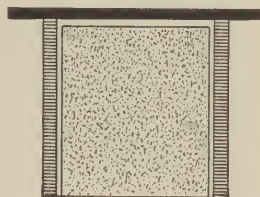


FIG. 729

Fig. 728 illustrates the comparative shrinkage of one of the best commercial compounds obtainable. A considerable space will be noted between the mass of investment and the rim of the metallic ring in which it was placed after mixing, permitted to set, and heated to soldering temperature.

Fig. 729 (in cross section) shows even more clearly the contraction after heating when a straight edge is placed across the top of the flask.

To summarize the whole proposition, the author will state that *in order to produce an investment compound that not only does not shrink, but actually expands sufficiently to follow the movement of a red hot ring, that it is necessary to use a grade of silica as pure as possible and of the highest expansion, which means, of course, a grade of silica from the quartz group, and a grade of plaster of Paris of the least contraction.*<sup>1</sup> As previously mentioned, any such proportion as 50 per cent plaster cannot be used, because the expansion of the best silica, great as it is, is not sufficient to compensate for even the shrinkage of the plaster. Hence, a lower percentage of plaster, and a higher percentage of silica must be used.

FORMULA FOR INVESTMENT COMPOUND (SOLDERING).

	Per cent.
Plaster of Paris (Excelsior Brand No. 3) . . . . .	33.0
Silica (Fine) (F. F. F.) . . . . .	45.0
Silica (coarser) (M. C.) . . . . .	22.0
Total . . . . .	100.0

A compound made according to this formula will be found to expand upon heating to soldering temperature, sufficiently to fill a red hot ring, as in Figs. 730 and 731.

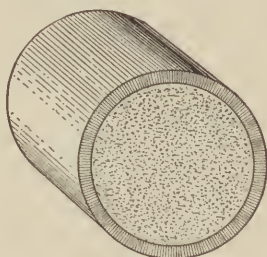


Fig. 730

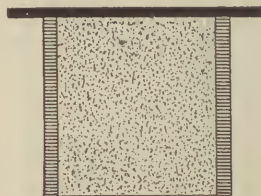


Fig. 731

This property of expansion is sufficient to *counteract the contraction of a normal bulk of solder*. Furthermore, this expansion is sufficient to *follow the movement of invested metallic sections that have been previously completed*. This compound sets promptly and is sufficiently strong to hold the invested parts *in situ* firmly. It will withstand the action of boiling water (when washing out the wax) without disintegration.

<sup>1</sup> It is, no doubt, well known that fine plaster contracts more than coarse plaster when subjected to heat. Most of the coarse building plasters are rather ununiform and do not possess the binding power of the finer plasters. The grade selected is quite uniform and not too coarse to prevent efficient binding of the mass.

Dr. Peeso has long ago demonstrated the great importance of not soldering work directly on the cast. The work should be so assembled that the waxed-up structure can be removed from the cast, which is made of plaster of Paris, or a more durable material, such as "Artificial Stone" (made from the author's formula), and then transferred to the investment compound. After soldering, the work may be placed back on the cast, which is intact, and required corrections can be made by grinding or trimming here and there before the structure is even tried in the mouth.

Of course the author has made numerous and exhaustive experiments to determine the properties and behavior of various refractory materials, and it is important that the grades of silica and plaster specified be used.

As the reader can deduct from the preceding, the terms silica and plaster of Paris mean very little, because while the different grades of silica are practically alike, chemically they differ very materially physically. To the author's knowledge, it is possible to purchase at least three or four hundred brands of plaster and over a thousand distinct grades of silica with varying percentages of impurities and varying sizes of particles.<sup>1</sup>

There is no intention to claim that this is the last word on the subject. No doubt, other experimenters will succeed in producing as good or even a better compound with other grades of material.

**Investment Compounds for Casting.**—The elements of error, caused by the physical behavior of the metallic alloys and the refractory materials utilized in the casting process, are quite analogous to the conditions that exist in the soldering process. Gold, no matter how alloyed, so far as present knowledge of the subject indicates, *does contract* in the transition from the fluid or plastic state to the solid or frozen state, and an inlay investment compound that possesses the property of expansion will, at least in measure, compensate for the contraction of gold.

It is not the author's aim here to exhaustively discuss casting problems in general. He simply wishes to suggest a formula for what he considers a better investment compound than is purchasable, and to point out some of the physical phenomena of existing

<sup>1</sup> The materials used by the author were obtained from W. B. Daniels, 252 Front Street, New York City, who is a dealer in minerals and chemicals. He will supply the various ingredients for both the soldering and casting compounds in quantities suitable for the requirements of the practitioner. Of course it must be remembered that such comparatively cheap materials are, as a rule, sold by the ton or car load. Hence, Mr. Daniel's willingness to furnish these materials in small quantities at a moderate price deserves commendation.



conditions. Before discussing the formula it is well to first consider some of the conditions that have to be dealt with. We have not only the contraction of gold to contend with, but we also have the contraction of the wax, and that is a most serious factor indeed *The contraction of wax is usually productive of a greater degree of error than the actual contraction of gold.*

This subject has been covered most thoroughly by Dr. C. S. Van Horn, of Bloomsburg, Pa., in his articles in the *Dental Cosmos*,<sup>1</sup> and his conclusions are yet to be controverted.

The conditions, which he successfully corrects, are the following: *After the removal of a wax pattern from the mouth, at body temperature, it contracts considerably upon reaching room temperature and still more when invested with cold water.* His method consists of *investing the pattern at approximately 110° F., which increase in temperature not merely compensates for the contraction of the wax, but also expands the wax to almost completely counteract the shrinkage of the gold.*

In addition, he uses an expanding investment (made from the author's formula), and the total expansion of the wax, coupled with the expansion of the investment, enables Dr. Van Horn to produce the most accurate fitting inlays the author has ever seen. A study of Dr. Van Horn's technic will amply repay anyone who is desirous of obtaining better results.

Dr. James G. Lane,<sup>2</sup> of Philadelphia, was among the first to point out the value of silica as an ingredient of inlay investment compounds, on account of its expansion and consequent ability to counteract the contraction of plaster of Paris (the binder). The formula that he used (plaster 25 per cent and silica 75 per cent) expands considerably. In addition, Dr. Lane was also among the first to point out the fact that a hot mould was stronger than one that was heated and allowed to cool.

In the utilization of the casting process, there are a great many important factors to be considered, among them the *fusing point of the investment compound which constitutes the mould; the relation of this degree of fusibility to the temperature of the mould at the time the molten metal enters it; the temperature of the molten metal at the time it enters the mould and the pressure used to force the molten metal into the mould.*

<sup>1</sup> *Dental Cosmos*, 1911, pp. 664, 472, 1109. 1912, pp. 890, 973. 1914, p. 940.

<sup>2</sup> See papers of J. G. Lane in *Dental Cosmos* and *Dental Digest*, 1910-14. Also M. A. Ward in *Dental Cosmos*. These contributions are very interesting and the most valuable that have appeared pertaining to the subject.



The fusing point of an investment compound, made of plaster of Paris and pure silica, is under 3000° F. Some of the commercial investment compounds, which are made with impure silica containing a considerable percentage of iron and feldspar, which latter contains alkalies such as sodium and potassium, are often considerably lower fusing. Consequently, when superheated gold is cast into such a comparatively fusible investment, a partial union is bound to take place, with the consequence that the gold partly unites with the investment, and the resultant casting is quite rough and inaccurate.

The strong possibility of such a condition as described leads the author to state his opinion on that apparently never-ending controversy regarding the casting of gold in a *hot or cold flask*. This point has been argued time and time again, some operators claiming that they obtain better results by casting into a hot flask, and others maintaining the reverse. In order to discuss the subject intelligently, we must also bear in mind the degree of heat that is utilized for melting the metal to prepare for its entrance into the mould.

Let us first consider the following:

**Hot or Cold Mould.**—*Using the illuminating gas and compressed air blow-pipe.*

We shall discuss this phase first because the great majority of castings are accomplished by using the ordinary gas and air blow-pipe. The maximum temperature that it is possible to produce with artificial gas and compressed air is approximately 2450° F. The temperature of the investment in the casting ring when red hot is about 1300° F. If this red hot flask is placed on the casting apparatus and the quantity of gold, say 5 dwts., placed in the crucible, it will take about two and a half minute's exposure to an efficient blow-pipe flame, to bring the gold to the proper state of fluidity to enter the mould. In the meantime, the red hot mould (on the casting apparatus) has cooled considerably, and the actual temperature of the cavity in the mould at the time the gold enters it can be safely calculated not to exceed 900° F. Therefore, casting into a "red hot flask," with an ordinary gas and air blow-pipe, is done with the mould not red hot, but at a temperature approximately 900° F.

In casting into a so-called "cold" flask using the same blow-pipe and quantity of metal, it will be found that it takes longer, say four minutes, to bring the metal into a state of fluidity, and although the flask is at room temperature when the process of melting the

gold is started, the subjection of the mould to the flame of the efficient blow-pipe for a period of approximately four minutes raises the temperature of the mould to an extent of nearly 700° F. Therefore, when it is attempted to make a casting with the ordinary gas and air blow-pipe in a so-called "cold flask," the temperature of the mould at the time the gold enters it is approximately 700° F.

Upon considering both conditions and comparing the temperature of the moulds, namely 900° and 700° F., it will be readily seen that there is *comparatively little difference between the two* at the actual time that the casting is done, and consequently both the "hot mould" and "cold mould" advocates are right, strange as that may appear, providing of course, that the ordinary gas and air blow-pipe is employed.

The author's experiments along this line have shown conclusively that it is hardly possible to superheat the gold with an ordinary gas and air blow-pipe or bring the gold to such a temperature that it will unite with the investment at any stage of the procedure and it is the author's firm opinion that in the hands of the careless or inexperienced operator, the *ordinary gas and air blow-pipe is a positive insurance against superheating* the gold, and therefore insures a casting satisfactory, at least as far as errors consequent to the superheating of gold are concerned.

**Hot or Cold Mould.**—*Using illuminating gas and nitrous oxide or oxygen blow-pipe.*

Here we have a totally different and quite often a dangerous condition to contend with. While the ordinary gas and air blow-pipe is capable of producing temperatures only somewhat beyond 2400° F., it is possible to obtain, without difficulty, 3400° to 3500° F. from nitrous oxide and illuminating gas and over 4000° F. from pure oxygen and illuminating gas. It may be well at this time to call attention to the fact that the often used term "oxyhydrogen" is incorrect when used in connection with illuminating gas because of the fact that in order to produce an oxyhydrogen flame it is necessary to have both oxygen gas and hydrogen gas, whereas ordinary illuminating gas contains less than half of its volume of hydrogen, and the balance is principally methane (carbon, etc.).

It is very difficult to avoid superheating gold when applying such extreme temperatures, and extreme caution must be exercised by the operator.

As a rule, the cold flask is indicated when using extreme temperatures for melting the gold, because the gold melts very rapidly

(15 to 20 seconds), and comparatively little heat is transmitted to the mould. The mould is then comparatively cool, and even if somewhat superheated gold is cast, it is not so apt to unite with the investment as when both the gold and the mould are superheated.

*The author has very often made failures of castings, on account of superheating the gold, and he wishes to impress strongly the fact that extreme caution must be exercised in this connection.*

The nitrous oxide or oxygen and gas blow-pipe offers advantages over the ordinary gas and air blow-pipe as a means of producing heat rapidly, but the maximum temperature attainable with the ordinary gas and air blow-pipe acts as a sort of an insurance against superheating, and, in fact, if efficiently used produces satisfactory casting results in all ordinary operations.

One of the most prolific causes, in fact, probably the greatest cause that is productive of faulty castings, is the excessive pressure used in forcing metal into the mould. The principal reason for this is due to the fact that in the majority of casting apparatus there is no provision for obtaining a definitely measured and indicated amount of force. It takes just so much and no more pressure to force gold into a given mould, and hold it there until solidification begins. Excessive pressure will not, under ordinary conditions, prevent the normal contraction of gold, because the *mould into which the gold is cast yields, and hence will distort in the same proportion as excessive pressure is applied.* It may be true that a pressure of 2000 pounds per square inch may totally prevent contraction, but *where is the mould that will stand that pressure?*

It is unfortunate that more operators do not realize the true value of an efficient casting apparatus such as the Taggart, and the false economy resulting from the use of an intrinsically faulty or make-shift device.

By using a grade of silica of *maximum expansion*, and a grade of plaster of *minimum contraction*, it is possible to produce an investment compound as follows:

#### FORMULA FOR INVESTMENT (CASTING).

	Parts.
Plaster (Excelsior Brand No. 3) . . . . .	29.0
Silica (Fine) (F. F. W.) . . . . .	71.0
Total . . . . .	100.0

The plaster is the same as is used in the soldering investment. The silica is similar to the fine grade utilized in the soldering investment formula, but it is purified, and combines with water readily

without releasing dirt, scum, etc.,<sup>1</sup> and consequent bubbles. An investment made from this formula will be found to expand slightly more than Dr. Lane's formula, although the plaster of Paris content is higher, and for the same reason somewhat stronger, and more resistant to excessive pressure.

**Compounding of Investment Materials.**—It is a well-known fact that very few commercial investment compounds are uniform in composition. In other words, although the manufacturers claim that their formulæ are adhered to, there appear variations in batches purchased at different times. This is due to the fact that insufficient attention is paid to testing the different batches of raw material, and also to the faulty compounding due to the large quantities mixed at a time. One commercial preparation has been found, on the contrary, quite uniform, for the simple reason that the manufacturer pays especial attention to the testing of the raw materials and compounds, the mixture in comparatively small quantities (200–300 lbs. to the mix).

In mixing the plaster of Paris and silica, it is not necessary to do any sifting, because the specified materials may be obtained evenly and definitely graded. All that is required is a *thorough mixture without excessive trituration*.

A very efficient small mixing apparatus may be obtained from The J. H. Day Co., Cincinnati, Ohio. It is known as the "Hunter" (experimental size), and will handle from seven to eight pounds of material. The ingredients are weighed out, placed in the container, and the apparatus revolved slowly for twenty-five or thirty minutes. This produces a uniform and intimate mixture without crushing or grinding the plaster. This point is very important, and if smaller quantities are mixed in a mortar, it is important to use very light pressure in order not to crush the plaster particles. The mixed material, of course, should be properly stored and protected against moisture.

**Investments, Directions for Use.**—The soldering investment should be mixed quite thick. The thicker, the better, up to a certain limit, of course. If mixed too dry, the plaster-of-Paris content does not obtain sufficient moisture to crystallize properly and act efficiently. A good consistency is 42 to 43 grammes powder to each 15 cc water or 27 dwts. (Troy) to  $\frac{1}{2}$  fluid oz. water.

<sup>1</sup> Bubbles and froth produced upon attempting to combine investment compound and water, are often caused by dirt or such impurities as mica, etc., contained in the silica.



The inlay investment should be mixed in a proportion of 35–36 grammes powder to 15 cc water, or 23 dwts. (Troy) powder to  $\frac{1}{2}$  fluid oz. water. This quantity is sufficient to fill an ordinary inlay flask.

These proportions produce a mixture that allows ample time for manipulation, provided considerable time is not spent in adding a little more water, a little more powder, etc. *The setting time of the plaster naturally controls the setting time of the whole mixture, and as the action of retarding agents, added to control the set of plaster is sometimes indefinite, and often harmful, it is advisable not to attempt to interfere with the normal setting time of the plaster.*

The compound, if mixed without any unnecessary delay, sets sufficiently slow for all ordinary operations. It is the author's practice to have on hand a number of cork-stoppered bottles containing the dry compound (weighed), and a number of rubber-stoppered vials containing water (measured). The accurately-measured powder and water are thrown simultaneously into the mixing bowl, and having no bubbles or froth (as with graphite compounds)<sup>1</sup> to contend with, the mix can be made ready for use in from thirty to forty seconds, thus allowing ample time for coating the pattern and imbedding in flask.

This method is superior to using the automatic weighing apparatus furnished by some of the compound manufacturers, as they are often either inaccurate or not sufficiently "flexible."

It is not advisable to attempt to invest more than one pattern at a time.

Another advantage in using measured and stored water lies in the fact that it is, when used, at room temperature, and not at hydrant temperature, *and the room temperature water does not induce a further contraction of the wax pattern during the process of investing.*

**Heating of Investments.**—The soldering investment may be heated quite promptly upon setting. Boiling water does not affect it materially and the wax may be washed out thoroughly, the case fluxed and immediately placed on the heat, moderate at first and

<sup>1</sup> Most of the compounds that contain flake graphite are very difficult to mix on account of the air content in the flakes and their tendency to "float." Such a compound requires a considerable period of time to mix, and therefore a retarded plaster is usually employed. Nodules, or "ghosts" on castings, occur frequently because the material is not "dormant" until "set." One manufacturer of such a compound claims that it is the plaster and not the graphite that causes the bubbles. This statement appears quite contrary to the facts. Kerr's "Graphite" Investment is made with previously-treated graphite and it is the best graphite investment that the author knows of.



then brought up quite rapidly to a good red heat prior to the actual soldering operation.

*It is the inefficient and insufficient heating of the invested work that is partly to blame for the "popular" demand for "easy-flowing" solders. Properly-heated investments facilitate the flow of normal or even high-fusing solder.*

A small quantity of potassium sulphate or sodium chloride may be used to hasten the setting of the investment, but that is rarely, if ever, necessary because it sets quite promptly if mixed to the proper consistency.

The inlay investment should be permitted to set for at least thirty minutes, to insure a fair crystallization (so-called "initial set") of the plaster. The flask should then be placed over a low heat and kept there until the moisture disappears and the wax begins to diffuse and carbonize. The heat is increased somewhat, during the latter part of this operation, and still further increased until the mould is brought up to either a dull red heat (for cold mould) or a bright red heat (for hot mould).

The initial stages of heating must be at a temperature that will not permit the wax to run out of the mould, as it is important that the wax be absorbed in the mould. Forced heating and a generation of steam during the initial stages of the drying process will force the wax out of the mould and produce a rough interior, which in turn will show its effects upon the casting, the resultant casting being rough, incorrect, and usually unfit for use. It is, of course, essential to confine and concentrate the (higher) heat in order to bring the mould to the proper temperature within a reasonable period of time.

Prolonged heating of the investment is even more dangerous than underheating, as plaster of Paris, which is the binder, *shrinks in proportion to the time that it is exposed to heat*. The total heating operation for an ordinary mould (inlay, etc.) should not exceed fifty minutes or an hour at most. It may be divided into three periods, say twenty-five to thirty minutes for low drying heat, then increased somewhat for ten to fifteen minutes, and finally subjected to the highest heat for not more than from ten to fifteen minutes.

It is permissible not to heat a case until two or three hours after the investment has been mixed, but if it is permitted to stand for a day or two, and loses all moisture, if then heated and cast, the resultant casting is apt to be very poor. It is hard to determine

the actual principle involved, and it is not important to do so, but the fact does exist. In addition, under such conditions, the investment is very apt to crack or split upon heating. The author usually heats and casts into "green" moulds, but has found that a dry mould, if moistened prior to heating, appears to behave almost as well as a "green" mould. If the mould is only a few hours old it is moistened slightly, but if it is more than a day old, it is placed in water until saturated to the extent of a "green" mould.

Both the soldering and casting investment compounds are *practically immune* to "checking" or "cracking," even under the most severe heating conditions.<sup>1</sup>

### FLUXES.

**Fluxes for Soldering and Casting.**—For sweating, soldering or melting metals in the construction of bands, crowns, bridges, or castings, the selection and use of the proper flux or fluxes is a matter of the utmost importance, especially if the metals or alloys used are oxidizable or volatile when subjected to heat.

Ordinary borax, or calcined borax, has been the principal flux used for this purpose. It has been almost universally used by jewelers, and the dentist has followed suit. There is, however, a considerable difference between the class of work that the jeweler and the dentist perform.

In dental soldering, we use higher grade solders and a considerably higher heat, during the various operations. As ordinary borax melts at a comparatively low temperature, it does not act as efficiently during the higher temperature stages as the requirements demand. The tendency of borax when considerable heat is applied is to liquefy strongly, and run down to the deep portions, leaving the other portions, that it is desired to solder, insufficiently protected. Dr. Peeso recognized this long ago by using a combination of borax and boric acid, which combination melts at a higher temperature than borax alone, does not liquefy so readily, stays on the surface, protects the work longer, and is more efficient in every way.

<sup>1</sup> This fault is inherent in most investment compounds; the causes are numerous and principally due to the producers ignoring the physical laws governing the selection and compounding of materials for the purpose. One of the principal errors in this connection is the attempt to form a "concrete like" mass without realizing that there is a very great difference in the behavior of dental investment compounds and concrete used in building operations.

An efficient flux that has served very satisfactorily in the author's hands for a considerable period of time is the following:

#### FORMULA FOR SOLDERING FLUX.

	Parts.
C. P. borax glass (fused) . . . . .	55.0
C. P. boric acid (not fused) . . . . .	35.0
C. P. silica . . . . .	10.0
Total . . . . .	100.0

The ingredients are placed in a clean clay or sand crucible, and brought to a fair red heat. They combine quite readily and when quite fluid, the mixture is poured into cold water. As this glass is quite soluble, it must be removed from the water as soon as possible, dried, and pulverized to pass an 80-mesh sieve. It may be pulverized without difficulty, as the particles are very frail and brittle.

This flux may be used either in the powdered form or compounded with "*vaseline*," to form a paste, or dissolved in boiling water and the saturated solution used. In the liquid form, it will be found suitable for all general operations where the work can be heated, so as to drive off the moisture and thus leave a coating of the flux, as in bands, crowns, etc. When the work is in an investment, the grease flux will be found most useful, as it may be applied just after the case is washed out and still warm. The carrier (*vaseline*) flows down into the deep portions and crevices, carrying the particles of flux along. The powdered dry flux can be used on invested work under the blow-pipe when more flux is required. The strips of solder can, of course, be coated with either the liquid or the grease flux, and heated prior to use.

*This soldering flux in a powdered form will also be used as the base for both the reducing and oxidizing fluxes to be discussed.*

It is important that the forms of borax and boric acid specified be adhered to, because of the variable amount of water that these materials contain when purchased.

The formula of borax glass is  $\text{Na}_2\text{B}_4\text{O}_7$ , whereas ordinary borax, either powdered or crystals, contain a considerable proportion of water, which is evident from the formula  $\text{Na}_2\text{B}_4\text{O}_7 + 10\text{H}_2\text{O}$ . Therefore the borax glass is preferable to the ordinary borax containing water, because it occupies much less space, and is therefore more convenient to handle in small crucibles. However, if ordinary borax is used, the water content must be calculated and provided for in weighing out the ingredients. The boric acid used does

contain water, as will be seen from the formula  $H_3BO_3$ , because it is more stable than the fused boric acid  $B_2O_3$ , and more readily obtainable. The silica should be pure, and in the form of a fine powder, so that it may combine readily. The grade (F. F. W.) used in inlay casting investment is quite suitable.

**Reducing Flux.**—In connection with the casting process, it is necessary to treat buttons of gold both during casting, and before recasting, with a flux that will take care of the acquired impurities. Very often there have appeared statements to the effect that a mixture of potassium nitrate and borax be used to cleanse buttons before recasting. This statement has been, in a good many cases to the author's knowledge, misunderstood. Potassium nitrate is an excellent oxidizing agent, and does remove base metals, but its use in treatment of casting buttons is contraindicated because generally, when casting gold alloys containing copper, etc., it is desired to *retain the base metal, the copper, in a reduced metallic form, and not in an oxidized form*. Consequently, if a flux is to be used, it must be of a distinctly *reducing* nature.

Reducing fluxes are used extensively in assaying and smelting operations, and their properties are well-known. In the case of casting, it is rather difficult to utilize all the benefit that may be derived from a reducing flux, on account of the difficulty of applying same to the molten metal, while it is exposed to the blow-pipe flame which *blows* instead of drives off the flux almost as fast as it is applied. Therefore, to obtain any considerable benefit from a reducing flux, it is necessary to not merely apply same while the gold is fluid under the blow-pipe, but also to sprinkle an additional amount in the manner described in the following: After placing flask on casting apparatus, place button or nuggets of gold into crucible, melt without flux until the mass of gold assumes a spheroidal form and completely covers the sprue hole. Then apply some flux by sprinkling, continue the melting until the gold is in a proper state of fluidity for casting, then remove flame, add some more flux, and instantly apply the casting pressure.

#### FORMULA FOR REDUCING FLUX.

	Parts.
Soldering flux (base) . . . . .	40.0
Borax glass . . . . .	30.0
Argol . . . . .	25.0
Animal charcoal . . . . .	5.0
Total . . . . .	100.0

Argol is the commercial term for crude potassium bitartrate  $\text{KHC}_4\text{H}_4\text{O}_6$  (cream of tartar) and has a higher reducing power than pure cream of tartar. If the latter is used, it should be increased to about 25 parts, and the soldering flux and borax glass content reduced in proportion.

A flux of this character will practically prevent the bringing into the casting, of oxidized material, and can be used to advantage in remelting and cleansing buttons of gold for recasting.

The author's procedure for this operation is as follows: After a casting is made, the residue button is placed into hydrofluoric acid for fifteen or twenty minutes, removed and melted with the blow-pipe on a charcoal block, using the reducing flux, which, in addition to reducing the oxidized copper in the button, combines with the silica, traces of which may adhere to the button. After the button is melted, and the flux used has segregated into a globule, the blow-pipe is removed and a small quantity of ammonium chloride is sprinkled on the button. As soon as the button has solidified, and while still red hot, it is plunged in dilute hydrochloric or sulphuric acid. Most of the glass formed by the flux will splinter off. If any considerable quantity adheres, it may be removed by boiling in the same acid.

**Oxidizing Flux.**—Potassium nitrate is a most excellent oxidizing agent and removes the base metals, the only objection being the strong fumes which are given off during the melting process. Although the operator should rarely attempt to do refining, it is well to have a suitable oxidizing flux that will not give off the objectionable fumes characteristic of potassium nitrate.

#### FORMULA FOR OXIDIZING FLUX.

	Parts.
Soldering flux (base) . . . . .	55.0
Potassium chlorate . . . . .	20.0
Sodium perborate . . . . .	25.0
Total . . . . .	100.0

This flux will be found useful for revivifying buttons of gold which are contaminated. It is sufficiently powerful to volatilize such impurities as tin, cadmium, bismuth, etc. It will combine with adherent investment compound and not attack copper very strongly, so that a button of gold that has been used several times and is quite sluggish and dirty, can be usually brought into good shape without difficulty.



A button treated with this flux should be cleansed in acid, as previously described, and then *remelted with the reducing flux* prior to use for casting.

In cases of refining, where a stronger action is required, the potassium chlorate and sodium perborate can be increased to obtain the same efficiency that a high percentage of potassium nitrate would give without the objectionable fumes characteristic of the latter.

It is expected that prepared flux made according to the formulæ given will be very shortly available from the supply houses. Until such time, a modification of the soldering flux formula, which also acts as a base for the reducing<sup>1</sup> and oxidizing fluxes, is given herewith for the benefit of those who have not the facilities for fusing and pulverizing the material. These ingredients make a flux which appears to work much more satisfactorily than ordinary borax or any of the secret preparations purchasable.

#### FORMULA FOR SOLDERING FLUX (SUBSTITUTE).

	Parts.
C. P. borax glass . . . . .	50.0
C. P. boric acid . . . . .	43.0
C. P. sodium silicate (dry powder) . . . . .	7.0
Total . . . . .	100.0

This is mixed thoroughly in a mortar and must be ground fine enough to pass an 80-mesh sieve.

The author trusts that his remarks upon the importance of producing castings with all the metal in a reduced form, and not in a partially-oxidized form, will be given some consideration by the reader, as this problem, on an immeasurably larger scale, has been and is one of the most important ones in the application of industrial alloys, and is being coped with successfully.

<sup>1</sup> There are a number of better-reducing agents than those suggested by the author, used industrially. They are not mentioned because of either difficulty of application under casting conditions, or on account of not being obtainable in small quantities. A study of the methods used in deoxidizing copper, brass and bronze, is suggested to those particularly interested.

TABLE IV.—MELTING POINTS OF THE NEW SERIES OF ALLOYS AND STANDARD DENTAL GOLDS.

° F.	ALLOY.	° C.
2100	*"Elastic" Gold . . . . .	1150
2975	*Plate No. 1 . . . . .	1135
1975	*Plate No. 2 . . . . .	1080
1960	Type 4 Clasp . . . . .	1070
1945	Pure Gold . . . . .	1063
1945	*Casting Gold "A" . . . . .	1063
1945	*Casting Gold "B" . . . . .	1063
1945	"Green Gold" (App. Au 80 per cent.—Ag. 20 per cent.)	1061
1900	*Casting Gold "B" . . . . .	1035
1900	Light 22-K. Plate . . . . .	1035
1860	Medium 22-K. Plate . . . . .	1015
1860	Type 3 Clasp . . . . .	1015
1825	Dark 22-K. Plate . . . . .	995
1800	*Casting Gold "C" . . . . .	980
1760	Light 20-K. Plate . . . . .	960
1735	Coin Gold (21.6-K.) . . . . .	946
1725	Type 2 Clasp . . . . .	940
1650	*Gold Solder No. 84 . . . . .	900
1625	Gold Solder for 22-K. . . . .	885
1600	Type 1 Clasp . . . . .	870
1550	*Gold Solder No. 76 . . . . .	840
1525	Gold Solder for 20-K. . . . .	820
1450	*Gold Solder No. 68 . . . . .	785
1425	Gold Solder for 18-K. . . . .	770

*The ten alloys marked " \* " constitute the new series.*

They are all uniform in color with the exception of "Elastic" gold which is similar to platinum in color and Casting Gold "A" which is similar to pure gold in color.

#### SOME OF THE APPLICATIONS OF THE NEW SERIES OF ALLOYS IN THE PEESO SYSTEM OF REMOVABLE BRIDGE-WORK.

As will be seen from the preceding table, the series of alloys offers a large range of variation in melting point, over the ordinary alloys, thus facilitating the performance of successive soldering operations.

**Construction of Bands, Floors, and Inner Caps.**—As has been previously stated, coin gold is the most suitable alloy for the construction of bands, floors, etc. It is therefore necessary to use coin gold or its equivalent in the new series of alloys. The band

should therefore be made of the No. 2 plate (M. P. 1975° F., 1080° C), and united<sup>1</sup> by soldering with the next lowest fusing alloy, namely, Casting Gold "B" (M. P. 1900° F., 1035° C.).

The floor is also prepared of No. 2 plate and soldered to the band with Casting Gold "C" (the pliers grasping the band at previously-joined portion).

The method will make, for all intents and purposes, a seamless cap. The melting point of the soldered junctions will still be considerably above that of coin gold. The tube may then be attached with the No. 84 solder.

Inner caps for telescope crowns are made in exactly the same manner. As the hardness and tenacity of the No. 2 plate is the same as that of coin gold, the same gauges of plate are to be used as with coin gold. The casting gold, if used as solder, should be of practically the same thickness as ordinary gold solder, approximate 28 gauge B & S, or preferably thinner (30 to 32 gauge).

**Outer Half Bands and Telescope Crowns.**—After completing the inner cap and tube, the floor is made of No. 2 plate, the split pin attached to it with No. 84 solder and the half band fitted and attached with 84 solder.

For telescope crowns, the outer band is made of the No. 2 plate and the joint soldered with casting gold B. The wings are made of No. 2 plate and soldered to the band with Casting Gold "C." The eusp is swaged of No. 1 plate (higher fusing than pure gold), filled with Casting Gold "C" in the same manner as a pure gold eusp is filled with coin gold, and attached to the previously-completed outer band and wings with No. 84 solder.

If the eusp is to be cast, Casting Gold "B" or "C" should be selected according to the blow-pipe used, and attached to the contoured band with No. 84 solder.

As all of the alloys of the series used in this operation are of the same color, and the No. 84 solder is actually 20-K. fine, there will be no line of demarkation evident in the finished work.

**Inlay Abutments.**—The shell for the inner inlay may be cast with Casting Gold "D" and adapted to the cavity by burnishing. The tube is then soldered and the whole completed with No. 84 solder. The outer inlay matrix can then be made, using the comparatively soft, but high-fusing plate-gold No. 1, and Casting Gold "C," instead of pure gold and coin gold.

<sup>1</sup> See Dr. Peco's method of band preparation for sweating.

**Construction of Saddles.**—The saddles, if swaged of platinum, may be reinforced with Casting Gold "B" or "C," instead of coin gold, or the saddles may be swaged of No. 1 plate (softer than No. 2) and reinforced with Casting Gold "C." If the saddles are to be cast, Casting Gold "B" or "C" should be selected according to the blow-pipe used.

**Construction of Dummies.**—In constructing the dummies (if all porcelain), the bases and dowels may be cast with either "B" or "C," and attached to the saddles with the 84 or 76 solder.

They may also be made by burnishing 34 g. pure gold backings to the prepared porcelain crowns, fitting and soldering dowels made of "Elastic" gold, to the backings (or boxes), and attaching the completed backings to the saddles with 84 or 76 solder.

---

The author cannot close without calling attention to the fact that a broad conception of the scientific principles involved in the chemical and physical behavior of the various materials utilized in connection with the construction of prosthetic restorations, is a most potent factor toward the attainment of the ideal.

He has been aided materially in arriving at the conclusions presented herein by the kindness of Mr. H. C. Ney, president of the J. M. Ney Company, who unstintingly placed at the author's command all the facilities of their extensive metallurgical works in Hartford.

He also wishes to thank Dr. Peeso particularly, for accepting this contribution for presentation under his auspices.

Since the previous printing of this work the author has completed a series of experiments with gold alloys for use in the casting of clasps. The following combination: three parts "Elastic" gold and one part No. 68 solder, known as Casting Gold "E," provides an alloy of exceptional strength and elasticity. It has given very satisfactory results in over one hundred cases, the majority of which were under close clinical observation for a period of over two years.

# INDEX.

## A

- ABUTMENTS, adjustment of saddle to,  
in extension saddle bridges, 365  
for bridges, paralleling of, 224  
preparation of, 224  
inlay, construction of, new series of  
alloys and, 467  
for removable bridges, inlay, 294  
fitting of split pin in, 298  
for anterior teeth, 294  
for molars, 301  
indications for, 294  
matrix method of, 308  
second, 299  
retaining, 252  
supporting, 252, 320  
gold fillings, 320  
cavity for, preparation of,  
321  
finishing of, 321  
impression for, 321  
inlay, 322  
adjusting of, 323  
casting of, 323  
cavity for, preparation of,  
322  
cementing of, 323  
completion of bridge with  
spur, 322  
finishing of, 323  
forming seat for spur, 322  
location of position on a  
model for spur, 322  
making of spur, 322  
shaping of spur, 322  
waxing of, 323
- Abscess, dento-alveolar, 31  
acute, treatment of, 33  
amputation of root ends in, 38  
chronic, treatment of, 37  
establishing a fistula in, 35  
locating the apex of root in, 35  
painless insertion of hypodermic  
needle in, 36
- Alloys, binary, 421  
comparative hardness of, 432  
melting points of, 429  
of gold, compounding of, 424
- Alloys, binary, and copper, melting  
points of, 425  
and palladium, melting points of,  
427  
and platinum, melting points of,  
426  
and silver, melting points of, 423  
for bands, 175  
for crowns, 175  
solders, 443  
new series of, 432  
application of, in Peeso's system  
of crown and bridge-work, 466  
construction of bands with, 466  
of dummies with, 468  
of floors with, 466  
of inlay abutments with, 467  
of inner caps with, 466  
of outer half bands with, 467  
of saddles with, 468  
of telescope crowns with, 467  
melting points of, 466  
for prosthetic castings, 435  
for telescope crowns, 252  
Weinstein's, 253, note
- All-porcelain crowns, enlarging of pulp  
canals for, 69
- Amputation of root ends in dento-  
alveolar abscess, 38
- Anatomical articulators, 144
- Anesthesia, local, in devitalization of  
pulp canals, 50  
pressure, in devitalization of pulp  
canals, 48
- Anesthetic, local, formula for, 416
- Annealing, cleansing of gold after, 170
- Anterior crowns, restoring lingual con-  
tour of, in soldered saddle bridges  
with all-porcelain crowns, 352
- teeth, attachments for, in removable  
bridges, 283  
grinding in facings of, in fixed  
bridges, 236  
inlay abutments for, 294  
locating pulp canals in, 60  
lower, taking impressions of, in  
sections, 140  
trimming of, 113  
lower, 116



- Anterior teeth, trimmings of, upper, 115
- Arch of jaw, carrying capacity and, 82
- Arsenic in devitalization of pulp canals, 44
- Articulators, 144  
 anatomical, 144  
 with face bow, 145  
 plaster, 146
- Artificial crowns, 23  
 stone, Weinstein's, for impressions, 130
- Autogenous soldering, 170
- B**
- BACKING of porcelain-faced crowns, 203  
 of Richmond crowns, 203
- Band, contouring of, in built-up shell crowns with solid cusps, 188
- Banded crowns, casting process in, 218
- Banding roots, 79
- Bands, construction of, new series of alloys and, 466  
 contouring of, in built-up shell crowns, 188  
 festooning of, use of shears in, 178  
 gold alloys for, 175
- Bases for soldered saddle bridges with all-porcelain crowns, 356
- Berry attachment for bridge-work, 320
- Bichloride solution, formula for, 416
- Bicuspid crowns, porcelain, building of, in extension saddle bridges, 369  
 teeth, lower, locating pulp canals in, 60  
 trimming of, 105  
 upper, locating pulp canals in, 59  
 trimming of, 112
- Bicuspid, cusps of, characteristics of, 180  
 lower, 184  
 upper, 183
- Binary alloys, 421  
 comparative hardness of, 432  
 melting point of, 429
- Bite, impressions and, 132
- Bleeding gums, cementing of fixed bridges and, 402
- Bridge supports, 83
- Bridge-work, conditions making for success in, 87  
 essentials of satisfactory, 24  
 loose teeth and, 28  
 pathological conditions in relation to, 28  
 putrescent pulp canals and, 29  
 pyorrhea alveolaris and, 29  
 relative strength of teeth as supports for, 81  
 vitality of pulps and, 40
- Bridge-work, where and when indicated, 83
- Bridges, dental, 222  
 abutments for, paralleling of, 224  
 preparation of, 224  
 classification of, 222  
 crowns for, selection of, 229  
 extension, 239  
 rules regarding supports for, 239  
 with saddles, 242  
 facings for, selection of, 229  
 with gold occlusal surfaces, 387  
 curving of plate in, 389  
 filling beneath the buccal plate with cement in, 397  
 investing of saddle in, 392  
 polishing of bridge in, 390  
 selection of cusps in, 388  
 soldering of body of the bridge and lingual bar in, 393  
 waxing of plate in, 389
- fixed, 231  
 for anterior teeth, grinding in facings of, 236  
 cementing of, 401  
 bleeding gums and, 402  
 cleansing before, 401  
 crown in their bases, 246  
 drying field of operation in, 402  
 out roots in, 402  
 mixing cement, 402  
 placing cement in canals, 402  
 removal of excess cement, 402
- interchangeable facings in, 237  
 investing of, 234  
 porcelain crowns with soldered base in, 242  
 soldering of, 235  
 staining occlusal surfaces in, 247  
 use of cast base in, 248  
 gold for, 433
- large, divided, 86  
 one piece, 86
- occluded with a plate, strain on, 82  
 occlusion and, 225
- porcelain, 162  
 removable, 250  
 abutments for, inlay, 294  
 fitting of split pin, 298  
 for anterior teeth, 294  
 for molars, 301  
 indications for, 294  
 matrix method of, 308  
 second, 299  
 retaining, 252  
 supporting, 252, 320  
 gold fillings, 320  
 cavity for, preparation of, 321

- Bridges, porcelain, removable, abutments for, supporting, gold fillings, finishing of, 321  
impression for, 321  
inlay, 322  
adjusting of, 323  
casting of, 323  
cavity for, preparation of, 322  
cementing of, 323  
completion of bridge with spur, 322  
finishing of, 323  
forming seat for spur, 322  
location of position on model for spur, 322  
making of spur, 322  
shaping of spur, 322  
waxing of, 323  
advantages of, 250  
attachments for, 252  
anterior teeth, 283  
Berry attachment for, 320  
cementing of, 403  
bridge in mouth, 403  
cleansing before, 403  
removal of excess cement, 403  
of wax, 403  
waxing preparatory to, 403  
fitting pin in floor of inner cap, 287  
inlays for, cementing of, 404  
cement syringe for, 404  
key and shoe attachment, 281  
McCollum attachment for, 318  
making half band, 288  
cap, 287  
of outer cap in, 312  
porcelain crowns with cast bases in, 377  
with soldered bases for molar abutments, 315  
prevention of broken crowns in, 291  
facings in, 291  
Stern attachment for, 319  
telescope crowns in, 251  
alloys for, 251  
Weinstein's, 253, note  
casting process in, 266  
making outer cap, 259  
technic of, 254  
with tube and split pin, 269  
construction of, 270  
of two or more dummies, with a single retaining abutment, 313  
tube and split pin in, reversal of ordinary method of use, 309  
value of, 251  
requisites of, 224
- Bridges, porcelain, saddle, abutments at both ends, 398  
deep, 381  
vulcanite attachments in, 386  
extension, 360  
adjustment of saddle to abutments in, 365  
to ridge in, 364  
building porcelain bicuspid crowns in, 369  
molar crowns in, 369  
connected by lingual bar, 371  
impressions for, 372  
models for, 372  
counter dies for, 361  
dies for, 361  
impression for, 361  
saddle in, 362  
in upper mouth, 374  
soldered, with all-porcelain crowns, 348  
bases for, 356  
restoring lingual contour to anterior crowns in, 352  
with anchorages at each and, 360  
temporary, 240  
Broaches, Kerr, 55  
Broken crowns in removable bridges, prevention of, 291  
facings in removable bridges, prevention of, 291  
Broken-down roots, building-up of, 154  
crowning of, 155  
Buccal plate, filling beneath, in facings with gold occlusal surface, 397  
Built-up contoured gold crown with solid gold cusps, 184  
crowns with solid gold cusps, 176  
shell crowns with solid gold cusps, 185  
Bulb syringe, 96
- ### C
- CANAL files, Kerr, 55  
Cap for porcelain or porcelain-faced crowns, removal of, 410  
inner, construction of, new series of alloys and, 466  
outer, making of, in removable bridges, 312  
Carbimine solution, preparation of, 134  
Cast base in fixed bridges, use of, 248  
porcelain crowns and, in removable bridges, 377  
Casting of plaster model, 147  
process, all-porcelain crowns with cast base, 216  
in banded crowns, 218  
casting directly on facings, 220  
drying-out flask in, 220  
heating-up flask in, 220

- Casting process in crown work, availability of, 216  
 in crowns with porcelain facings, 218  
 of gold for clasps, 468  
 for telescope crowns, 266  
 prosthetic, gold for, 435  
 of supporting inlay in removable bridge-work, 323
- Castings, fluxes for, 461  
 inlay, gold for, 436  
 formula for, 438  
 investment compounds for, 453  
 formula for, 457  
 hot or cold moulds in, 465, 466  
 prosthetic, new series of alloys and, 435
- Cavity for gold fillings in removable bridge-work, preparation of, 320  
 for supporting inlay in removable bridges, preparation of, 322
- Cement syringe, 404
- Cementing crowns in their bases in fixed bridges, 246  
 of fixed bridges, 401  
 bleeding gums and, 402  
 cleansing before, 401  
 drying field of operation in, 402  
 out roots in, 402  
 mixing cement, 402  
 placing cement in canals, 402  
 removal of excess cement, 402  
 of inlay abutments, 323  
 of inlays for removable bridges, 404  
 cement syringe for, 404  
 of removable bridges, 403  
 bridge in mouth, 403  
 cleansing before, 403  
 removal of excess cement, 403  
 of wax, 403  
 waxing preparatory to, 403
- Clasp metals, 439  
 composition of, 440  
 melting point of, 440  
 wire split pins, 334
- Clasps, gold for, casting of, 468
- Cologne solution, preparation of, 134
- Coloring of plaster impressions, formula for, 416
- Copper alloys, melting points of, 424  
 drills, making of, 355
- Counter dies for extension saddle bridges, 361
- Crown pins, enlarging of pulp canals for, 66  
 setter, 407
- Crowning of broken down roots, 155  
 preparation of models, 155, 157  
 taking impressions of, 155
- Crowns, all-porcelain, enlarging of pulp canals for, 69
- Crowns, artificial, 23  
 banded, casting process in, 218  
 bicuspid, building of, in extension saddle bridges, 369  
 broken, prevention of, in removable bridges, 291  
 built-up shell, with solid cusps, 185  
 contouring of band in, 188  
 filling cusp matrix in, 194  
 making of cusp in, 190  
 uniting cusp to band in, 196
- casting base for, with porcelain facings, 218  
 process in, availability of, 216  
 casting directly on facings, 220  
 drying-out flasks in, 220  
 heating-up flask in, 220
- cementing of, in their bases in fixed bridges, 246
- Downie, 206  
 enlarging of pulp canals for, 69  
 facing of roots for, 122  
 investing of, 207  
 soldering of, 208
- facing roots for, 121  
 porcelain crowns, 122  
 Richmond crowns, 121
- facings for, replacing of, 412  
 soldering of, 412
- for bridges, selection of, 229  
 gold for, 433  
 alloys for, 175
- half caps, 213
- jacket, for anterior abutments, 213  
 for bicuspid abutments, 215  
 as supports for bridge-work, 213
- making of, 198
- molar, building of, in extension saddle bridges, 369
- porcelain, 206  
 faced, 198  
 backing of, 203  
 investment for, 205  
 removal of cap for, 410  
 soldering of, 203  
 waxing-up of, 203  
 spatula for, 204
- facing of roots for, 122  
 fixed, with soldered bases for molars, 210  
 investing of, 207  
 removal of cap for, 410  
 soldered saddle bridges and, 348  
 bases for, 356  
 restoring lingual contour to anterior crowns in, 352
- soldering of, 208  
 with cast base, 216

Crowns, porcelain with cast base in removable bridges, 377  
 with soldered base in fixed bridges, 242  
   for molar attachments in removable bridge-work, 315  
   for teeth anterior to molars, 208  
 repairing of, 407  
   crown setter in, 407  
   removal of cap for porcelain or porcelain-faced crowns, 410  
     of post, 411  
     post-puller in, 411  
     with drill and pliers, 411  
   of shell crowns, 407  
   replacing facings, 412  
   soldering facings, 412  
 Richmond, 198  
   backing of, 203  
   enlarging of pulp canals for, 67  
   facing of roots for, 127  
   finishing of, 206  
   investment for, 205  
   soldering of, 203  
   waxing-up of, 203  
     spatula for, 204  
   setting of, with gutta percha, 405  
     with oxyphosphate of zinc, 400  
   shell, removal of, 407  
   swaged seamless, 176  
   telescope, 252  
     alloys for, 252  
       Weinstein's, 253, note  
     casting process in, 266  
     construction of, new series of alloys and, 467  
     making outer cap for, 259  
     technic of, 254  
     with tube and split pin, 269  
       construction of, 281  
     temporary, quickly made, 221  
     window, 213  
 Curving of plate in facings with gold occlusal surface, 389  
 Cusps of bicuspid teeth, characteristics of, 180  
   of lower, 184  
   of upper, 183  
   of molar teeth, characteristics of, 180  
     lower first molar, 182  
       second molar, 183  
       third molar, 183  
     upper first molar, 180  
       second molar, 180  
       third molar, 181  
   selection of, in facings with gold occlusal surface, 388  
   solid gold, built-up contoured gold crown and, 184  
   shell crowns and, 185

## D

DENSITIES of metals, 420  
 Dental bridges, 222. See Bridges, dental.  
   metallurgy, 418  
 Dento-alveolar abscess, 31  
   acute, treatment of, 33  
   amputation of root end in, 38  
   chronic, treatment of, 37  
   establishing a fistula in, 35  
   locating the apex of root in, 35  
   painless insertion of hypodermic needle in, 36  
 Devitalization of pulp canals, 44  
   arsenic in, 44  
   discoloring of sound teeth after, 43  
   heroic method of, 46  
   local anesthesia and, 50  
   pressure anesthesia and, 48  
   treatment of inflamed and aching pulps and, 47  
 Dies for extension saddle bridges, 361  
 Donaldson's pulp canal cleansers, 62  
 Downie crowns, 206  
   enlarging of pulp canals for, 69  
   facing of roots for, 122  
   investing of, 207  
   soldering of, 208  
 Dunnies, construction of, new series of alloys and, 468

## E

ENLARGING of pulp canals, determining length of root in, 66  
   for all-porcelain crowns, 69  
   for crown pins, 66  
   for Downie crowns, 69  
   for Richmond crowns, 67  
 Essentials of satisfactory bridge-work, 24  
 Evans' root drier, 402  
 Extension bridges, 239  
   rules regarding supports for, 239  
   with saddles, 242  
   saddle bridges, 360  
     adjustment of saddle to abutments in, 365  
     to ridge in, 364  
   building porcelain bicuspid crowns in, 369  
     molar crowns in, 369  
   connected by lingual bar, 371  
   impressions for, 372  
   model for, 372  
   counter dies for, 361  
   dies for, 361  
   impression for, 361  
   saddle for, 362

- Extension saddle bridges in upper mouth, 374  
with anchorages at each end, 360
- F**
- FACING roots for crowns, 121  
Downie crowns, 122  
porcelain crowns, 122  
Richmond crowns, 121
- Facings of anterior teeth, grinding in of, in fixed bridges, 236  
of bridges, selection of, 229  
broken, prevention of, in removable bridges, 291  
interchangeable, in fixed bridges, 237  
with gold occlusal surface, 387  
curving of plates in, 389  
filling beneath buccal plates with cement in, 397  
investing of saddle in, 392  
polishing of bridge in, 398  
selection of cusps in, 388  
soldering of body of bridge and lingual plate in, 393  
waxing of plates in, 389
- Festooning of bands, use of shears in, 178
- Filing of split pins, 337
- Filling of pulp canals, 70  
gutta-percha points in, 70
- Finishing of gold fillings in removable bridge-work, 321  
of inlay abutments, 323  
of porcelain-faced crowns, 206  
of Richmond crowns, 206  
of split pins on lathe, 345
- Fistula, establishing of, in dento-alveolar abscess, 35
- Fixed bridges, 231  
cementing of, 401  
bleeding gums and, 402  
cleansing before, 401  
crowns in their bases in, 246  
drying field of operation in, 402  
out roots in, 402  
mixing cement, 402  
placing cement in canals, 402  
removal of excess cement, 402  
for anterior teeth, grinding in facings of, 236  
interchangeable facings in, 237  
investing of, 234  
porcelain crowns with soldered base in, 242  
soldering of, 234  
staining occlusal surfaces of, 247  
use of cast base in, 248  
porcelain crowns, with soldered bases for molars, 210
- Floors, construction of, new series of alloys and, 466
- Fluxes, 461  
for casting, 461  
for soldering, 461  
formula for, 461, 465  
oxidizing of, 464  
formula for, 464  
reduction of, 463  
formula for, 463
- Form of arch, carrying capacity and, 82
- Fractured roots, 77
- Fusible metal, Richmond's formula for, 417
- G**
- GATES-GLIDDEN nerve-canal drill, 67
- Gold alloys, 418  
compounding of, 444  
for bands, 175  
for crowns, 175  
melting points of, 423, 424, 425  
cleansing of, after annealing, 174  
after soldering, 174  
fillings in removable bridge-work, 320  
cavity for, preparation of, 321  
finishing of, 321  
impressions for, 321  
for bridge-work, 433  
for clasps, casting of, 468  
for crowns, 432  
for inlay casting, 436  
formula for, 438  
for plate work, 433  
for prosthetic castings, 435  
iridium alloys and, 430  
occlusal surface, facings with, 387  
osmium alloys and, 430  
palladium alloys and, 427  
platinized, split pins, 334  
platinum alloys and, 425  
rhodium alloys and, 431  
silver alloy and, 421  
solders, 442  
alloys for, 443
- Grinding in facings of anterior teeth in fixed bridges, 236
- Gums, bleeding, cementing of fixed bridges and, 402
- Gutta-percha points in filling of pulp canals, 70  
setting crowns with, 405
- H**
- HALF band for removable bridges, making of, 288  
outer, construction of, new series of alloys and, 467  
crowns, 213



Half crowns for removable bridges,  
making of, 287  
Hard, sticky wax, formula for, 416  
Heroic method of devitalization of pulp  
canals, 46  
How's steatite slab, 405

## I

IMPRESSIONS, 130  
bite and, 132  
of broken-down roots, taking of, 155  
for extension saddle bridges, 361  
for gold fillings in removable bridges,  
321  
for lingual bar connections in exten-  
sion saddle bridges, 372  
plasters, 130, 134  
coloring of, 134  
carmine solution, preparation  
of, 134  
formula for, 416  
flavoring of, 134  
cologne solution, preparation of,  
134  
in sections, 140  
dovetailed spaces in, 142  
of lower anterior teeth, 140  
of teeth lingually inclined, 141  
undercuts in, 142  
separation of, from model, 151  
squash bite, with abutments in place,  
136  
securing proper closure, 136  
separating medium, 130  
treatment of impression, 137  
Weinstein's artificial stone for, 130  
Inlay abutments, 294, 322  
adjusting of, 323  
casting of, 323  
cavity for, preparation of, 322  
cementing of, 323  
completion of bridge with spur,  
322  
construction of, new series of alloys  
and, 467  
finishing of, 323  
fitting of split pin in, 298  
for anterior teeth, 294  
for molars, 301  
forming seats for spur, 322  
indications for, 294  
location of position on model for  
spur, 322  
making of spur, 322  
matrix method of, 301  
second, 299  
shaping of spur, 322  
waxing of, 323  
casting, gold for, 436  
formula for, 438

Inlay casting for removable bridges,  
cementing of, 404  
Inner caps, construction of, new series  
of allows and, 466  
Interchangeable facings in fixed bridges,  
237  
Investing of Downie crowns, 207  
of fixed bridges, 234  
of porcelain crowns, 207  
of saddles in facings with gold occlu-  
sal surface, 392  
Investment compounds for casting, 453  
formula for, 457  
hot or cold mould in, 455, 456  
for soldering, 446  
formula for, 452  
materials, compounding of, 458  
of porcelain-faced crowns, 205  
of Richmond crowns, 205  
Iridio-platinum wire split pins, 333  
Iridium alloys and gold, 430

## J

JACKET crowns for anterior abutments,  
213  
for bicuspid abutments, 215  
as supports from bridge-work, 213  
Jaw, arch of, carrying capacity and, 82  
lower, teeth of, shape of, 91  
strength of, as abutments, 82  
upper, extension saddle bridges in,  
374  
teeth of, shape of, 88  
strength of, as abutments, 81

## K

KERR broaches, 55  
canal files, 55  
Key and shoe attachment in removable  
bridges, 281  
Kirk's dentimeter, 198

## L

LINGUAL bar connections of extension  
saddle bridges, 371  
impressions for, 372  
model for, 372  
Local anesthesia in devitalization of  
pulp canals, 50  
anesthetics, formula for, 416  
Loose teeth, bridge-work and, 28  
Lower bicuspid, locating pulp canals  
in, 60  
trimming of, 105  
jaw, teeth of, shape of, 91  
strength of, as abutments, 82

- Lower molars, locating pulp canals in, 57  
 trimming of, 93, 98  
 buccal side, 102  
 distal side, 100  
 lingual side, 101  
 mesial side, 99
- M**
- McCOLLUM attachment for removable bridge-work, 318  
 Mandrel process, of making tubes, 324  
 Matrix method of making inlay abutments, 308  
 Melting points of binary alloys, 429  
   of elasp metals, 440  
   of copper alloy, 424  
   of gold alloys, 423, 424, 425  
     and copper, 425  
     and palladium, 427  
     and platinum, 426  
     and silver, 423  
   of metals, table of, 420  
   of new series of alloys, 466  
   of standard dental goods, 466  
 Metal, fusible, Richmond's formula for, 417  
 Metallurgy, dental, 418  
 Metals, clasp, 439  
   composition of, 440  
   melting point of, 440  
   densities of, table of, 420  
   melting points of, table of, 420  
 Mixing of oxyphosphate of zinc, 400  
 Models, 130  
   of broken-down roots, preparation of, 155, 157  
   drying out of, 152  
   for lingual bar connections in extension saddle bridges, 372  
   hardening of, 153  
   plaster for, 130  
     casting of, 147  
     separation of impression from, 151  
     trimming of, 152  
     working, preparation of, 151  
 Molar crowns, porcelain, building of, in extension saddle bridges, 369  
   first, of lower jaw, shape of, 91  
   teeth, opening into pulp canals of, 54  
 Molars, cusps of, characteristics of, 180  
   lower first, 182  
     second, 183  
     third, 183  
   upper first, 180  
     second, 180  
     third, 181  
   inlay abutments for, 301  
   lower, locating pulp canals in, 57  
     trimming of, 93, 98
- Molars, lower, trimming of, buccal side, 102  
 distal side, 100  
 lingual side, 101  
 mesial side, 99  
 upper, locating pulp canals in, 55  
   trimming of, 107  
     distal side, 109  
     disto-buccal side, 109  
     mesial side, 108  
     mesio-buccal side, 110  
     palatal side, 111
- N**
- NERVE-CANAL drill, 67
- O**
- OCCCLUSAL surfaces of fixed bridges, staining of, 247  
 Occlusion, dental bridges and 225  
 Orthodontia and prosthodontia, relation of, 163  
 Osmium alloys, gold and, 430  
 Outer half bands, construction of, new series of alloys and, 467  
 Oxidizing of fluxes, 464  
   formula for, 464  
 Oxyphosphate of zinc, 400  
   cementing fixed bridges with, 401  
   characteristics of, 400  
   mixing of, 400  
     spatula for, 401  
   setting crowns with, 400
- P**
- PALLADIUM alloys and gold, 427  
 melting points of, 427  
 Peeso's method of repairing broken facings, 407  
 root reamer, 67  
 system of crown and bridge-work, application of new series of alloys to, 466  
 Perforated pulp canals, treatment of, 75  
 root, treatment of, 74  
 Pin, fitting of, in floor of outer cap of removable bridge, 287  
 Plaster articulators, 146  
   impressions, 130, 134  
   coloring of, 134  
   carmine solution in, preparation of, 134  
   formula for, 416  
   flavoring of, 134  
   cologne solution in, preparation of, 134

Plaster model, casting of, 147  
 Plate work, gold for, 433  
 Platinized gold split pins, 334  
 Platinum alloys and gold, 425  
   melting points of, 426  
 Porcelain bridges, 162  
   crowns, 206  
     bicuspid, building of, in extension  
       saddle bridges, 369  
       facing of roots for, 122  
       fixed, with soldered bases for  
         molars, 210  
       investing of, 207  
       molar, building of, in extension  
         saddle bridges, 369  
       soldered saddle bridges and, 348  
         bases for, 356  
         restoring lingual contour to  
         anterior crowns in, 352  
       soldering of, 208  
       with cast base, 216  
         in removable bridges, 377  
       with soldered base in fixed bridges,  
         242  
       for molar attachments in re-  
       movable bridge-work, 315  
       for teeth anterior to molars,  
         208  
 Porcelain-faced crowns, 198  
   backing of, 203  
   finishing of, 206  
   investment for, 205  
   soldering of, 203  
   waxing-up of, 203  
   spatula for, 204  
 Post-puller, 411  
 Powdered silex, properties of, 450  
 Pressure anesthesia in devitalization of  
   pulp canals, 48  
 Prosthesis, 170  
 Prosthetic castings, gold for, 435  
   new series of alloys and, 435  
 Prosthodontia and orthodontia, rela-  
   tion of, 163  
 Pulp canal cleansers, 62  
   cleansing of, 62  
   devitalization of, 44  
     arsenic in, 44  
     discoloring of sound teeth after,  
       43  
     heroic method of, 46  
     local anesthesia and, 50  
     pressure anesthesia and, 48  
     treatment of inflamed and ach-  
     ing pulp and, 47  
   enlarging of, determining length of  
     root in, 66  
     for all-porcelain crowns, 69  
     for crown pins, 66  
     for Downie crowns, 69  
     for Richmond crowns, 67  
   filling of, 70

Pulp canal, filling of, gutta-percha  
   points in, 70  
   infection of, treatment of, 31  
   locating of, in anterior teeth, 60  
     in lower bicuspids, 60  
       molars, 57  
     in upper bicuspids, 59  
       molars, 55  
   opening into, for molar teeth, 54  
   perforated, treatment of, 75  
   position of, 53  
   putrescent, bridge-work and, 29  
   roentgen-rays and, 60  
   sterilization of, with formalin, 30  
   with enlarged foramen, filling of, 72  
   removal of, 62  
   sensitiveness after, 66  
   tenderness after, 66  
   vitality of, bridge-work and, 40  
 Putrescent pulp canals, cause of, 29  
 Pyorrhea alveolaris, bridge-work and,  
   29  
   cause of, 29

## R

REMOVABLE bridges, 250  
   abutments for, inlay, 294  
     fitting of split pin in, 298  
     for anterior teeth, 294  
     for molars, 301  
     indications for, 294  
     matrix method of, 308  
     second, 299  
   retaining, 252  
   supporting, 252, 320  
     gold fillings, 320  
       cavity for, preparation of,  
       321  
       finishing of, 321  
       impression for, 321  
   inlay, 322  
     adjusting of, 323  
     casting of, 323  
     cavity for, preparation of,  
       322  
     cementing of, 323  
     completion of bridge with  
       spur, 322  
     finishing of, 323  
     forming seat for spur, 322  
     location of position on  
       model for spur, 322  
     making of spur, 322  
     shaping of spur, 322  
     waxing of, 323  
   advantages of, 250  
   attachments for, 252  
     for anterior teeth, 283  
   Berry attachment for, 320  
   cementing of, 403

- Removable bridges, cementing of  
     bridge in mouth, 403  
     cleansing before, 403  
     removal of excess cement, 403  
     of wax, 403  
     waxing preparatory to, 403  
     fitting pin in floor of outer cap, 287  
     inlays for, cementing of, 404  
     cement syringe for, 404  
     key and shoe attachment in, 281  
     McCollum attachment for, 318  
     making half band for, 288  
         cap for, 287  
         of outer cap in, 312  
     porcelain crowns with cast bases  
         in, 377  
         with soldered bases for molar  
         abutments, 315  
     prevention of broken crowns in, 291  
         facings in, 291  
     Stern attachment for, 319  
     telescope crowns in, 252  
         alloys for, 251  
         Weinstein's, 253, note  
         casting process in, 266  
         making outer cap, 259  
         technic of, 254  
         with tube and split pin, 269  
             construction of, 281  
     tube and split pin in, reversal of  
         ordinary method of use, 309  
     of two or more dummies, with a  
         single retaining abutment, 313  
     value of, 251
- Removal of pulp, 62  
     sensitiveness after, 66  
     tenderness after, 66
- Retaining abutments for removable  
     bridges, 252  
     media, 400
- Rhodium alloys and gold, 431
- Richmond crowns, 198  
     backing of, 203  
     enlarging of pulp canals for, 67  
     facing of roots for, 121  
     finishing of, 206  
     investment for, 205  
     soldering of, 203  
     waxing-up of, 203  
         spatula for, 204
- Richmond's formula for fusible metal,  
     417
- Roentgen-rays, pulp canal work and, 60
- Root drier, Evans, 402  
     reamers, 67
- Roots, banding of, 79  
     broken down, building-up of, 154  
         crowning of, 155  
         preparation of models of, 155,  
             157  
         taking impressions of, 155  
     facing of, for crowns, 121
- Roots, facing of, for crowns, Downie  
     crowns, 122  
     porcelain crowns, 122  
     Richmond crowns, 121  
     fractured, 77  
     perforated, treatment of, 74
- S**
- SADDLE bridges, abutments at both  
     ends, 398  
     deep, 381  
     vulcanite attachments in, 386  
     extension, 360  
         adjustment of saddle to abut-  
         ments in, 365  
         to ridge in, 364  
     building porcelain bicuspid  
         crowns in, 369  
         molar crowns in, 369  
     connected by lingual bar, 371  
         impressions for, 372  
         model for, 372  
     counter dies for, 361  
     dies for, 361  
     impression for, 361  
     saddle in, 362  
     in upper mouth, 374  
     with anchorages at each end, 360  
     soldered, with all-porcelain crowns,  
         348  
         bases for, 356  
         restoring lingual contours  
         to anterior crowns in, 352
- Saddles, construction of, new series of  
     alloys and, 468  
     extension bridges and, 242  
     investing of, in facings with gold oc-  
     clusal surface, 392
- Shell crowns, removal of, 407
- Silex, powdered, properties of, 450
- Silver alloys and gold, 421
- Soldered saddle bridges with all-porcel-  
     lain crowns, 348  
     bases for, 356  
     restoring lingual contour to  
     anterior crowns, 352
- Soldering, autogenous, 170  
     cleansing of gold after, 174  
     of Downie crowns, 208  
     of facings for crowns, 412  
     of fixed bridges, 234  
     fluid, formula for, 417  
     fluxes for, 461  
         formula for, 461, 465  
     of porcelain crowns, 208  
     of porcelain-faced crowns, 205  
     of Richmond crowns, 205
- Solders, formula for, 416  
     gold, alloys of, 443

Spatula for mixing oxyphosphate of zinc, 401  
 Split pins, 333  
   clasp wire, 334  
   filing of, 337  
   finishing of, on lathe, 345  
   fitting of, in inlay abutments, 298  
   iridio-platinum wire, 333  
   platinized gold, 334  
   in removable bridges, reversal of ordinary method of use of, 309  
   telescope crowns and, 269  
   Weinstein's device for making, 342  
 Squash bite impressions, with abutments in place, 136  
   securing proper closure in, 136  
   separating medium, 139  
   treatment of impression, 137  
 Staining occlusal surfaces of fixed bridges, 247  
 Stern attachment for removable bridge-work, 319  
 Sticky wax, formula for, 416  
 Supporting abutments for removable bridges, 252  
 Supports for extension bridges, rules regarding, 239  
 Swaged seamless crowns, 176  
 Sweating process, 170  
 Syringe, cement, 404

## T

TEETH, anterior, locating pulp canals in, 60  
   bicuspid, lower, locating pulp canals in, 60  
     upper, locating pulp canals in, 59  
   loose, bridge-work and, 28  
   of lower jaw, shape of, 91  
     first molar, 91  
     strength of, as abutments, 82  
   molar, lower, locating pulp canals in, 55  
     opening into pulp canals of, 54  
     upper, locating pulp canals in, 55  
   relative strength of, as supports for bridge-work, 81  
   sound, discoloring of, after devitalization of pulp, 43  
   trimming of, 92  
     anterior, 113  
       lower, 116  
       upper, 115  
     bicuspids, lower, 105  
       upper, 112  
     molars, lower, 93, 98  
       upper, 107  
   of upper jaw, shape of, 88  
     strength of, as abutments, 81  
 Telescope crowns, 252

Telescope crowns, alloys for, 252  
   Weinstein's, 253, note  
   casting process in, 266  
   construction of, new series of alloys and, 467  
   making outer cap for, 259  
   technic of, 254  
   with tube and split pin, 269  
     construction of, 281  
 Temporary bridges, 240  
   crowns, 221  
 Theseine, formula for, 416  
 Trimming of teeth, 92  
 Tube in removable bridges, reversal of ordinary method of use of, 309  
   telescope crown and, 269  
 Tubes, 324, 326  
   making of, by mandrel process, 324  
   mandrels in, 324

## U

UPPER bicuspid, locating pulp canals in, 59  
   trimming of, 112  
   jaw, extension saddle bridges in, 374  
   teeth of, shape of, 88  
     strength of, as abutments, 81  
   molars, locating pulp canals in, 55  
     trimming of, 107  
       distal side, 109  
       disto-buccal side, 109  
       mesial side, 108  
       mesio-buccal side, 110  
       palatal side, 111

## V

VULCANITE attachments in saddle bridges, 386

## W

WAX, hard, sticky, formula for, 416  
 Waxing of inlay abutments, 323  
   of plate in facings with occlusal surface, 389  
   preparatory to cementing removable bridges, 403  
 Waxing-up of porcelain-faced crowns, 203  
   spatula for, 204  
   of Richmond crowns, 203  
   spatula for, 204  
 Weinstein's alloys for telescope crowns, 253, note  
   artificial stone for impressions, 130  
   filling impressions, 131



Weinstein's artificial stone for impressions, preparation of impressions, 131  
proportions of, 131  
separating impression, 132  
device for making split pins, 342  
Window crowns, 213  
Working model, preparation of, 151

**Z**

ZINC, oxyphosphate of, 400  
cementing fixed bridges with, 401  
characteristics of, 400  
mixing of, 400  
spatula for, 401  
setting crowns with, 400





1874

WU 515 P375c 1924

51211310R



NLM 05267118 9

NATIONAL LIBRARY OF MEDICINE QP